

[Manuals.plus](#) /

› [Equity by La Crosse](#) /

› Equity by La Crosse 30220 Desktop Temperature Station User Manual

Equity by La Crosse 30220

Equity by La Crosse 30220 Desktop Temperature Station

INSTRUCTION MANUAL

Introduction

The Equity by La Crosse 30220 Desktop Temperature Station is designed to provide essential environmental information at a glance. This device displays indoor temperature and humidity, offers a weather forecast, and tracks minimum/maximum records. It also features a clock with date and weekday display, an alarm with snooze function, and a bright backlight for enhanced visibility. This manual provides detailed instructions for setup, operation, and maintenance.

Package Contents

- Equity by La Crosse 30220 Desktop Temperature Station
- User Manual

Features

- Indoor Temperature display (°F/°C)
- Indoor Humidity display
- Weather Forecast icons
- Records Minimum/Maximum temperature and humidity
- Time, Date, and Weekday display
- Alarm with Snooze function
- Bright Blue Backlight on demand
- Desktop or Wall-mount option

Product Overview

Familiarize yourself with the display and control buttons of your temperature station.



This image shows the Equity by La Crosse 30220 Desktop Temperature Station. The display shows the time as 12:34, the day as Wednesday, a sunny forecast icon, 42% humidity, and a temperature of 76.7°F. Below the display, buttons for MODE, MAX/MIN, SNOOZE, UP, DOWN, and LIGHT are visible.

Display Segments:

- **Time:** Large digital display.
- **Weekday/Date:** Indicates current day and date.
- **Forecast:** Icons representing weather conditions (e.g., sunny, cloudy, rainy).
- **Humidity:** Percentage of indoor humidity.
- **Temperature:** Indoor temperature in Fahrenheit or Celsius.

- **Temperature Trend:** Bar graph indicating temperature changes over time.

Control Buttons:

- **MODE:** Used to switch between display modes and enter setting modes.
- **MAX/MIN:** Displays maximum and minimum recorded values.
- **SNZ (Snooze):** Activates the snooze function for the alarm.
- **UP:** Adjusts values upwards during settings, or changes display options.
- **DOWN:** Adjusts values downwards during settings, or changes display options.
- **LIGHT:** Activates the backlight.

Setup

1. Battery Installation

1. Locate the battery compartment on the back of the unit.
2. Remove the battery compartment cover.
3. Insert 2 new AAA batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.
5. The unit will power on and display default settings.

2. Initial Settings

After battery installation, the unit will typically enter a time setting mode automatically. If not, press and hold the **MODE** button to enter settings.

Operating Instructions

Setting Time and Date

1. Press and hold the **MODE** button for approximately 3 seconds until the time display flashes.
2. Use the **UP** or **DOWN** buttons to adjust the flashing value (e.g., hour).
3. Press the **MODE** button to confirm the setting and move to the next value (e.g., minute, year, month, day).
4. Repeat steps 2 and 3 until all time and date settings are complete.
5. Press **MODE** again to exit the setting mode.

Setting the Alarm

1. From the normal time display, press the **MODE** button once to display the alarm time.
2. Press and hold the **MODE** button for 3 seconds. The alarm hour will flash.
3. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
4. Press **MODE** to confirm and set the alarm minute.
5. Use the **UP** or **DOWN** buttons to set the desired alarm minute.
6. Press **MODE** to confirm and exit alarm setting.
7. To activate or deactivate the alarm, press the **UP** button while the alarm time is displayed. An alarm icon will appear or disappear.

Using the Snooze Function

When the alarm sounds, press the **SNZ** button to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes, depending on the model's default setting).

Viewing Min/Max Records

Press the **MAX/MIN** button to cycle through the maximum recorded temperature, minimum recorded temperature, maximum recorded humidity, and minimum recorded humidity. The display will show 'MAX' or 'MIN' next to the values. To clear the records, press and hold the **MAX/MIN** button while viewing the records.

Temperature Unit Selection (°F/°C)

Press the **DOWN** button to switch between Fahrenheit (°F) and Celsius (°C) temperature display.

Activating the Backlight

Press the **LIGHT** button to illuminate the display for a few seconds. This is useful in low-light conditions.

Weather Forecast

The station predicts weather conditions for the next 12-24 hours based on atmospheric pressure changes. The forecast icons include:

- Sunny
- Partly Cloudy
- Cloudy
- Rainy

The temperature trend graph provides a visual representation of temperature changes over a short period, helping to indicate rising or falling temperatures.

Maintenance

Cleaning

Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the display or casing.

Battery Replacement

When the display becomes dim or functions irregularly, replace the batteries. Always replace both AAA batteries at the same time with new ones. Dispose of old batteries according to local regulations.

Troubleshooting

Problem	Solution
No display or dim display	Check battery polarity. Replace batteries with new AAA batteries.
Inaccurate temperature/humidity	Ensure the unit is placed away from direct sunlight, heat sources, or drafts. Allow 20-30 minutes for readings to stabilize after setup or relocation.
Weather forecast is incorrect	The weather forecast is an estimation based on atmospheric pressure changes and may not always match local weather services. It is a general indicator.
Alarm not sounding	Ensure the alarm is activated (alarm icon visible on display). Check battery level.

Problem	Solution
Buttons not responding	Remove batteries, wait 1 minute, then reinsert them to perform a soft reset.

Specifications

- **Model:** 30220
- **Power Source:** 2 x AAA batteries (not included)
- **Display Type:** LCD
- **Material:** Plastic
- **Color:** Black
- **Item Weight:** 68 g
- **Special Features:** Alarm, Backlight, Min/Max Records, Weather Forecast

Warranty Information

This Equity by La Crosse product is covered by a 2-year warranty from the date of purchase. This warranty covers manufacturing defects in materials and workmanship. It does not cover damage caused by misuse, accident, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Support

For further assistance or inquiries regarding your Equity by La Crosse 30220 Desktop Temperature Station, please refer to the manufacturer's official website or contact their customer support channels. Contact information can typically be found on the product packaging or the brand's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question