

BaBylissPRO BAB2675TTE

BaByliss PRO BAB2675TTE Titanium Tourmaline Programmable Curling Iron 19mm User Manual

Model: BAB2675TTE

INTRODUCTION

This manual provides instructions for the safe and effective use of your BaByliss PRO BAB2675TTE Titanium Tourmaline Programmable Curling Iron. Please read all instructions carefully before use and retain this manual for future reference. Proper use ensures optimal performance and extends the life of your appliance.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
- This appliance should never be left unattended when plugged in.
- Do not pull, twist, or wrap line cord around appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated appliance directly on any surface while it is hot or plugged in.

PRODUCT OVERVIEW

The BaByliss PRO BAB2675TTE is a professional 19mm curling iron designed for creating lasting curls and waves. It features advanced Titanium-Tourmaline technology for even heat distribution and enhanced hair protection. The insulated tip provides a safe grip during styling, and the ergonomic handle ensures comfortable use.



Image: BaByliss PRO BAB2675TTE 19mm Titanium Tourmaline Programmable Curling Iron, showcasing its barrel, handle, and controls.

Key Features:

- **Titanium-Tourmaline Coating:** Provides superior heat conductivity, even temperature, and reduces static for smooth, shiny results.
- **19mm Barrel:** Ideal for creating tight to medium curls.
- **Programmable Temperature Settings:** Allows selection of desired heat level for various hair types.
- **Insulated Tip:** Ensures safe handling during styling.
- **Ergonomic Handle:** Designed for comfortable and secure grip.
- **Swivel Cord:** Prevents tangling and offers flexibility during use.

SETUP

1. **Unpack:** Carefully remove the curling iron from its packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if the cord or plug is damaged.
3. **Placement:** Place the curling iron on a heat-resistant, flat surface away from water.

4. **Plug In:** Insert the power plug into a suitable electrical outlet (127 Volts). Ensure your hands are dry before plugging in.

OPERATING INSTRUCTIONS

Before You Begin:

- Ensure hair is clean, dry, and tangle-free.
- Apply a heat protectant spray to your hair.
- Divide hair into manageable sections.

Curling Process:

1. **Power On:** Plug in the curling iron. The indicator light will illuminate.
2. **Select Temperature:** Use the temperature control to select your desired heat setting. The appliance offers 2 heat settings. Start with a lower setting for fine or damaged hair and increase as needed for thicker or coarser hair. Allow a few moments for the iron to reach the selected temperature.
3. **Section Hair:** Take a small section of hair, typically 1-2 inches wide.
4. **Position Iron:** Open the clamp and place the hair section between the barrel and the clamp, starting near the roots or mid-shaft, depending on the desired curl type. Close the clamp gently.
5. **Wrap Hair:** Carefully wrap the hair around the barrel, away from your face, ensuring the ends are securely held by the clamp.
6. **Hold:** Hold the curling iron in place for 5-10 seconds. The exact time depends on your hair type and the desired curl intensity. Do not hold for too long to avoid heat damage.
7. **Release:** Open the clamp and gently release the curled section of hair.
8. **Repeat:** Continue this process for all sections of your hair.
9. **Cool Down:** Allow curls to cool completely before styling or brushing to set the curl.
10. **Power Off:** After use, unplug the curling iron from the power outlet.

MAINTENANCE

Cleaning:

- Always ensure the appliance is unplugged and completely cool before cleaning.
- Wipe the barrel and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Never immerse the appliance in water or any other liquid.

Storage:

- Store the appliance in a cool, dry place.
- Do not wrap the cord around the appliance. Allow the cord to hang freely or coil it loosely.
- Keep out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in correctly. Power outlet is not working. Appliance is faulty.	Ensure the plug is fully inserted. Test the outlet with another appliance. If still not working, contact customer support.
Curls do not hold.	Temperature setting too low. Hair section too large. Hair not held long enough. Curls brushed out too soon.	Increase temperature. Use smaller hair sections. Hold hair on barrel for a longer duration. Allow curls to cool completely before styling.
Hair gets snagged.	Hair is tangled. Hair not properly placed in clamp.	Ensure hair is completely detangled before curling. Carefully place hair in the clamp, avoiding any loose strands.

SPECIFICATIONS

- **Model Number:** BAB2675TTE
- **Brand:** BaBylissPRO
- **Barrel Diameter:** 19 mm
- **Material:** Titanium-Tourmaline
- **Power:** 700 Watts
- **Voltage:** 127 Volts
- **Temperature Settings:** 2 (Programmable)
- **Dimensions (L x W x H):** 6 x 11 x 20.3 cm
- **Weight:** 460 grams
- **Power Source:** Corded Electric
- **Recommended Hair Type:** All

WARRANTY AND SUPPORT

This BaByliss PRO appliance is manufactured to the highest quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official BaByliss PRO website. For technical support, service, or replacement parts, please contact your local authorized BaByliss PRO distributor or customer service center. Keep your proof of purchase for warranty claims.