



[Manuals.plus](#) /

> [Rhythm Clocks](#) /

> Rhythm Clocks Tuscany II Wooden Musical Mantel Clock User Manual CRJ733UR06

Rhythm Clocks CRJ733UR06

Rhythm Clocks Tuscany II Wooden Musical Mantel Clock Instruction Manual

Model: CRJ733UR06

[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Overview](#) [Package](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. OVERVIEW

This manual provides instructions for the Rhythm Clocks Tuscany II Wooden Musical Mantel Clock, model CRJ733UR06. This battery-operated quartz clock features a wooden casing with brushed gold accents, offering both timekeeping and musical chimes. It includes a selection of melodies, an hourly Westminster chime, and an automatic night shut-off function.



Figure 1: The Rhythm Clocks Tuscany II Wooden Musical Mantel Clock. This image displays the front view of the clock, highlighting its wooden finish, classic dial with Roman numerals, and the decorative pendulum visible at the base.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Rhythm Clocks Tuscany II Musical Mantel Clock
- 2 x C Batteries
- Instruction Manual (this document)

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert the two (2) C batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

3.2. Initial Time Setting

1. Turn the time setting knob, usually located on the back or side of the clock mechanism, to set the correct time.
2. Ensure the minute hand is aligned with the hour hand when setting.
3. Allow a few minutes for the clock to synchronize and begin accurate timekeeping.

Note: If the chimes do not match the time after setting, refer to the "Troubleshooting" section for adjustment instructions.

4. OPERATING INSTRUCTIONS

4.1. Melody and Chime Selection

The clock offers multiple chime and melody options. A selection switch or button, typically located on the back or side of the clock, allows you to choose from the following modes:

- **16 Well-Known Melodies:** Plays one of 16 different melodies on the hour.
- **Hourly Westminster Chime:** Plays the traditional Westminster chime on the hour.
- **4x4 Quarterly Chime:** Plays a partial Westminster chime every quarter hour, and the full Westminster chime on the hour.
- **3 Christmas Melodies:** Plays one of 3 Christmas-themed melodies on the hour.

Refer to the specific markings on your clock's selection switch for the exact options and their positions.

4.2. Volume Control

The clock features an adjustable volume control for the chimes and melodies. Locate the volume dial or slider on the back or side of the clock. Turn or slide it to increase or decrease the sound level to your preference.

4.3. Automatic Night Shut-off

This feature automatically silences the chimes and melodies during nighttime hours (typically from 11:00 PM to 5:45 AM) to prevent disturbance. This function is usually activated by a specific setting on the chime selection switch or a dedicated switch. Consult your clock's markings for activation.

4.4. Chime On/Off Switch

A dedicated On/Off switch for the chimes and melodies is provided, allowing you to completely silence the musical functions at any time, regardless of the automatic night shut-off setting.

5. MAINTENANCE

5.1. Battery Replacement

When the clock's timekeeping becomes inaccurate or the chimes weaken, it is time to replace the batteries. Follow the steps for battery installation in Section 3.1. Always use fresh C batteries.

5.2. Cleaning

To clean the clock, gently wipe the wooden casing with a soft, dry cloth. For the clock face, use a soft, lint-free cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the finish and internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock not running or running slowly.	Dead or weak batteries.	Replace with fresh C batteries. Ensure correct polarity.
Chimes not sounding.	Chime switch is OFF; Automatic night shut-off is active; Weak batteries.	Check the chime On/Off switch. Verify the time is outside the night shut-off period. Replace batteries.
Chimes do not match the time displayed.	Synchronization issue after time setting.	<ol style="list-style-type: none"> 1. Advance the time manually to 12:00. 2. Allow the clock to chime. 3. If the chime count is incorrect, continue advancing the time by full hours until the chime count matches the hour. 4. Once synchronized, set the clock to the correct time.
Sound quality is poor or distorted.	Low battery power; Speaker obstruction or damage.	Replace batteries. Inspect the speaker area for any obstructions. If damage is suspected, contact support.

7. SPECIFICATIONS

Model Number:

CRJ733UR06

Brand:

Rhythm Clocks

Style:

Tuscany II

Material:

Wood

Display Type:

Analog

Special Feature:

Musical Chimes (16/19 melodies, Westminster, 4x4 Quarterly, 3 Christmas melodies), Automatic Night Shut-off

Power Source:

Battery Operated

Batteries:

2 x C batteries (included)

Product Dimensions (H x W x D):

16.9 inches x 12.1 inches x 4.96 inches

Item Weight:

5.7 pounds

Clock Form:

Mantel

8. WARRANTY AND SUPPORT

8.1. Manufacturer's Warranty

This Rhythm Clocks product is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear.

8.2. Customer Support

For warranty claims, technical assistance, or any questions regarding your Rhythm Clocks Tuscany II Mantel Clock, please contact Rhythm Clocks customer support. Refer to the contact information provided with your purchase documentation or visit the official Rhythm Clocks website for current support details. When contacting support, please have your model number (CRJ733UR06) and proof of purchase readily available.