

[Manuals.plus](#) /

› [Crock-Pot](#) /

› Crockpot Manual 3-Quart Slow Cooker Instruction Manual

Crock-Pot SCV700-S-BR

Crock-Pot Manual 3-Quart Slow Cooker Instruction Manual

Model: SCV700-S-BR

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Crock-Pot Manual 3-Quart Slow Cooker. Designed for convenience and healthy cooking, this appliance allows you to prepare delicious meals with minimal effort. Please read all instructions carefully before first use.



Image: The Crock-Pot Manual 3-Quart Slow Cooker, silver stainless steel exterior with a black lid and handles, filled with a stew.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The exterior of the slow cooker can become **very hot** during operation. Always use oven mitts or pot holders when handling the unit during or after cooking.
- Do not place the slow cooker on or near a hot gas or electric burner, or in a heated oven.
- Do not use the slow cooker for anything other than its intended use.

COMPONENTS

Your Crock-Pot Slow Cooker consists of the following main components:

- **Heating Base:** The main unit containing the heating element. Features a control knob for Off, Low, High, and Warm settings.
- **Removable Stoneware:** A durable, round ceramic insert where food is cooked. This is dishwasher-safe.
- **Glass Lid:** A clear lid that allows you to monitor cooking progress without releasing heat. This is also dishwasher-safe.
- **Handles:** Integrated plastic handles on the heating base for safe transport.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and ease of use of the Crock-Pot 3-Quart Round Manual Slow Cooker, including adding ingredients and showing the removable stoneware and lid.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the removable stoneware and glass lid in warm, soapy water. Rinse thoroughly and dry. The heating base can be wiped clean with a damp cloth. Do not immerse the heating base in water.
3. **Assemble:** Place the clean, dry stoneware into the heating base.
4. **Position:** Place the slow cooker on a flat, stable, heat-resistant surface away from walls and curtains.

OPERATING INSTRUCTIONS

1. **Prepare Food:** Place your ingredients into the removable stoneware.
2. **Cover:** Place the glass lid on top of the stoneware.
3. **Plug In:** Plug the power cord into a 110-Volt AC wall outlet.
4. **Select Setting:** Turn the control knob to your desired cooking setting (LOW, HIGH, or WARM). Refer to the "Cooking Settings" section for guidance.
5. **Cook:** Allow the food to cook for the recommended time. Avoid lifting the lid frequently, as this releases heat and extends cooking time.
6. **Serve:** Once cooking is complete, turn the control knob to the OFF position and unplug the unit. Carefully remove the lid and serve.

COOKING SETTINGS

- **LOW:** Ideal for slow cooking over a longer period, typically 6-8 hours. This setting is perfect for tenderizing meats and blending flavors.
- **HIGH:** Cooks food faster than the LOW setting, usually in 3-4 hours. Use this setting when you need your meal ready in a shorter timeframe.
- **WARM:** This setting is designed to keep cooked food at an ideal serving temperature. It is not recommended for cooking food from raw or cold states. Only use WARM after food has been thoroughly cooked.

Note: Cooking times may vary based on recipe, ingredients, and desired doneness. Always ensure food reaches a safe internal temperature.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your slow cooker.

- **Always unplug** the slow cooker and allow it to cool completely before cleaning.
- **Removable Stoneware and Glass Lid:** These components are **dishwasher-safe**. They can also be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that may damage the surface.
- **Heating Base:** Wipe the exterior of the heating base with a soft, damp cloth. Do not use abrasive cleaners. **Never immerse the heating base in water or any other liquid.**
- **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your slow cooker, refer to the common problems and solutions below:

Problem	Possible Cause / Solution
Slow cooker not heating.	Ensure the unit is properly plugged into a working outlet. Check if the control knob is set to a cooking setting (LOW or HIGH), not OFF.
Food not cooking properly or taking too long.	Ensure the lid is properly seated. Lifting the lid frequently can extend cooking time. Verify the correct setting (LOW/HIGH) is selected for your recipe. Ensure sufficient liquid is present.
Exterior of unit is very hot.	This is normal during operation. Always use oven mitts or pot holders when handling. Keep away from children and heat-sensitive surfaces.

If the problem persists, please contact customer support.

SPECIFICATIONS

- **Brand:** Crock-Pot
- **Model:** SCV700-S-BR
- **Capacity:** 3 Quarts
- **Dimensions (DxWxH):** 11.5"D x 9.5"W x 9.8"H
- **Wattage:** 1500 watts
- **Voltage:** 110 Volts
- **Item Weight:** 6.69 pounds (3.04 Kilograms)
- **Material:** Stainless Steel (exterior), Ceramic (stoneware)
- **Color:** Stainless Steel
- **Control Type:** Manual (Off, Low, High, Warm settings)
- **Dishwasher Safe Parts:** Removable Stoneware and Glass Lid
- **UPC:** 048894034732

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Crock-Pot website or the documentation included with your purchase. You may also find additional user guides and manuals online:

- [User Guide \(PDF\)](#)
- [User Manual \(PDF\)](#)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question