

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tefal](#) /
- › [Tefal UltraCompact Health Grill Classic GC305012 Instruction Manual](#)

Tefal GC305012

Tefal UltraCompact Health Grill Classic GC305012 Instruction Manual

Model: GC305012

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Tefal UltraCompact Health Grill Classic GC305012. Please read these instructions carefully before using the appliance and retain them for future reference.



Image: The Tefal UltraCompact Health Grill Classic GC305012 in its closed position, ready for use.

SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep out of reach of children.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance if it has a damaged cord or plug, or if it malfunctions or has been damaged in any way.
- Use only accessories recommended by the manufacturer.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure proper ventilation during use.

PRODUCT FEATURES

- **Power:** 2000 Watts for rapid heating and efficient cooking.
- **Cooking Positions:** Features two cooking positions - a closed grill for contact cooking and a 180° open barbecue mode for larger cooking surfaces.
- **Inclined Plates:** Large, inclined non-stick aluminum cast plates facilitate the drainage of excess fat into an integrated drip tray.
- **Removable Plates:** Plates are easily removable for cleaning and are dishwasher-safe.
- **Adjustable Thermostat:** Allows precise temperature control for various food types.
- **Cooking Surface:** Offers a generous 600 cm² cooking area.
- **Compact Design:** Includes cord storage for easy organization.

FONCTION 2-EN-1



Image: The grill demonstrating its 2-in-1 function, showing both contact grilling and open barbecue modes for different food items.

POLYVALENT



Image: The grill in its open position, showcasing its versatility for cooking various foods simultaneously.

THERMOSTAT RÉGLABLE



Image: A close-up view of the adjustable thermostat and power indicator lights on the grill.

SETUP

1. Unpack the grill and all its components. Remove any packaging materials and labels.
2. Wipe the grilling plates with a damp cloth to remove any dust from manufacturing.
3. Ensure the drip tray is correctly inserted into its designated slot at the front of the grill.
4. Place the grill on a flat, stable, and heat-resistant surface, away from walls or flammable materials.
5. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Preheating

1. Close the grill plates.

2. Turn the thermostat knob to the desired temperature setting (e.g., 3 for high heat).
3. The indicator light will illuminate, indicating that the grill is preheating.
4. Once the grill reaches the set temperature, the indicator light will turn off, signaling it is ready for use.

Grilling (Closed Position)

1. Place food items directly onto the bottom grilling plate.
2. Gently close the top plate over the food. The floating hinge allows the top plate to adjust to the thickness of the food.
3. Cook until desired doneness is achieved. Cooking times will vary based on food type and thickness.
4. Use heat-resistant plastic or wooden utensils to remove food to avoid damaging the non-stick coating.

Barbecue Mode (180° Open Position)

1. To open the grill to 180°, press the release button located on the side of the hinge and fully open the top plate until it lies flat, creating a larger cooking surface.
2. Place food items on both grilling plates.
3. Cook, turning food as needed, until desired doneness.
4. Use heat-resistant plastic or wooden utensils to remove food.



Image: The grill fully opened to 180 degrees, demonstrating its barbecue mode for cooking multiple items simultaneously.

MAINTENANCE AND CLEANING

1. Always unplug the grill from the power outlet and allow it to cool completely before cleaning.
2. Remove the grilling plates by pressing the release buttons and lifting them off.
3. Remove the drip tray and empty any collected fat.
4. **Cleaning Plates and Drip Tray:** The non-stick plates and drip tray are dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Do not use metal scouring pads or harsh detergents.
5. **Cleaning the Main Unit:** Wipe the exterior of the grill with a damp cloth. Do not immerse the main unit in water.
6. Ensure all parts are thoroughly dry before reassembling and storing the grill.

NETTOYAGE FACILE



Image: The removable grilling plates placed inside a dishwasher, illustrating their dishwasher-safe feature for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction; thermostat set too low.	Ensure plug is securely inserted. Test outlet with another appliance. Adjust thermostat to a higher setting.
Food sticks to plates.	Plates not properly cleaned; non-stick coating damaged; insufficient preheating.	Clean plates thoroughly. Avoid using metal utensils. Allow grill to fully preheat before adding food.
Excessive smoke during cooking.	Accumulated grease on plates; cooking very fatty foods.	Clean plates and drip tray regularly. For very fatty foods, ensure good ventilation.

Problem	Possible Cause	Solution
Drip tray overflows.	Drip tray not emptied regularly; cooking very fatty foods.	Empty the drip tray before and during cooking as needed.

SPECIFICATIONS

Model: GC305012

Power: 2000 Watts

Voltage: 230 Volts (AC)

Dimensions (L x W x H): 38.3 x 21 x 38.8 cm

Weight: 4.13 kg

Material: Metal Iron

Special Feature: Thermostat

Components: Non-stick aluminum cast plates, integrated drip tray



Image: Diagram showing the approximate dimensions of the Tefal UltraCompact Health Grill.

WARRANTY AND SUPPORT

The Tefal UltraCompact Health Grill Classic GC305012 comes with a 2-year manufacturer warranty. For warranty claims, technical support, or spare parts inquiries, please contact Tefal customer service or visit the official Tefal website. Please have your model number (GC305012) and proof of purchase ready.

You can visit the official Tefal store for more information: [Tefal Official Store](#)

