

## Moen 124738CSL

# Moen Renzo 124738CSL Wand Kit Instruction Manual

Model: 124738CSL | Brand: Moen

## 1. PRODUCT OVERVIEW

The Moen Renzo 124738CSL Wand Kit is a replacement pull-out spray wand designed for compatible Moen kitchen faucets. This kit provides a functional and aesthetic replacement for a worn or damaged spray wand, restoring full functionality to your kitchen faucet. It features a classic stainless finish and offers multiple spray functions for various kitchen tasks.

## 2. SAFETY INFORMATION

- Always turn off the main water supply to the faucet before beginning any installation or maintenance.
- Wear appropriate personal protective equipment, such as safety glasses, during installation.
- Ensure all connections are secure to prevent leaks.
- If you are unsure about any step, consult a qualified plumber.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Moen Renzo 124738CSL Spray Wand (Classic Stainless)
- Hose connection components (may vary by specific kit)

## 4. INSTALLATION

Follow these steps to replace your existing pull-out spray wand:

1. **Turn off Water Supply:** Locate the hot and cold water supply valves under your sink and turn them off completely. Open the faucet handle to relieve any remaining water pressure.
2. **Disconnect Old Wand:** Unscrew the old spray wand from the pull-out hose. This usually involves twisting the wand counter-clockwise. A towel may be useful to catch any residual water.

3. **Prepare New Wand:** Inspect the new Moen Renzo 124738CSL Wand Kit. Ensure any necessary gaskets or O-rings are properly seated on the new wand's connection point.
4. **Connect New Wand:** Carefully screw the new spray wand onto the pull-out hose. Hand-tighten first, then use an adjustable wrench or pliers to gently tighten an additional quarter turn. Avoid over-tightening, which can damage the connection.
5. **Check for Fit:** Some installations may require transferring specific components, such as a black adapter ring, from the original wand to the new one for optimal fit and function. Refer to your original faucet's manual if you encounter fitting issues.
6. **Restore Water Supply:** Slowly turn the hot and cold water supply valves back on.
7. **Test for Leaks:** Turn on the faucet and check all connections for leaks. If leaks are present, tighten the connection slightly until the leak stops.
8. **Test Operation:** Verify that the spray wand extends and retracts smoothly and that both spray functions (stream and spray) operate correctly.



This image displays the Moen Renzo 124738CSL Wand Kit, featuring its classic stainless finish and ergonomic design. The wand includes a button for switching between spray patterns.

## 5. OPERATION

The Moen Renzo 124738CSL Wand Kit typically features a button or switch on the spray head to toggle between two spray patterns:

- **Aerated Stream:** Ideal for filling pots and general washing.
- **Powerful Spray:** Suitable for rinsing dishes and cleaning the sink.

Press the button to switch between these modes as needed during use.

## 6. MAINTENANCE

---

### Cleaning the Finish

To maintain the classic stainless finish, clean with a damp cloth and mild liquid dish soap. Rinse thoroughly with warm water and dry with a soft cloth. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.

### Cleaning Spray Nozzles

Mineral deposits can accumulate in the spray nozzles over time, affecting water flow. To clean, gently rub the rubber nozzles with your finger or a soft brush to dislodge any buildup. For stubborn deposits, a solution of equal parts white vinegar and water can be applied to the nozzles for a few minutes before scrubbing.

## 7. TROUBLESHOOTING

---

- **Low Water Flow:** Check if the water supply valves are fully open. Inspect the spray wand nozzles for mineral buildup and clean them as described in the Maintenance section.
- **Leaks at Connection:** Ensure the spray wand is securely tightened to the hose. If leaks persist, check for damaged gaskets or O-rings and replace if necessary.
- **Inconsistent Spray Pattern:** Clean the spray nozzles to remove any obstructions.
- **Wand Does Not Retract Properly:** Check the hose and weight under the sink for any obstructions or tangles that might prevent smooth retraction.

## 8. SPECIFICATIONS

---

Feature	Specification
Manufacturer	Moen
Part Number	124738CSL
Item Weight	0.01 ounces
Product Dimensions	12 x 7.5 x 2 inches
Color	Classic Stainless
Finish	Classic Stainless
Material	Stainless Steel
Installation Method	Single Hole Deck Mount
Number of Handles	1 (referring to the faucet it connects to)

Mounting Type

Deck Mount (referring to the faucet it connects to)

## 9. WARRANTY AND SUPPORT

---

Moen products are manufactured under the highest standards of quality and workmanship. For specific warranty information, please refer to the warranty documentation included with your original Moen faucet or visit the official Moen website. For technical assistance, replacement parts, or customer support, please contact Moen customer service directly.

**Moen Customer Service:** Please visit [www.moen.com/customer-support](http://www.moen.com/customer-support) for contact details and further assistance.