

Manuals.plus /

› Dell /

› Dell N3769 Black Toner Cartridge 1700n/1710n Laser Printer Instruction Manual

## Dell N3769

# Dell N3769 Black Toner Cartridge Instruction Manual

Model: N3769 | For Dell 1700n/1710n Laser Printers

## INTRODUCTION

This manual provides comprehensive instructions for the proper installation, operation, and maintenance of your Dell N3769 Black Toner Cartridge. This cartridge is specifically designed to work with Dell 1700n and 1710n Laser Printers, ensuring optimal print quality and performance. Please read this manual thoroughly before installing or using the toner cartridge.

## SAFETY INFORMATION

Observe the following safety precautions when handling toner cartridges:

- Keep toner cartridges out of reach of children.
- Do not incinerate used toner cartridges. The toner powder can ignite, causing burns.
- Avoid inhaling toner dust. If toner is spilled, wipe it up immediately with a dry cloth. Do not use a vacuum cleaner, as the fine particles may cause an explosion or fire.
- If toner gets on your skin or clothing, wash it off immediately with soap and cold water. Hot water will set the toner, making it difficult to remove.
- Store toner cartridges in their original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.

## SETUP AND UNPACKING

Before installing the new toner cartridge, carefully unpack it from its protective packaging.

1. Open the outer shipping box.

2. Remove the toner cartridge box from the shipping material.
3. Inspect the box for any signs of damage.



Figure 1: Front view of the Dell N3769 toner cartridge retail box. The box is brown cardboard with a blue label indicating "N3769" and "1700 / 1710" compatibility.





Figure 2: Side view of the Dell N3769 toner cartridge retail box, showing the blue label and packaging details.

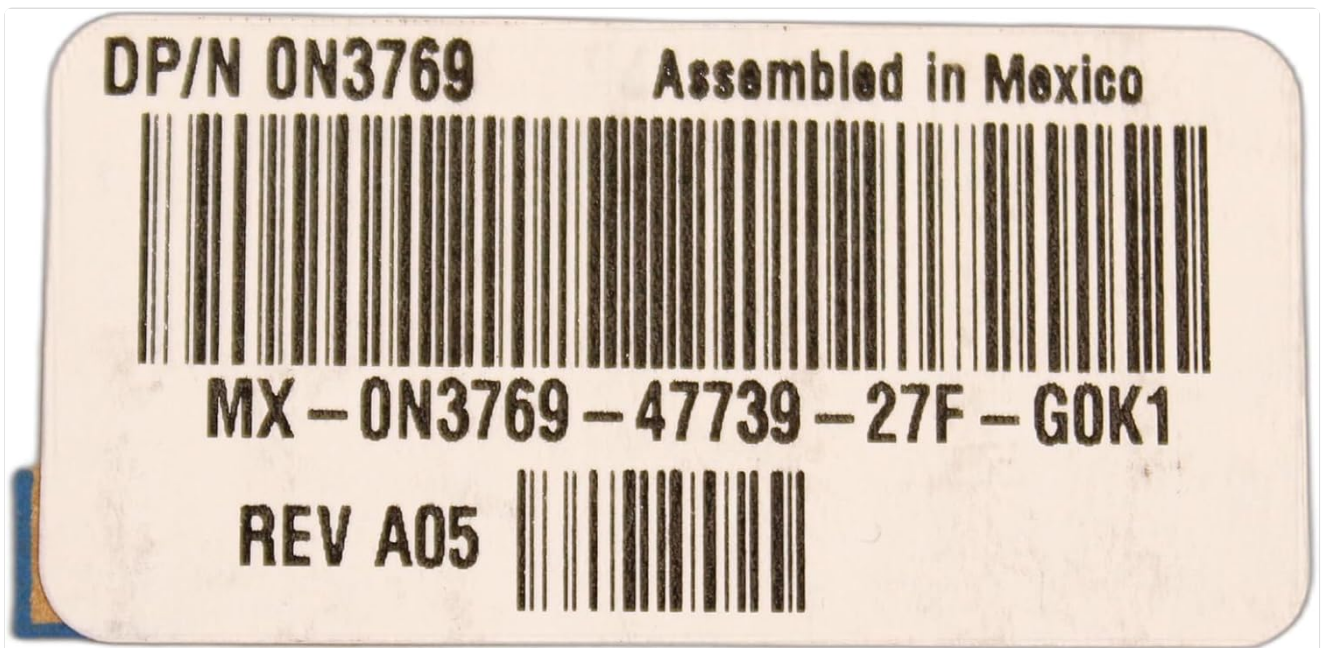


Figure 3: Close-up of the product label on the Dell N3769 toner cartridge box, displaying the part number "DP/N 0N3769", "Assembled in Mexico", and a barcode with identifier "MX-0N3769-47739-27F-G0K1" and "REV A05".

## INSTALLATION (OPERATING)

Follow these steps to install the Dell N3769 toner cartridge into your Dell 1700n or 1710n Laser Printer:

1. Ensure your printer is turned off and unplugged from the power source.
2. Open the front cover of your Dell 1700n/1710n printer to access the toner compartment.
3. Carefully remove the old toner cartridge by pulling it straight out. Place it in a protective bag for recycling.
4. Gently shake the new Dell N3769 toner cartridge horizontally 5-6 times to distribute the toner evenly inside.
5. Remove any protective tape or orange plastic covers from the new cartridge. **Do not touch the green drum surface.**
6. Align the new cartridge with the guides inside the printer and push it firmly until it clicks into place.
7. Close the front cover of the printer.
8. Plug in and turn on your printer. The printer will typically perform a self-test and recognize the new cartridge.



Figure 4: The Dell N3769 Standard Capacity Toner Cartridge itself, showing its black body and light blue handle for installation.

## MAINTENANCE

Proper maintenance ensures the longevity and performance of your toner cartridge:

- **Storage:** Store unused cartridges in their sealed packaging in a cool, dry environment, away from direct sunlight and extreme temperatures.
- **Handling:** Always handle the cartridge by its designated handles. Avoid touching the imaging drum or electrical contacts.
- **Recycling:** Dell encourages responsible recycling of used toner cartridges. Refer to Dell's official website for recycling programs.

## TROUBLESHOOTING

If you encounter issues with your Dell N3769 toner cartridge, consider the following:

Problem	Possible Cause / Solution
Printer does not recognize cartridge	Ensure the cartridge is fully seated in the printer. Remove and reinsert it. Check for any protective tape or covers that may not have been removed. Clean the electrical contacts on the cartridge and in the printer with a lint-free cloth. Restart the printer.
Poor print quality (faded, streaks, spots)	Gently shake the toner cartridge horizontally to redistribute toner. Check printer settings for print density. The cartridge may be low on toner. Replace if necessary. Ensure the drum unit (if separate) is clean and not damaged.
Toner leakage	Ensure the cartridge is properly installed. If leakage persists, the cartridge may be defective. Contact Dell support.

## SPECIFICATIONS

Key specifications for the Dell N3769 Black Toner Cartridge:

Feature	Detail
Model Number	N3769
Color	Black
Page Yield	Approximately 3,000 pages (based on ISO/IEC 19752)
Compatible Printers	Dell 1700n, Dell 1710n Laser Printers
Item Weight	1.8 pounds (approx. 0.82 kg)
Product Dimensions	4.02 x 15.16 x 5.71 inches (approx. 10.2 x 38.5 x 14.5 cm)
Manufacturer	Dell Marketing USA, LP
UPC	898074001531

## **WARRANTY AND SUPPORT**

For warranty information or technical support regarding your Dell N3769 Black Toner Cartridge, please refer to the official Dell support website or contact Dell customer service directly. Keep your purchase receipt as proof of purchase.

**Online Support:** [www.dell.com/support](http://www.dell.com/support)