

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Unicorn](#) /

› [Unicorn CX 2000 Electronic Soft Tip Dartboard User Manual](#)

Unicorn CX 2000

Unicorn CX 2000 Electronic Soft Tip Dartboard User Manual

Model: CX 2000 (79505)

1. INTRODUCTION

Thank you for choosing the Unicorn CX 2000 Electronic Soft Tip Dartboard. This manual provides essential information for the safe and effective setup, operation, and maintenance of your dartboard. Please read these instructions carefully before use and retain them for future reference.

2. PRODUCT OVERVIEW

The Unicorn CX 2000 is an electronic soft tip dartboard designed for recreational play. It features an LCD display, supports up to 8 players, and includes 26 built-in games. The dartboard is constructed from durable plastic and uses soft-tip darts for safety.



This image displays the Unicorn CX 2000 Electronic Soft Tip Dartboard. The board features a standard dart target with blue and white segments, numbered from 1 to 20, with inner and outer bullseyes. Below the dartboard face is a control panel with an LCD screen and red buttons for game selection and player input. Two red soft-tip darts and two blue soft-tip darts are shown embedded in the board, indicating its use.

Key Features:

- Electronic scoring system with LCD display
- Supports up to 8 players
- 26 integrated dart games
- Designed for soft-tip darts
- Includes 6 soft-tip darts

3. SETUP

3.1 Unpacking

1. Carefully remove all components from the packaging.
2. Verify that all items are present: dartboard, 6 soft-tip darts, and this instruction manual.
3. Inspect the dartboard for any signs of damage. If damaged, do not proceed with setup and contact customer support.

3.2 Battery Installation

The Unicorn CX 2000 requires batteries for operation (not included). Locate the battery compartment on the back of the dartboard. Insert the required number and type of batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

3.3 Mounting the Dartboard

Choose a suitable location for mounting the dartboard, ensuring sufficient space for throwing darts and player safety. The dartboard should be mounted securely to a wall or sturdy surface. The center of the bullseye should typically be 1.73 meters (5 feet 8 inches) from the floor. The throwing line (oche) should be 2.37 meters (7 feet 9.25 inches) from the face of the dartboard.

1. Mark the desired mounting height for the bullseye.
2. Use appropriate screws or mounting hardware (not included) to secure the dartboard firmly to the wall. Ensure it is level and stable.
3. Confirm the dartboard is securely attached before use.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the **POWER** button (usually red, located near the LCD screen) to turn the dartboard on. The LCD display will illuminate. To turn off, press and hold the **POWER** button for a few seconds, or it may automatically power off after a period of inactivity.

4.2 Selecting Players

After powering on, use the **PLAYER** button (or similar labeled button) to select the number of players (1-8). The selected number of players will be displayed on the LCD screen.

4.3 Selecting a Game

The dartboard offers 26 different games. Use the **GAME** button (or similar labeled button) to cycle through the available games. Once your desired game is displayed, press the **START** or **ENTER** button to begin.

4.4 Playing a Game

- Each player takes turns throwing three darts per round.
- Ensure darts are thrown with sufficient force for the soft tip to penetrate the segment holes.
- The electronic scoring system will automatically register hits. If a dart does not register, gently push it further into the board or manually adjust the score if the board allows (refer to specific game rules for manual scoring options).
- After throwing, retrieve your darts carefully.
- The LCD display will show current scores and game progress.

5. GAMES

The Unicorn CX 2000 features 26 distinct dart games. Common games include 301, 501, Cricket, and various other scoring and challenge-based games. For detailed rules and variations of each game, please refer to the specific game instructions provided in the full product manual or on the manufacturer's website.

6. MAINTENANCE

6.1 Cleaning the Dartboard

To clean the dartboard, gently wipe the surface with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, but ensure no moisture enters the electronic components. Do not use abrasive cleaners or solvents.

6.2 Dart Care

Regularly inspect your soft-tip darts for wear and tear. Replace broken or bent tips to ensure proper function and prevent damage to the dartboard. Store darts in a protective case when not in use.

6.3 Battery Replacement

When the display dims or the dartboard functions erratically, it is likely time to replace the batteries. Follow the battery installation steps (Section 3.2) to replace old batteries with new ones. Dispose of used batteries responsibly according to local regulations.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dartboard does not power on.	No batteries, dead batteries, or incorrect battery polarity.	Install new batteries, ensuring correct polarity.
Darts are not registering scores.	Darts not fully inserted, worn dart tips, or sensor issue.	Ensure darts are thrown firmly. Replace worn dart tips. If problem persists, contact support.
LCD display is dim or flickering.	Low battery power.	Replace batteries.
Buttons are unresponsive.	Temporary electronic glitch or low battery.	Turn the dartboard off and on again. Replace batteries if needed.

8. SPECIFICATIONS

Feature	Detail
Brand	Unicorn
Model Name	CX 2000
Model Number	79505
Type	Electronic Soft Tip Dartboard
Material	Plastic
Dimensions (L x W x H)	43.51 cm x 38 cm x 2.49 cm (approx. 17.13 x 14.96 x 0.98 inches)
Weight	961.62 grams (approx. 2.12 lbs)
Power Source	Batteries (not included)
Max Players	8
Number of Games	26
Included Accessories	6 Soft-Tip Darts

9. SAFETY INFORMATION

- This dartboard is designed for use with soft-tip darts only. Do not use steel-tip darts, as they can damage the board and pose a safety risk.
- Ensure the dartboard is securely mounted to prevent it from falling during play.
- Always ensure the throwing area is clear of people, pets, and obstacles before throwing darts.
- Keep the dartboard and darts out of reach of small children when not in use.
- Do not expose the dartboard to extreme temperatures or moisture.
- Do not attempt to open or repair the electronic components of the dartboard. Refer servicing to qualified personnel.

10. WARRANTY AND SUPPORT

Unicorn products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Unicorn website. If you encounter any issues or require technical assistance, please contact Unicorn customer support through their official channels.

For more information, you may visit the [Unicorn Darts official website](#).