

[Manuals.plus](#) /

› [JAKKS Pacific](#) /

› JAKKS Pacific Big Buck Hunter Pro Software for Nintendo Wii Instruction Manual

JAKKS Pacific 24458

JAKKS Pacific Big Buck Hunter Pro Software for Nintendo Wii Instruction Manual

Model: 24458

1. INTRODUCTION

This manual provides instructions for the JAKKS Pacific Big Buck Hunter Pro software for the Nintendo Wii console. Big Buck Hunter Pro brings the arcade hunting experience to your home, offering fast-paced gameplay and various challenges.

The game features arcade-style mechanics with a focus on shooting whitetail bucks while avoiding does. Players can also earn bonus points by targeting critters and engage in various mini-games.

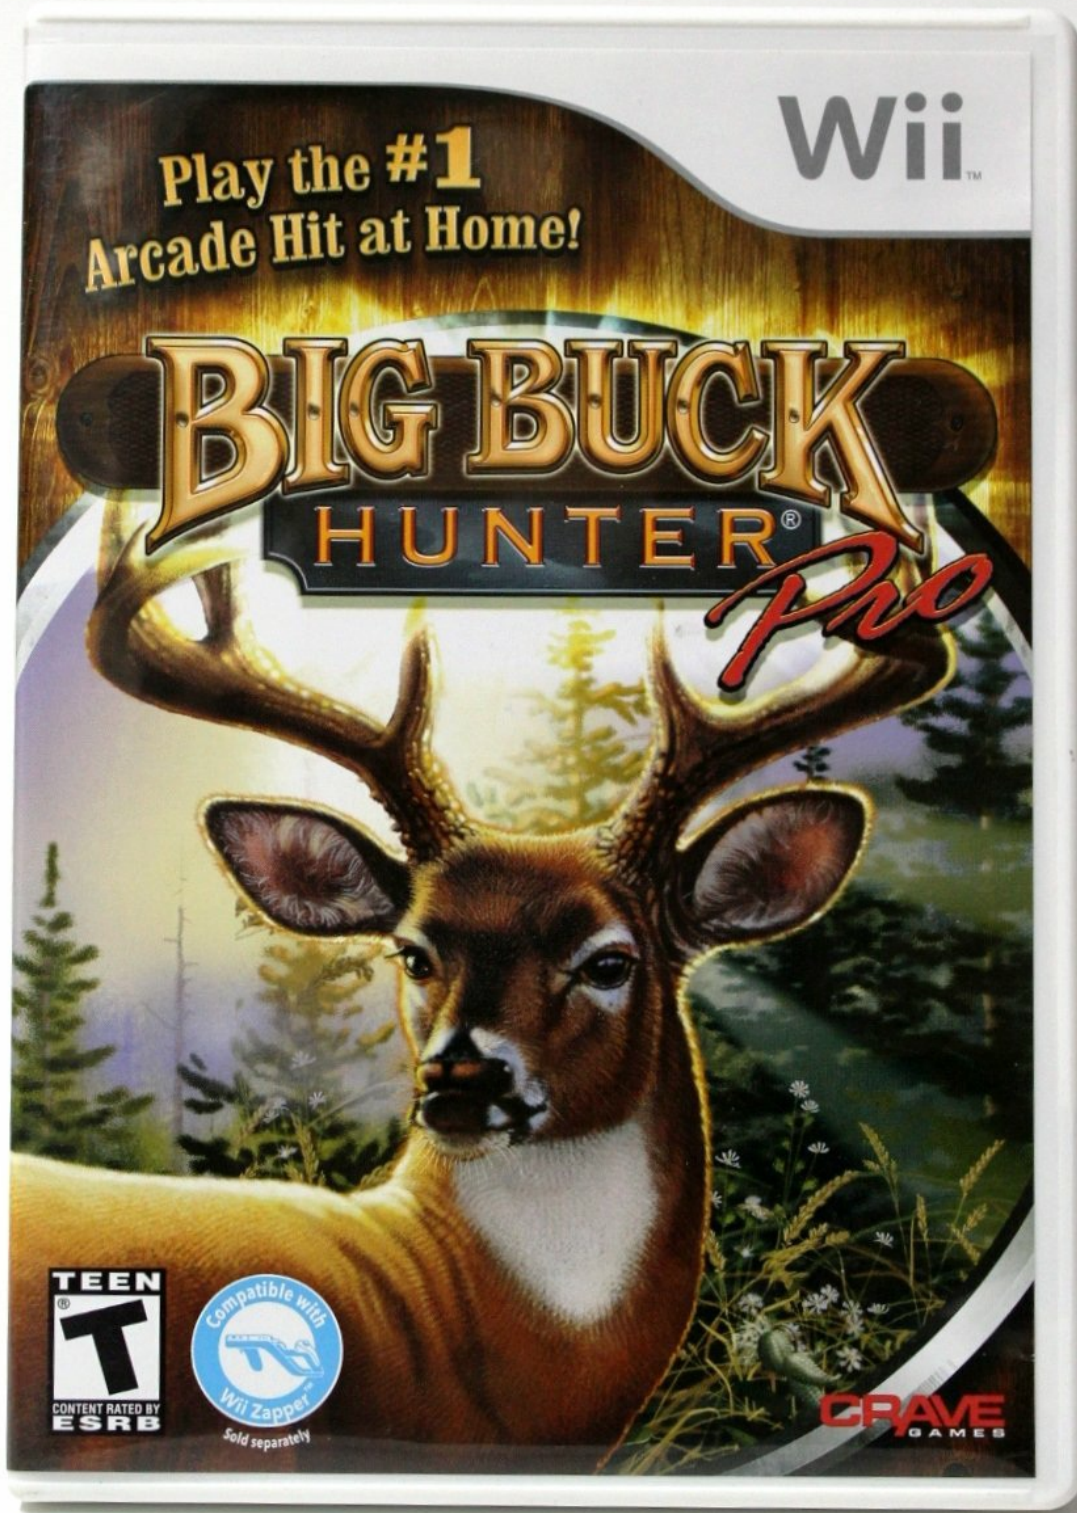


Figure 1: Big Buck Hunter Pro Nintendo Wii game box.

2. SETUP

2.1 System Requirements

- Nintendo Wii, Nintendo Wii Mini, or Nintendo Wii U console.
- Wii Remote (required for gameplay).
- Optional: Wii Zapper or other compatible light gun accessory for enhanced experience.

2.2 Game Installation

1. Ensure your Nintendo Wii console is powered off.
2. Open the Wii console's disc drive.
3. Insert the Big Buck Hunter Pro game disc into the disc drive with the label facing up.
4. Close the disc drive.
5. Power on your Nintendo Wii console.
6. Select the Big Buck Hunter Pro channel from the Wii Menu to start the game.



Figure 2: Game disc and instruction booklet.

3. OPERATING INSTRUCTIONS (GAMEPLAY)

3.1 Basic Controls

- **Aim:** Point the Wii Remote at the screen to aim your crosshairs.
- **Shoot:** Press the 'B' button (trigger) on the Wii Remote to fire.
- **Reload:** Press the 'A' button on the Wii Remote to reload your weapon. If using a Wii Zapper or similar accessory, a pump action may also reload.

3.2 Gameplay Mechanics

The primary objective is to hunt whitetail bucks. Players must shoot three bucks per stage. Avoid shooting does, as this will end the game. Critters appearing on screen can be shot for bonus points.

- **Bucks:** Target and shoot bucks to progress through stages.
- **Does:** Avoid shooting does. Accidental shots on does will result in game over.
- **Critters:** Shoot small animals for additional points and to practice aiming.

- **Scoring:** Points are awarded based on kill distance, impact location, and the number of shots used.



Figure 3: Back of game box with gameplay screenshots.

3.3 Game Modes

- **Solo Play:** Engage in the hunting experience individually.
- **Head-to-Head:** Compete against other players in a competitive hunting mode.

4. GAMEPLAY FEATURES

Big Buck Hunter Pro includes several features to enhance the hunting experience:

- **Arcade-Style Gameplay:** Enjoy the classic arcade hunting action adapted for the Nintendo Wii.
- **Critter Bonus Points:** Shoot various small critters for extra points.
- **Achievements:** Skilled hunters can unlock a host of achievements.
- **Bonus Mini-Games:**
 - **Duck Hunt:** A classic-style duck shooting challenge.
 - **Gopher Garden:** Test your reflexes by shooting gophers.
 - **Frog Flippin':** Aim and shoot frogs for points.

These mini-games can be played separately for quick challenges.

5. MAINTENANCE

5.1 Disc Care

- Always handle the game disc by its edges to avoid fingerprints and scratches.
- Store the disc in its original case when not in use.
- To clean the disc, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive cleaners or solvents.
- Avoid exposing the disc to direct sunlight or extreme temperatures.

6. TROUBLESHOOTING

6.1 Game Not Loading or Freezing

- **Clean the Disc:** Inspect the game disc for smudges or scratches. Clean it as described in the "Disc Care" section.
- **Restart Console:** Power off your Nintendo Wii console, wait a few seconds, and then power it back on.
- **Check Disc Drive:** Ensure the disc is inserted correctly into the console's disc drive.
- **System Updates:** Ensure your Wii console's system software is up to date.

6.2 Controller Issues

- **Wii Remote Sync:** If the Wii Remote is not responding, press the SYNC button inside the battery compartment of the remote and then the SYNC button on the Wii console (usually behind the front panel).
- **Battery Check:** Ensure the Wii Remote has fresh batteries.
- **Sensor Bar:** Verify the Sensor Bar is properly connected to the Wii console and positioned correctly (above or below your TV).

6.3 Regional Compatibility

Nintendo Wii consoles are typically region-locked. This game is designed for consoles sold in the United States and Canada. If you are experiencing issues outside of these regions, it may be due to regional incompatibility.

7. SPECIFICATIONS

Product Name	Big Buck Hunter Pro - Software Only
Brand	JAKKS Pacific
Model Number	24458
UPC	039897244587
Platform	Nintendo Wii
Compatible Consoles	Nintendo Wii, Nintendo Wii Mini, Nintendo Wii U
Release Date	September 15, 2010
ESRB Rating	Teen (Mild Violence)
Product Dimensions	7.5 x 5.3 x 0.6 inches
Item Weight	4 ounces

8. WARRANTY AND SUPPORT

For information regarding product warranty or technical support, please refer to the documentation included with your game purchase or visit the official JAKKS Pacific website. Contact information for customer service is typically provided on the game packaging or within the digital manual accessible through the game.

For general inquiries, you may also refer to the publisher's website: www.cravegames.com (as indicated on the product packaging).