

[Manuals.plus](#) /

› [Zojirushi](#) /

› Zojirushi EP-PBC10 Gourmet d'Expert Electric Skillet User Manual

Zojirushi EP-PBC10HC

Zojirushi EP-PBC10 Gourmet d'Expert Electric Skillet User Manual

Model: EP-PBC10HC | Brand: Zojirushi

INTRODUCTION

The Zojirushi EP-PBC10 Gourmet d'Expert Electric Skillet is a versatile appliance designed for various cooking methods, including sautéing, stewing, and grilling. Its large cooking pan features a durable titanium ceramic nonstick coating, making it ideal for preparing meals for families and gatherings. This manual provides essential information for the safe and effective use of your electric skillet.

IMPORTANT SAFETY FEATURES

The Zojirushi Gourmet d'Expert Electric Skillet incorporates several safety features for secure and convenient use.

Cool-Touch Body and Handles

The skillet's body and high walls are designed to cover the hot pan as much as possible, minimizing exposed hot surfaces. The recessed handles on the body remain cool even after cooking, allowing for safe transportation of the unit.



Image: The Zojirushi EP-PBC10 Electric Skillet with its cooking pan lifted, revealing the heating element and the cool-touch handles on the main body.

Safety-Designed Lid

The lid features a knob with a protective shield to prevent accidental contact with the hot lid surface. Additionally, the lid is designed to lay flat when placed upside down on a table, preventing it from rolling.



Image: The Zojirushi EP-PBC10 Electric Skillet fully assembled with its glass lid, highlighting the design of the lid knob for safety.

Pull-Away Power Cord

The power cord is designed to safely disconnect from the unit if it is accidentally yanked, preventing the skillet from being pulled off the table. Always ensure the power cord does not hang too far off the table to avoid tripping hazards.

SETUP AND ASSEMBLY

1. Place the electric skillet base on a stable, heat-resistant surface.
2. Insert the cooking pan into the base, ensuring it is properly seated.
3. Connect the power cord to the designated port on the skillet base and then plug it into a standard 120V electrical outlet.
4. Place the glass lid on top of the cooking pan.



Image: The Zojirushi EP-PBC10 Electric Skillet with its cooking pan separated from the heating base, illustrating the components for assembly.

OPERATING INSTRUCTIONS

Temperature Control

The skillet features adjustable temperature settings ranging from 176°F (Keep Warm) to 430°F. Use the control slider to select your desired cooking temperature.

- **OFF:** Unit is powered off.
- **KEEP WARM:** Maintains food at a warm temperature (approx. 176°F / 80°C).
- **SIMMER:** Low heat setting for gentle cooking.
- **HIGH:** High heat setting for rapid cooking and grilling (up to 430°F / 220°C).

Cooking Functions

The Gourmet d'Expert Electric Skillet is highly versatile:

- **Sautéing & Grilling:** Use the "GRILL" or "HIGH" settings for direct cooking of meats and vegetables.
- **Stewing & Hot Pot:** The deep cooking pan is perfect for preparing stews, soups, and hot pot dishes.



Image: The Zojirushi EP-PBC10 Electric Skillet in use, grilling steak and vegetables directly in the nonstick pan.



Image: The Zojirushi EP-PBC10 Electric Skillet set up for a hot pot meal, with thinly sliced meat and fresh vegetables ready for cooking.

Stovetop Use of Pan

For quick heating of liquids or initial preparation, the cooking pan can be used directly on an electric or gas stovetop burner. Ensure flames do not extend beyond the pan's base to prevent damage to the handles.

Video Description: This video demonstrates the Zojirushi EP-PBC10 Gourmet d'Expert Electric Skillet's cooking pan being used directly on a gas stovetop. It highlights the pan's versatility for quick heating of liquids before transferring to the electric base. The video also emphasizes the importance of keeping flames within the pan's base to protect the handles.



Image: The cooking pan of the Zojirushi EP-PBC10 Electric Skillet placed on a gas stovetop burner, demonstrating its dual functionality.

MAINTENANCE AND CLEANING

The Zojirushi EP-PBC10 is designed for easy cleaning.

- Always unplug the unit and allow it to cool completely before cleaning.
- The cooking pan, lid, and main body can be disassembled for thorough cleaning.
- The titanium ceramic nonstick coated pan should be cleaned with a soft sponge and mild dish soap to preserve its nonstick properties. Avoid abrasive cleaners or metal utensils.
- Wipe the heating base with a damp cloth. Do not immerse the heating base in water.

TROUBLESHOOTING

If you encounter any issues with your Zojirushi EP-PBC10 Gourmet d'Expert Electric Skillet, please refer to the following common solutions or contact customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not turn on	Not properly plugged in; Power outlet issue	Ensure power cord is securely connected to both the unit and a working electrical outlet. Check household circuit breaker.
Uneven heating	Pan not seated correctly; Insufficient liquid	Ensure the cooking pan is fully seated in the heating base. Add sufficient liquid for even heat distribution, especially for stewing.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	EP-PBC10HC
Product Dimensions	13.88"D x 15.25"W x 7.75"H
Item Weight	9 Pounds
Wattage	1250 watts
Voltage	120 Volts
Material	Titanium and Ceramic enhanced nonstick coated
Color	BLACK, BEIGE
Special Features	Variable temperature settings from 176°F (Keep Warm) to 430°F, Cooking pan can be used directly on the stovetop, Disassembles for easy cleaning
Included Components	Heating Base, Skillet Pan, Lid

WARRANTY AND CUSTOMER SUPPORT

This Zojirushi EP-PBC10 Gourmet d'Expert Electric Skillet comes with a**Limited Warranty**. For detailed warranty information, service, or support, please refer to the official user manual PDF or contact Zojirushi customer service. You can access the full User Manual (PDF) [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question