

[manuals.plus](#) /› [Sunbeam](#) /› [Sunbeam 250-Watt 5-Speed Stand Mixer FPSBHS0302 Instruction Manual](#)**Sunbeam FPSBHS0302**

Sunbeam 250-Watt 5-Speed Stand Mixer FPSBHS0302 Instruction Manual

Model: FPSBHS0302

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before operating this appliance.
2. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended household use.

PRODUCT COMPONENTS

The Sunbeam 250-Watt 5-Speed Stand Mixer includes the following parts:

- Mixer Head (detachable for hand mixer use)

- Stand Base
- 3-Quart Stainless Steel Mixing Bowl
- Chrome Beaters (2)
- Chrome Dough Hooks (2)



Figure 1: The Sunbeam Stand Mixer assembled with chrome beaters in the 3-quart stainless steel bowl.



Figure 2: The Sunbeam Stand Mixer assembled with chrome dough hooks, ready for kneading.



Figure 3: The mixer head detached from the stand, functioning as a hand mixer.



Figure 4: Illustration of detaching the hand mixer from its stand.



Figure 5: Close-up of the 5-speed control knob located on the mixer handle.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport. Remove any protective films or labels from the appliance.
2. **Assembling the Stand Mixer:**
 - a. Place the stand base on a clean, dry, and stable surface.
 - b. Ensure the mixer head is securely seated on the stand.
3. **Attaching Beaters or Dough Hooks:**
 - a. Ensure the mixer is unplugged and the speed control is set to 'OFF' or '0'.
 - b. Insert the beaters or dough hooks into the openings on the underside of the mixer head. Push firmly until they click into place. Note that one beater/hook has a collar and must be inserted into the larger opening.
 - c. Gently tug on the beaters/hooks to ensure they are securely locked.
4. **Placing the Mixing Bowl:**
 - a. Place the 3-quart stainless steel mixing bowl onto the stand base. Ensure it is centered and stable.

OPERATING INSTRUCTIONS

Using as a Stand Mixer

1. Ensure the mixer is assembled with the desired attachments (beaters or dough hooks) and the mixing bowl is in place.
2. Add ingredients to the mixing bowl.
3. Plug the mixer into a standard electrical outlet.
4. Select the desired speed using the 5-speed control knob. Start at a lower speed to prevent splashing, then gradually increase as needed.
5. Allow the mixer to operate until ingredients are thoroughly combined or processed as required by your recipe.
6. Once mixing is complete, set the speed control to 'OFF' or '0' and unplug the mixer.
7. To remove beaters/hooks, press the eject button located on the mixer head.

Using as a Hand Mixer

1. Ensure the mixer is unplugged and the speed control is set to 'OFF' or '0'.
2. Press the release button on the stand to detach the mixer head.
3. Insert the desired attachments (beaters or dough hooks) into the openings on the underside of the mixer head.
4. Plug the hand mixer into a standard electrical outlet.
5. Hold the mixer firmly and select the desired speed.

6. Mix ingredients in your preferred bowl.
7. After use, set the speed control to 'OFF' or '0' and unplug the mixer.
8. Press the eject button to release the beaters/hooks.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Sunbeam mixer.

Cleaning the Attachments (Beaters and Dough Hooks)

- After each use, remove the beaters or dough hooks by pressing the eject button.
- Wash the chrome beaters and dough hooks in warm, soapy water. Rinse thoroughly and dry immediately to prevent rust.
- Alternatively, these attachments are generally dishwasher safe. Refer to your dishwasher manual for specific instructions on washing metal utensils.

Cleaning the Mixing Bowl

- The 3-quart stainless steel mixing bowl can be washed by hand with warm, soapy water or placed in the dishwasher.
- Ensure the bowl is completely dry before storing.

Cleaning the Mixer Unit and Stand

- **Always unplug the mixer before cleaning.**
- Wipe the exterior of the mixer head and stand base with a damp cloth. For stubborn stains, use a mild, non-abrasive cleaner.
- Do not immerse the mixer head or stand base in water or any other liquid.
- Ensure all parts are completely dry before storing or next use.

Storage

- Store the mixer and its accessories in a clean, dry place.
- The mixer head can be stored on the stand or separately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working; speed control not set.	Ensure mixer is securely plugged into a working outlet. Check speed control is set to a numbered speed (1-5).
Beaters/Dough hooks are difficult to insert or remove.	Incorrect insertion; debris in openings.	Ensure the beater/hook with the collar is inserted into the larger opening. Press firmly until it clicks. For removal, ensure the eject button is fully depressed. Clean any debris from the openings.
Mixer seems to struggle or slow down.	Overloading with ingredients; mixture is too thick.	Reduce the amount of ingredients. Add liquids if the mixture is too thick. Use a lower speed for very thick mixtures.
Splashing during mixing.	Speed is too high; bowl is too full.	Start mixing at the lowest speed and gradually increase. Reduce the amount of ingredients in the bowl.

SPECIFICATIONS

- **Brand:** Sunbeam
- **Model Number:** FPSBHS0302
- **Motor:** 250 Watts
- **Speeds:** 5
- **Bowl Capacity:** 3 Quarts
- **Bowl Material:** Stainless Steel
- **Attachments:** Chrome Beaters, Chrome Dough Hooks
- **Product Dimensions:** 12.4 x 7.87 x 13.15 inches
- **Item Weight:** Approximately 0.01 ounces (Note: This weight seems unusually low and may be a data entry error. Actual weight will be higher.)
- **Special Feature:** Removable Bowl, Dual Function (Hand Mixer / Stand Mixer)

WARRANTY AND SUPPORT

This Sunbeam mixer is typically backed by a manufacturer's warranty. Based on available information, a 2-year warranty is often provided for this product, covering defects in materials and workmanship under normal household use.

For warranty claims, technical support, or to inquire about replacement parts, please contact Sunbeam Customer Service. Refer to the official Sunbeam website or product packaging for the most current contact information.

Online Support: Visit the official Sunbeam website for FAQs and support resources.

Telephone Support: Contact numbers are typically listed in the warranty card included with your product.

© 2023 Sunbeam Products. All rights reserved.

Related Documents - FPSBHS0302

	<p><u>Sunbeam Mixmaster Combo Pro Hand & Stand Mixer User Guide MXP1000WH</u> Comprehensive user guide for the Sunbeam Mixmaster Combo Pro Hand & Stand Mixer (Model MXP1000WH). Includes safety precautions, detailed features, operating instructions, mixing guide, care and cleaning tips, and a variety of recipes.</p>
	<p><u>Sunbeam Mixmaster Combo Pro Hand & Stand Mixer User Guide MXP1000WH</u> User guide for the Sunbeam Mixmaster Combo Pro Hand & Stand Mixer (MXP1000WH), detailing safety, features, operation, care, cleaning, and recipes. Includes warranty information and support contacts.</p>
 <p>The General Electric Appliance Factory Parts website is the official source for genuine replacement parts for GE, Monogram, and Hotpoint products. SUNBEAM 2623-33 Owner's Manual Shop genuine replacement parts for SUNBEAM 2623-33 Find Your SUNBEAM Model Parts - Select From 3 Models ----- Manual continues below -----</p>	<p><u>Sunbeam 2623-33 Stand Mixer Owner's Manual - Features, Care, and Operation</u> Comprehensive owner's manual for the Sunbeam 2623-33 Mixmaster stand mixer. Includes detailed information on features, safety instructions, care and cleaning, preparation, operation, and warranty.</p>
	<p><u>Sunbeam Mixmaster Hand Mixer JMP2000BK User Guide</u> Comprehensive user guide for the Sunbeam Mixmaster Hand Mixer model JMP2000BK, covering safety precautions, features, usage instructions, mixing tips, speed guide, care, cleaning, and recipes.</p>
	<p><u>Sunbeam Mixmaster Hand Mixer User Manual and Safety Guide</u> User manual and safety guide for the Sunbeam Mixmaster Hand Mixer (Models 2524, 2526, 2545). Learn about features, operating instructions, and care for your kitchen appliance.</p>



[Sunbeam Mixmaster Stand Mixer User Manual and Warranty Information](#)

Comprehensive user manual and warranty details for the Sunbeam Mixmaster Stand Mixer, covering models 2370, 2371, 2395, and 2397. Includes essential safety precautions, operating instructions, maintenance guidelines, helpful hints, and a detailed mixing guide.

Documents - Sunbeam – FPSBHS0302

[\[pdf\] User Manual Instructions](#)



FPSBHS0301 IB.indd Sunbeam FPSBHS0302 Hand Stand Mixer User Manual manual internal 2024 03 Manual |||

For product questions: Sunbeam Consumer Service USA : 1.800.458.8407 Canada : 1.800.667.8623 www.sun... ual Hand-Stand Mixer Manual de Instrucciones Batidora de Mano y Pedestal MODELS/ FPSBHS0301 MODELOS **FPSBHS0302**

www.sunbeam.com P.N. 139598 IMPORTANT SAFEGUARDS When using electrical appliances, ba...

lang:en score:38 filesize: 1.25 M page_count: 14 document date: 2016-06-28



[\[pdf\] User Manual Instructions](#)

Provided by ManualsAndMore Download User Manual Sunbeam FPSBHS0301 manualsandmore |||

For product questions: Sunbeam Consumer Service USA : 1.800.458.8407 Canada : 1.800.667.8623 www.sun... ual Hand-Stand Mixer Manual de Instrucciones Batidora de Mano y Pedestal MODELS/ FPSBHS0301 MODELOS **FPSBHS0302**

www.sunbeam.com P.N. 139598 IMPORTANT SAFEGUARDS When using electrical appliances, ba...

lang:en score:31 filesize: 902.47 K page_count: 14 document date: 2019-07-23



[\[pdf\] User Manual Instructions](#)

FPSBHS0301 IB.indd Go Now Stand Mixer Medium Speed Manual Url images na ssl amazon l

A1kt33plqWL |||

For product questions: Sunbeam Consumer Service USA : 1.800.458.8407 Canada : 1.800.667.8623 www.sun... ual Hand-Stand Mixer Manual de Instrucciones Batidora de Mano y Pedestal MODELS/ FPSBHS0301 MODELOS **FPSBHS0302**

www.sunbeam.com P.N. 139598 IMPORTANT SAFEGUARDS When using electrical appliances, ba...

lang:en score:23 filesize: 1.25 M page_count: 14 document date: 2016-06-28

[pdf] User Manual Instructions



User Manual de Instrucciones Hand Stand Mixer Batidora Mano y Pedestal FSPBHS0404 0403 0302 0301 12ESM1 indd 1 2 5 25 12 8 18 PM IMPORTANT SAFEGUARDS When using electrical appliances basic safety precautions should always be followed including the following this manual performed by any authorized service representative 3 14 mixing liquids especially hot use a tall container or make small quantities at time to reduce spillage 15 Don t Abuse Cord Never carry mixer cord yank it disconnect from an outlet instead grasp plug and pull Sunbeam IB s7d9 scene7 is content NewellRubbermaid DASH S7 int 2020 demandware edgesuite net aamb prd on static Sites sunbeam Library default dw2cd62882 documents instruction manuals

For product questions: Sunbeam Consumer Service USA : 1.800.458.8407 Canada : 1.800.667.8623 www.sun ... al Hand-Stand Mixer Manual de Instrucciones Batidora de Mano y Pedestal MODEL FSPBHS0404 FSPBHS0403 **FSPBHS0302** FSPBHS0301 www.sunbeam.com P.N. 139598 Rev B 5/25/12 8:18 PM IMPORTANT SAFEGUARDS Whe...

lang:en score:17 filesize: 1.22 M page_count: 14 document date: 2012-05-30