Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Moulinex /
- Moulinex Bread Maker Pan Instruction Manual for OW500030, OW500031, OW500032

Moulinex OW500030, OW500031, OW500032

Moulinex Bread Maker Pan Instruction Manual

Compatible with Models OW500030, OW500031, OW500032

INTRODUCTION

This manual provides essential information for the proper use, maintenance, and care of your Moulinex bread maker pan. Designed for Moulinex Home Bread Baguette and XXL models, this pan allows for baking loaves up to 1.5 kg. Please read these instructions carefully to ensure optimal performance and longevity of your product.

PRODUCT OVERVIEW

The Moulinex bread maker pan is a replacement or accessory part designed to fit specific Moulinex bread maker models. It features a non-stick interior for easy bread release and cleaning, and a sturdy construction for durability. The pan includes a metal handle for safe insertion and removal from the bread maker.



A top-down view of the Moulinex bread maker pan, showing its rectangular shape, non-stick interior, and metal handle for easy removal.

SETUP

- 1. **Unpacking:** Carefully remove the bread maker pan from its packaging. Inspect for any signs of damage.
- 2. **Initial Cleaning:** Before first use, wash the pan with warm, soapy water and a soft sponge. Rinse thoroughly and dry completely.
- 3. Installation: Place the pan into the bread maker's baking chamber. Ensure it is securely seated and aligned with the drive shaft for the kneading paddles. Refer to your specific bread maker's manual for detailed installation instructions.

OPERATING INSTRUCTIONS

- 1. **Ingredient Placement:** Add ingredients to the pan according to your recipe, typically liquids first, then dry ingredients, with yeast added last.
- 2. **Pan Insertion:** Ensure the pan is correctly inserted into the bread maker before starting any program.
- 3. **Kneading Paddles:** Verify that the kneading paddles are properly attached to the drive shaft inside the pan before adding ingredients.
- 4. **Removal After Baking:** Once the baking cycle is complete, use oven mitts or the pan's handle to carefully lift the hot pan out of the bread maker.
- Bread Removal: Allow the bread to cool in the pan for a few minutes before inverting it onto a wire rack to cool completely. If the bread sticks, gently shake the pan or use a non-abrasive utensil to loosen it.

MAINTENANCE AND CLEANING

- After Each Use: Allow the pan to cool completely before cleaning. Wash with warm, soapy water and
 a soft sponge or cloth. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick
 coating.
- **Stubborn Residue:** If food residue is difficult to remove, soak the pan in warm, soapy water for 15-20 minutes before cleaning.
- Drying: Dry the pan thoroughly after washing to prevent water spots and maintain its condition.
- Storage: Store the pan in a dry place, protected from scratches.

Troubleshooting

- Pan Not Seating Properly: Ensure there are no obstructions in the bread maker's chamber and that the pan's base is correctly aligned with the drive mechanism.
- **Bread Sticking to Pan:** Ensure the non-stick coating is intact. If the coating is worn, replacement may be necessary. Always allow bread to cool slightly before attempting to remove it.
- **Kneading Paddles Not Turning:** Check that the kneading paddles are securely attached to the drive shaft inside the pan. Verify the pan is correctly seated in the bread maker.

SPECIFICATIONS

Feature	Detail
Brand	Moulinex
Pan Model Number	9235613 (SS-186157)
Compatible Bread Maker Models	Moulinex Home Bread Baguette and XXL (OW500030, OW500031, OW500032)
Capacity	Up to 1.5 Kilograms
Product Weight	820 g
Material	Stainless Steel

WARRANTY INFORMATION

Specific warranty details for this replacement pan are not provided in the product information. Please refer to the warranty documentation that came with your original Moulinex bread maker or contact Moulinex customer support for information regarding replacement parts.

SUPPORT

For further assistance, technical support, or to inquire about other replacement parts, please visit the official Moulinex website or contact their customer service department. Contact information can typically be found on the Moulinex brand website or in the original bread maker manual.

Related Documents - OW500030, OW500031, OW500032



Moulinex Home Bread Maker OW1101 User Manual

Comprehensive user manual for the Moulinex Home Bread Maker OW1101, covering preparation, operation, safety instructions, ingredients, recipes, and troubleshooting.



Manuel d'utilisation Machine à Pain Moulinex OW5000

Guide complet pour la machine à pain Moulinex OW5000, incluant les instructions de sécurité, les programmes de cuisson, les conseils pour réussir votre pain, et un guide de dépannage.



Moulinex Dolci Ice Cream Maker User Manual: Recipes, Programs, and Troubleshooting

Comprehensive user manual for the Moulinex Dolci ice cream maker. Learn to create homemade ice cream, gelato, sorbet, and frozen yogurt with detailed program guides, operational instructions, and troubleshooting advice.



 
Consignes de Sécurité et Guide d'Utilisation pour Machine à Pain Moulinex

Manuel de sécurité et d'utilisation pour la machine à pain Moulinex. Ce guide essentiel couvre les précautions d'emploi, l'utilisation sécuritaire, le nettoyage et les conseils environnementaux pour votre appareil.



Moulinex HV4 Meat Grinder Instruction Manual

Comprehensive user manual for the Moulinex HV4 meat grinder, detailing its features, accessories, usage, and cleaning instructions for optimal performance and safety.

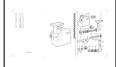

Moulinex Meat Grinder LS-123456 User Manual and Safety Instructions

Comprehensive user manual and safety instructions for the Moulinex Meat Grinder LS-123456. Includes detailed descriptions of parts, usage instructions for various accessories (sausage, kebbe, vegetable chopper), cleaning, and troubleshooting.