

[Manuals.plus](#) /

› [CSI](#) /

› CSI: Crime Scene Investigation - Season 10 DVD User Manual

CSI Season 10

CSI: Crime Scene Investigation - Season 10 DVD User Manual

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your CSI: Crime Scene Investigation - Season 10 DVD set. Please read this guide thoroughly to ensure optimal enjoyment and longevity of your product.

SETUP

Unpacking the DVD Set

1. Carefully remove the DVD case from its packaging.
2. Open the DVD case to access the discs.
3. Handle discs by their edges to avoid fingerprints and scratches on the playing surface.

Inserting a Disc into a DVD Player

1. Ensure your DVD player is powered on and connected to your television or display device.
2. Open the disc tray or slot on your DVD player.
3. Place the desired CSI: Crime Scene Investigation - Season 10 DVD disc onto the tray or into the slot with the label side facing up.
4. Close the disc tray or allow the player to draw the disc in.

OPERATING

Playing a Disc

Once the disc is loaded, your DVD player should automatically begin playing the disc or display a main menu. If it does not, press the **PLAY** button on your DVD player or remote control.

Navigating Menus

- Use the arrow keys on your remote control to highlight menu options such as **Play All**, **Episode Selection**, **Scene Selection**, **Languages**, or **Subtitles**.

- Press the **ENTER** or **OK** button to select an option.
- To return to the main menu, press the **MENU** or **TOP MENU** button on your remote control.

Language and Subtitle Options

This DVD set supports audio in **English** and **Spanish**. Subtitle options may also be available. These can typically be selected from the disc's main menu or by pressing the **AUDIO** or **SUBTITLE** button on your remote control during playback.

MAINTENANCE

Cleaning Discs

- If a disc becomes dirty, gently wipe it with a soft, lint-free cloth.
- Wipe from the center of the disc outwards in a straight line, not in a circular motion.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the disc surface.

Storage

- Always return discs to their original case after use to protect them from dust, scratches, and direct sunlight.
- Store the DVD case in a cool, dry place away from extreme temperatures and humidity.

TROUBLESHOOTING

Disc Not Playing or Loading

- Ensure the disc is inserted correctly with the label side facing up.
- Check the disc for visible scratches or smudges. Clean the disc if necessary (refer to Maintenance section).
- Verify that your DVD player is functioning correctly by trying another known-good DVD.
- Restart your DVD player and television.

Picture or Sound Issues

- Check all cable connections between your DVD player and television.
- Ensure your television input is set to the correct source for your DVD player.
- Adjust the volume on both your television and DVD player.
- Clean the disc as described in the Maintenance section.

Disc Skipping or Freezing

- Clean the disc thoroughly. Even minor smudges can cause playback issues.
- Ensure the disc is not warped or severely damaged.
- If the issue persists with multiple discs, your DVD player's laser lens may need cleaning or servicing.

SPECIFICATIONS

- **Product Title:** CSI: Crime Scene Investigation - Season 10
- **Format:** DVD
- **Number of Discs:** 7

- **Run Time:** Approximately 1042 minutes
- **Languages:** English, Spanish
- **ASIN:** B003VPX5WQ
- **Package Dimensions:** 7.1 x 5.42 x 0.58 inches
- **Package Weight:** 10.4 ounces
- **Genre:** Mystery & Thrillers
- **Key Contributors:** Adam Rodriguez, David Caruso, Emily Procter, Jonathan Togo, Rex Linn

WARRANTY AND SUPPORT

Specific warranty and support information for this product is not provided within this manual. Please refer to the product packaging or contact the retailer for details regarding returns or exchanges if necessary.