

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KODAK](#) /

› [Kodak EasyShare C195 Digital Camera User Manual](#)

KODAK C195

Kodak EasyShare C195 Digital Camera User Manual

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Kodak EasyShare C195 Digital Camera. Familiarize yourself with the camera's features and functions to capture high-quality images and videos.

WHAT'S IN THE BOX

Your Kodak EasyShare C195 Digital Camera package typically includes:

- Kodak EasyShare C195 Digital Camera
- USB Cable
- Wrist Strap
- Quick Start Guide
- Warranty Information

Note: AA batteries and an SD/SDHC memory card are not included and must be purchased separately.

SETUP

1. Install Batteries

The Kodak EasyShare C195 uses two AA alkaline batteries. Ensure correct polarity when inserting.

1. Locate the battery compartment door on the bottom of the camera.
2. Slide the latch to open the compartment door.
3. Insert two fresh AA alkaline batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Close the battery compartment door securely until it latches.



Image: Side view of the Kodak EasyShare C195, indicating the general area for battery and memory card access.

2. Insert Memory Card

The camera supports SD and SDHC memory cards. A memory card is required to store photos and videos.

1. Open the battery/memory card compartment door (usually shared).
2. Insert the SD or SDHC memory card into the card slot with the metal contacts facing the front of the camera, until it clicks into place.
3. Close the compartment door securely.

OPERATING THE CAMERA

1. Power On/Off

Press the **Power** button located on the top of the camera to turn it on or off. The lens will extend when powered on.

2. Taking Photos

To capture a still image:

1. Turn on the camera.
2. Frame your shot using the 3-inch bright LCD screen.
3. Press the **Shutter** button halfway down to activate autofocus. The camera will beep and the focus frame will turn green when focus is achieved.
4. Press the **Shutter** button all the way down to take the picture.



Image: Rear view of the Kodak EasyShare C195, showing the LCD screen and control buttons.

3. Using Zoom

The camera features a 5x optical zoom and 5x digital zoom.

- To zoom in, push the **Zoom (T)** lever.
- To zoom out, push the **Zoom (W)** lever.

4. Recording Videos

To record a video:

1. Switch the camera to video mode (if applicable, or press the dedicated video record button).
2. Press the **Record** button to start recording.
3. Press the **Record** button again to stop recording.

5. Smart Capture Feature

Kodak's Smart Capture feature automatically adjusts camera settings for optimal results in various shooting conditions, ensuring high-quality pictures with ease.

6. Reviewing Photos and Videos

Press the **Review** button (often indicated by a play icon) to view your captured images and videos on the LCD screen. Use the directional pad to navigate through your media.

FEATURES

- **14 Megapixels:** For high-quality pictures with fine detail.
- **5x Optical Zoom:** Allows you to get closer to your subjects without losing image quality.
- **3-inch Bright LCD:** Provides a clear view for framing shots and reviewing media.

- **Kodak's Smart Capture Feature:** Automatically adjusts camera settings for optimal results.
- **Image Stabilization:** Helps reduce blur caused by camera shake.
- **Multiple Shooting Modes:** Includes Easy mode for simplified operation.
- **Video Resolution:** Records videos at 480p.
- **Flash Modes:** Auto, Off, On, Slow Synch, Rear Curtain Synch.
- **Self-Timer:** 10-second delay for self-portraits or group shots.
- **Memory:** 32 MB internal memory, expandable with SD/SDHC cards.

Maintenance

Proper care ensures the longevity of your camera:

- **Cleaning:** Use a soft, lint-free cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Use only recommended AA alkaline batteries. Replace all batteries at the same time.
- **Memory Card:** Format your memory card regularly (after backing up data) to maintain optimal performance.

Troubleshooting

If you encounter issues, try these basic troubleshooting steps:

- **Camera not turning on:** Check if batteries are inserted correctly and fully charged. Replace with fresh batteries if necessary.
- **Cannot take pictures:** Ensure a memory card is inserted and has sufficient free space. Check battery level.
- **Blurry images:** Ensure the lens is clean. Hold the camera steady or use image stabilization. Check focus settings.
- **Flash not working:** Verify flash mode settings. Ensure batteries have enough power.
- **Connectivity issues:** Ensure the USB cable is securely connected to both the camera and computer. Try a different USB port.

Specifications

Feature	Detail
Brand	KODAK
Model Name	Kodak EasyShare C195
Model Number	8770414
Photo Sensor Resolution	14 MP
Optical Zoom	5x
Digital Zoom	5x

Feature	Detail
Screen Size	3 Inches
Display Type	LCD
Image Stabilization	Yes
Supported File Format	JPEG
Video Resolution	480p
Battery Cell Type	Alkaline (AA)
Flash Memory Type	SD, SDHC
Item Weight	11.84 ounces
Color	Silver

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official KODAK website. Keep your proof of purchase for warranty claims.

You can visit the [KODAK Store on Amazon](#) for more information.

© 2026 KODAK. All rights reserved. Kodak and EasyShare are trademarks of Eastman Kodak Company.