

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KODAK](#) /

› [Kodak EasyShare P750 7-inch Digital Picture Frame User Manual](#)

KODAK P750

Kodak EasyShare P750 7-inch Digital Picture Frame User Manual

Model: P750

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Kodak EasyShare P750 7-inch Digital Picture Frame. Please read these instructions carefully before using the device to ensure proper function and longevity.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Kodak EasyShare P750 Digital Picture Frame
- AC Power Adapter
- Remote Control with battery
- USB Cable
- Quick Start Guide

3. PRODUCT OVERVIEW

3.1 Front View

The front of the digital picture frame features the 7-inch LCD display, designed to showcase your digital photos with clarity.



Image: Front view of the Kodak EasyShare P750 Digital Picture Frame, showcasing the display screen.

3.2 Rear View and Connections

The rear of the frame houses the control buttons, memory card slots, USB ports, and the power input. A detachable stand is also located on the back for stable placement.



Image: Rear view of the Kodak EasyShare P750, highlighting the stand, control panel, and various input ports.

3.3 Dimensions

The frame's dimensions are provided for placement and compatibility considerations.



Image: Dimensional diagram of the Kodak EasyShare P750 Digital Picture Frame.

4. SETUP

4.1 Unpacking and Placement

1. Carefully remove all components from the packaging.
2. Place the frame on a stable, flat surface using its integrated stand. Ensure adequate ventilation around the device.

4.2 Power Connection

1. Connect the AC power adapter to the DC IN port on the back of the frame.
2. Plug the other end of the power adapter into a standard electrical outlet. The frame will power on automatically or enter standby mode.

4.3 Initial Setup

Upon first power-on, the frame may guide you through an initial setup process:

- **Language Selection:** Choose your preferred display language.
- **Date and Time:** Set the current date and time. This is important for features like the activity sensor and scheduled power on/off.

5. OPERATING INSTRUCTIONS

5.1 Navigating Menus

Use the remote control or the buttons on the back of the frame to navigate through the on-screen menus. The primary controls include:

- **Directional Buttons:** For moving up, down, left, or right.
- **OK/Enter Button:** To confirm a selection.
- **Menu Button:** To access the main menu.
- **Back Button:** To return to the previous screen.

5.2 Adding Photos

The Kodak EasyShare P750 supports adding photos from various sources:

1. **Memory Card:** Insert a compatible SD/SDHC memory card into the designated slot on the back of the frame. The frame will detect the card and prompt you to import photos.
2. **USB Drive:** Connect a USB flash drive to the USB port. Follow the on-screen prompts to browse and import images.
3. **Computer Connection:** Connect the frame to a computer using the supplied USB cable. The frame will appear as a removable storage device, allowing you to transfer photos directly to its internal 2 GB memory.

Note: For optimal performance and to utilize advanced features like keyword tagging, it is recommended to use Kodak EASYSHARE software on a computer to transfer images to the frame's internal memory.

5.3 Viewing Photos and Slideshows

Once photos are loaded, the frame will typically begin a slideshow automatically. You can customize the

slideshow settings:

- **Slideshow Interval:** Adjust the duration each photo is displayed.
- **Transition Effects:** Select from available transition styles (e.g., fade in/out, slide from left).
- **Photo Order:** Choose sequential or random playback.

5.4 Adjusting Settings

Access the main menu to configure various frame settings:

- **Display Settings:** Adjust brightness, contrast, and color saturation.
- **Power Management:** Set scheduled power on/off times. The frame also features an energy-saving activity sensor that can automatically turn the display on or off based on detected motion.
- **Internal Memory Management:** View available storage, delete photos, or format the internal memory.

6. MAINTENANCE

6.1 Cleaning the Frame

To clean the screen and frame exterior:

- Power off the frame and disconnect it from the power source.
- Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution designed for electronics.
- Wipe the frame's exterior with a dry, soft cloth. Avoid abrasive cleaners or solvents.

6.2 Firmware Updates

Periodically check the official Kodak support website for any available firmware updates. Updates can improve performance, add features, or resolve issues. Follow the instructions provided with the update file for installation.

7. TROUBLESHOOTING

If you encounter issues with your digital picture frame, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Frame does not power on.	Ensure the AC power adapter is securely connected to both the frame and a working electrical outlet. Test the outlet with another device.
"White screen" or display issues.	Try restarting the frame by disconnecting and reconnecting the power. If the issue persists, contact customer support.

Problem	Possible Cause / Solution
Photos are not displaying.	Verify that photos are stored in a compatible format (e.g., JPEG). Ensure memory cards or USB drives are properly inserted and contain images. Check if photos have been successfully transferred to internal memory.
Activity sensor not working consistently.	Ensure the sensor is not obstructed. Check the power management settings to confirm the activity sensor feature is enabled. Environmental factors (e.g., direct sunlight, extreme temperatures) can affect sensor performance.
Remote control is unresponsive.	Check and replace the remote control battery. Ensure there are no obstructions between the remote and the frame's IR receiver.

8. SPECIFICATIONS

Feature	Detail
Model Number	8054983
Screen Size	7 Inches (17.8 cm)
Resolution	SVGA
Internal Memory	2 GB
Connectivity	Wired (USB)
Power Source	Corded Electric
Product Dimensions	9.37 x 3.31 x 7.01 inches
Item Weight	1.75 pounds

9. WARRANTY AND SUPPORT

For warranty information, technical assistance, or customer support, please refer to the warranty card included with your product or visit the official Kodak support website. Keep your proof of purchase for warranty claims.

