

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix S2800HD 14 MP Digital Camera User Manual

Fujifilm FinePix S2800HD

Fujifilm FinePix S2800HD 14 MP Digital Camera User Manual

Model: FinePix S2800HD

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Fujifilm FinePix S2800HD digital camera. Please read this manual thoroughly before using the camera and retain it for future reference.



An angled view of the Fujifilm FinePix S2800HD digital camera, showcasing its black body, large optical zoom lens, and the pop-up flash unit in an open position. The camera features a textured grip for comfortable handling.

SETUP

Before using your camera, follow these steps for initial setup.

1. Battery Installation

The FinePix S2800HD operates on four AA batteries. For optimal performance, use high-quality alkaline, NiMH rechargeable, or lithium batteries.

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert four AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Note: The camera consumes batteries quickly. It is recommended to use rechargeable NiMH batteries and have spares available.

2. Memory Card Insertion

The camera uses SD or SDHC memory cards (not included) for storing photos and videos.

1. Locate the memory card slot, usually near the battery compartment.
2. Insert the SD/SDHC card with the label facing the front of the camera until it clicks into place.
3. To remove, press the card gently to release it, then pull it out.

Caution: Ensure the camera is off before inserting or removing the memory card to prevent data corruption.

3. Initial Power On and Date/Time Setting

1. Press the **ON/OFF** button to power on the camera.
2. The first time you power on, you may be prompted to set the date and time. Use the directional buttons to navigate and the MENU/OK button to confirm.

OPERATING INSTRUCTIONS

1. Basic Photography

- **Power On/Off:** Press the **ON/OFF** button.
- **Shooting Modes:** Rotate the mode dial (labeled 'M', 'SP', 'SR AUTO', etc.) on the top of the camera to select your desired shooting mode.
 - **SR AUTO (Scene Recognition Auto):** Automatically detects the scene type and optimizes settings for focus, exposure, and white balance.
 - **Motion Panorama Mode:** Capture panoramic images by panning the camera. The camera stitches multiple shots together automatically.
 - **Smile Detection:** The camera automatically releases the shutter when it detects a smile.
 - **Blink Detection:** Warns you if a subject has blinked, allowing you to retake the photo.
 - **Face Detection:** Detects up to 10 faces, optimizing focus and exposure. Includes automatic red-eye removal.
 - **Tracking Auto Focus:** Maintains focus on a moving subject for clear still pictures.
- **Zoom:** Use the zoom lever around the shutter button to adjust the 18x optical zoom. The camera also features a 6.7x digital zoom.
- **Image Stabilization:** The camera features Dual Image Stabilization (mechanically stabilized CCD sensor and high ISO sensitivity) to reduce blur, especially in low light or at telephoto ranges.
- **Flash:** The built-in flash can be manually popped up or set to automatic modes. Adjust flash settings via the menu.
- **Focusing:** The camera uses TTL (Through-The-Lens) autofocus with single and continuous modes. Half-press the shutter button to focus before fully pressing to capture the image.
- **Exposure Control:** Primarily automatic, with options for exposure compensation in certain modes.
- **Self-Timer:** Set a 10-second delay before the shutter releases.
- **White Balance:** Automatic white balance adjustment, with preset options available in the menu.
- **ISO Sensitivity:** Supports high sensitivity up to ISO 6400 for low-light conditions.

2. Video Recording

The FinePix S2800HD can record HD movies at 720p resolution with sound.

1. Switch to video recording mode (refer to the mode dial or menu).
2. Press the shutter button to start recording.
3. Press the shutter button again to stop recording.

3. Playback and Review

- **Viewing Images/Videos:** Press the playback button (usually indicated by a play icon). Use directional buttons to navigate through your media.
- **Auto Picture Rotation:** Images automatically rotate for correct viewing orientation during playback.
- **Image Retrieval (Picture Search):** Use the Picture Search tool to quickly find photos based on the scene mode they were taken in (e.g., Portrait, Macro).

4. Connecting to External Devices

- **HDMI Output:** Connect the camera to an HDTV using a Mini HDMI cable (included) for viewing photos and videos on a larger screen.
- **USB Connection:** Connect the camera to a computer using a USB cable to transfer images and videos.

MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water.
- **Cleaning the Lens:** Use a lens brush or a soft, clean microfiber cloth specifically designed for camera lenses. Avoid touching the lens surface with your fingers.
- **Cleaning the LCD Screen:** Gently wipe the LCD screen with a soft, dry cloth. Avoid pressing too hard.
- **Battery Care:** Remove batteries when the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **Memory Card Care:** Format memory cards regularly (after backing up data) to maintain optimal performance. Avoid exposing memory cards to extreme temperatures or magnetic fields.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace batteries with fresh ones or ensure correct polarity.
Images are blurry.	Camera shake, subject movement, or incorrect focus.	Hold the camera steady, use image stabilization, ensure proper focus by half-pressing the shutter button.
Camera is slow to respond or capture.	Low battery power, slow memory card, or complex scene.	Replace batteries, use a faster SDHC card, or simplify the scene.
No images can be saved.	Memory card full or locked.	Delete unnecessary images, insert a new card, or unlock the memory card's write-protect switch.
Red-eye in photos.	Flash used in low light.	Enable red-eye reduction flash mode or use the automatic red-eye removal feature.

SPECIFICATIONS

Model Name	Fujifilm FinePix S2800HD
------------	--------------------------

Image Sensor	14 MP, 1/2.3-inch CCD
Lens	Fujinon 18x Optical Zoom (28mm-504mm equivalent)
Digital Zoom	Approx. 6.7x
Image Stabilization	Dual Image Stabilization (Sensor-shift)
LCD Monitor	3.0-inch, 230,000 dots
Viewfinder	Electronic
Video Recording	720p HD with sound (MJPEG format)
Storage Media	SD/SDHC memory cards
ISO Sensitivity	Auto, ISO 64-6400
Connectivity	HDMI (Mini), USB 2.0
Power Supply	4 x AA alkaline, NiMH, or lithium batteries
Dimensions (approx.)	Item Height: 2.91 inches (other dimensions not specified in input)
Weight (approx.)	15.36 ounces (without batteries/card)

WARRANTY INFORMATION

The Fujifilm FinePix S2800HD digital camera comes with a **1-year warranty** covering parts and labor from the date of purchase. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Fujifilm website.

SUPPORT AND CONTACT

For further assistance, technical support, or service inquiries, please visit the official Fujifilm support website or contact their customer service department. Contact information can typically be found on the Fujifilm website or in the documentation provided with your camera.

Online Resources: www.fujifilm.com

PRODUCT VIDEOS

No official product videos from the seller were found for this model in the provided data.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B003VYB1K0>

More documents and user manuals: <https://manuals.plus/>