

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [SANYO](#) /

> [SANYO 6.0kg Automatic Washing Machine ASW-60D-W User Manual](#)

SANYO ASW-60D-W

SANYO 6.0kg Automatic Washing Machine ASW-60D-W

User Manual

1. INTRODUCTION

Thank you for purchasing the SANYO 6.0kg Automatic Washing Machine, model ASW-60D-W. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the washing machine and retain it for future reference.

This washing machine is designed for household use to wash various types of laundry. Its 6.0kg capacity is suitable for average family loads. Proper use will ensure optimal performance and longevity of the product.

2. SAFETY INFORMATION

To prevent injury to yourself and others, and to avoid property damage, please observe the following safety precautions:

- Always ensure the washing machine is properly grounded to prevent electric shock.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the washing machine during operation.
- Do not wash items that are soiled with flammable substances (e.g., gasoline, kerosene) as this may cause fire or explosion.
- Never reach into the washing machine while it is operating or spinning.
- Ensure the water supply hoses are securely connected to prevent leaks.
- Unplug the washing machine from the power outlet before cleaning, performing maintenance, or if it will be unused for an extended period.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel for repairs.

3. PRODUCT OVERVIEW

The SANYO ASW-60D-W is a top-loading automatic washing machine. Familiarize yourself with its main components:

- **Control Panel:** Located on the top, it features buttons for program selection, start/pause, and power.

- **Lid:** The top-access lid for loading and unloading laundry.
- **Washing Tub/Drum:** The inner container where laundry is washed.
- **Detergent Dispenser:** Compartment for adding detergent and fabric softener.
- **Lint Filter:** Collects lint during the wash cycle (location may vary, typically inside the tub or on the agitator).
- **Water Inlet Hoses:** Connections for hot and cold water supply at the rear.
- **Drain Hose:** For expelling used water, located at the rear.
- **Power Cord:** For electrical connection.



Figure 1: Front view of the SANYO ASW-60D-W Automatic Washing Machine. This image displays the overall design of the washing machine, including the top-loading lid and the control panel area.

4. SETUP AND INSTALLATION

Proper installation is crucial for the washing machine's performance and safety.

4.1 Unpacking

- Carefully remove all packaging materials.
- Check for any shipping damage. If damaged, do not install and contact your retailer.
- Remove any transit bolts or packing materials from inside the drum.

4.2 Location

- Place the washing machine on a firm, level surface to minimize vibration and noise.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or locations with extreme temperatures.

4.3 Leveling

- Use a spirit level to ensure the machine is perfectly level.
- Adjust the leveling feet at the bottom of the machine as needed.

4.4 Water Connection

- Connect the water inlet hoses to the corresponding hot and cold water taps.
- Ensure connections are tight to prevent leaks.
- Open the water taps fully.

4.5 Drain Hose

- Position the drain hose into a standpipe or laundry tub, ensuring it is securely fixed to prevent it from dislodging during drainage.
- The end of the drain hose must be higher than the water level in the washing machine to prevent siphoning.

4.6 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

Follow these steps for a typical wash cycle:

1. **Prepare Laundry:** Sort laundry by fabric type, color, and soil level. Empty pockets and close zippers.
2. **Load Laundry:** Open the lid and load items loosely into the washing tub. Do not overload the machine; ensure there is enough space for clothes to move freely.
3. **Add Detergent:** Pour the recommended amount of detergent into the detergent dispenser. If using fabric softener, add it to the designated compartment.
4. **Close Lid:** Ensure the lid is securely closed. The machine will not operate if the lid is open.
5. **Select Wash Program:** Turn on the power. Use the control panel buttons to select the desired wash program (e.g., Normal, Delicate, Heavy Duty).
6. **Adjust Settings (Optional):** Depending on the model, you may be able to adjust water level, rinse cycles, or spin speed.
7. **Start Cycle:** Press the "Start/Pause" button to begin the wash cycle.
8. **End of Cycle:** The machine will signal when the cycle is complete. Open the lid and remove your laundry promptly to prevent wrinkles.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and efficiency of your washing machine.

6.1 Cleaning the Lint Filter

- Clean the lint filter after every few washes or when you notice lint on your clothes.
- Remove the filter (refer to your machine's specific design for location).
- Rinse it under running water to remove collected lint.
- Reinsert the filter securely.

6.2 Cleaning the Detergent Dispenser

- Periodically clean the detergent dispenser to prevent residue buildup.
- Remove the dispenser drawer (if removable) and wash it with warm water and a brush.
- Wipe the housing of the dispenser with a damp cloth.

6.3 Cleaning the Washing Tub

- Run a tub clean cycle (if available) or a hot wash cycle with a washing machine cleaner or a cup of white vinegar and baking soda once a month to prevent mold and odors.

6.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, try these solutions for common issues:

| Problem | Possible Cause | Solution |
|---------------------------|--|---|
| Machine does not start | Power cord unplugged; Lid not closed; Water taps closed; Program not selected. | Check power connection; Close lid securely; Open water taps; Select a wash program. |
| No water filling | Water taps closed; Water inlet hose kinked; Water pressure too low. | Open water taps; Straighten hose; Check household water supply. |
| Machine not draining | Drain hose kinked or blocked; Drain pump filter clogged. | Straighten or clear drain hose; Clean drain pump filter (refer to specific model instructions). |
| Excessive vibration/noise | Machine not level; Overloaded or unbalanced load; Transit bolts not removed. | Level the machine; Redistribute laundry; Ensure transit bolts are removed. |
| Water leaks | Loose hose connections; Damaged hoses. | Tighten all hose connections; Replace damaged hoses. |

If the problem persists after trying these solutions, unplug the machine and contact customer service.

8. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|---------------------------|
| Brand | SANYO Electric |
| Model Number | ASW-60D-W |
| Capacity | 6.0 kg |
| Color | White |
| Product Dimensions (D x W x H) | 53.4 cm x 56.5 cm x 89 cm |
| Access Type | Top Load |
| Human Interface Input | Buttons |
| ASIN | B003WA3R4G |

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your retailer. Keep your purchase receipt as proof of purchase.

For technical support, service, or to order replacement parts, please contact SANYO customer service or your authorized service provider. Contact details can typically be found on the manufacturer's official website or in the documentation provided with your appliance.

© 2024 SANYO Electric. All rights reserved.