

Classic 5052563564043

User Manual for Classic Replacement Remote Control

Model: Telefunken A-930 S Compatible Remote

INTRODUCTION

This manual provides comprehensive instructions for the Classic replacement remote control, specifically designed for the Telefunken A-930 S television model. This remote is a dedicated replacement, not a generic universal remote, and is engineered to perform all fixed functions of your original Telefunken A-930 S remote control, excluding any reprogrammable buttons.

It is designed for immediate use, requiring no complex programming or setup. Simply insert the provided batteries, and the remote is ready to operate your compatible device.

PRODUCT OVERVIEW



Figure 1: Classic Replacement Remote Control and Included Batteries

This image displays the Classic replacement remote control, a light grey unit with dark blue buttons, designed for the Telefunken A-930 S. Two green 'Green Cell' AAA batteries are shown alongside the remote, indicating they are included and required for operation. The remote features standard numeric keys (1-9, 0), function keys like TV, VCR, AV, Tuner, and navigation controls, along with volume and channel buttons. The brand "Classic" and model identifier "IRC82010" are visible on the lower right of the remote.

SETUP

The Classic replacement remote control is designed for ease of use and requires minimal setup. Follow these steps to begin using your remote:

1. **Battery Installation:** Locate the battery compartment on the back of the remote control. Slide open the battery cover.
2. **Insert Batteries:** Insert the two supplied AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close Compartment:** Slide the battery cover back into place until it clicks securely.
4. **No Programming Required:** This remote control is pre-programmed for the Telefunken A-930 S and does not require any additional programming or code entry. It is ready for immediate use once batteries are installed.

If the remote does not respond after battery installation, please refer to the Troubleshooting section.

OPERATING INSTRUCTIONS

This replacement remote control replicates the primary functions of your original Telefunken A-930 S remote. Point the remote directly at your Telefunken A-930 S device and press the desired button.

- **Power Button ():** Located at the top right, press to turn your Telefunken A-930 S device on or off.
- **Numeric Buttons (0-9):** Use these buttons to directly select channels or input numerical values.
- **Channel Up/Down (▲ / ▼):** Navigate through channels sequentially.
- **Volume Up/Down (+/-):** Adjust the audio volume level.
- **Mute Button ():** Mute or unmute the audio output.
- **Input/Source Buttons (TV, VCR, AV, Tuner):** Select the desired input source for your television.
- **Navigation Buttons (Arrows and OK/Enter):** Use the directional arrows to navigate menus and the central button to confirm selections.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** If your Telefunken A-930 S supports VCR or other media playback, these buttons control playback functions.
- **Special Functions (REC, TIME LP, TIMER 1-8, CLOCK SET, CURSOR):** These buttons provide access to specific recording, timer, and clock setting functions as supported by your Telefunken A-930 S.

For detailed information on specific functions and advanced features of your Telefunken A-930 S, please refer to the original device's instruction manual.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.
- **Avoid Damage:** Do not drop the remote, expose it to water, or attempt to disassemble it.

TROUBLESHOOTING

If you experience issues with your Classic replacement remote control, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|------------------------------|---|--|
| Remote is not responding. | Batteries are dead or incorrectly inserted. | Replace both AAA batteries with new ones, ensuring correct polarity (+/-). |
| Remote works intermittently. | Low battery power; obstruction between remote and device; remote sensor on device is blocked. | Replace batteries. Ensure a clear line of sight between the remote and the Telefunken A-930 S. Remove any obstructions. |
| Certain buttons do not work. | Button malfunction; function not supported by the device. | Ensure the button is clean and not stuck. Verify if the function is supported by your Telefunken A-930 S model. This remote performs fixed functions only. |

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS





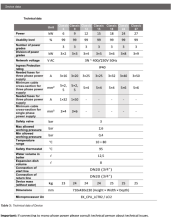

| Feature | Detail |
|----------------------|----------------------------|
| Product Type | Replacement Remote Control |
| Brand | Classic |
| Compatible Devices | Telefunken A-930 S |
| Model Number | 5052563564043 |
| ASIN | B003WCTTWI |
| Batteries Required | 2 x AAA (included) |
| Manufacturer | Classic |
| Country of Origin | Korea, Republic of |
| First Available Date | 18 July 2010 |

WARRANTY AND SUPPORT

This Classic replacement remote control comes with a **12-month guarantee** from the date of purchase, covering manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or any inquiries regarding your remote control, please contact the retailer or manufacturer directly. Please retain your proof of purchase for warranty validation.

Related Documents - 5052563564043

| | |
|---|---|
|  | <p>Classic CDR200 CD Recorder/Player Owner's Manual</p> <p>Owner's manual for the Classic CDR200 CD Recorder/Player, detailing setup, controls, connections, playback, recording, and finalizing procedures.</p> |
|  | <p>Classic Air Conditioners Service Manual: Installation, Operation, and Troubleshooting</p> <p>Comprehensive service manual for Classic Air Conditioners, covering model specifications, installation guides, operational functions, electrical characteristics, and detailed troubleshooting procedures for various models.</p> |
|  | <p>Classic Ceramic Heater 3836W524 Owner's Manual</p> <p>Owner's manual for the Classic 750/1500W Ceramic Heater with Oscillating Function (Model 3836W524). Includes important safety instructions, operating instructions, troubleshooting guide, and warranty information from Home Hardware Stores Limited.</p> |
|  | <p>Fiche Technique : Bac à Bec Classic - Dimensions, Spécifications et Accessoires</p> <p>Fiche technique détaillée pour le bac à bec Classic, incluant ses dimensions (50x100x95/65 mm), matériau polypropylène, résistance thermique, et compatibilité avec les convoyeurs. Découvrez également les accessoires et systèmes de rayonnage compatibles.</p> |
|  | <p>Classic Series Boiler Technical Specifications and Data</p> <p>Comprehensive technical data for the Classic series boiler system, including power ratings, electrical specifications, pressure limits, temperature ranges, dimensions, and microprocessor details. Model identifiers EK_CPU_LCTR2 / LCI2.</p> |
|  | <p>Classic Faceplate Column Insert Mailbox: Dimensions and Specifications</p> <p>Detailed dimensions for the Classic Faceplate Column Insert Mailbox, including faceplate and can measurements. Essential specifications for this residential mailbox.</p> |

