

[manuals.plus](#) /› [Bomann](#) /› [Bomann JM 1025 CB Yoghurt Maker Instruction Manual](#)

Bomann JM 1025 CB

Bomann JM 1025 CB Yoghurt Maker Instruction Manual

INTRODUCTION

Thank you for choosing the Bomann JM 1025 CB Yoghurt Maker. This appliance is designed for the simple and convenient preparation of homemade yoghurt. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance. Keep these instructions for future reference.

SAFETY INSTRUCTIONS

- Always unplug the appliance from the power outlet before cleaning or when not in use.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- This appliance is intended for household use only. Do not use it outdoors.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact qualified service personnel for repair.
- Place the appliance on a stable, heat-resistant, and dry surface.
- Do not place the appliance near hot surfaces or open flames.
- Avoid touching hot surfaces during and immediately after operation. Use handles or knobs.

PRODUCT OVERVIEW

The Bomann JM 1025 CB Yoghurt Maker consists of the following main components:

- Main Yoghurt Maker Unit with heating element and illuminated On/Off switch.
- Transparent Lid.
- Seven (7) Glass Jars with Screw Lids (capacity: 160 ml each).



Image: The Bemann JM 1025 CB Yoghurt Maker, showing its compact design, the seven glass jars inside, and the transparent lid. A serving of fresh yoghurt with blueberries and mint is displayed alongside the appliance.

SETUP

- 1. Unpack:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
- 2. Initial Cleaning:** Before first use, wash the glass jars and their screw lids, as well as the transparent lid, in warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
- 3. Placement:** Place the yoghurt maker on a clean, dry, stable, and heat-resistant surface, away from direct sunlight or heat sources.

OPERATING INSTRUCTIONS

Follow these steps to prepare homemade yoghurt:

1. Prepare the Yoghurt Mixture:

- Heat 1 liter of milk (full-fat, semi-skimmed, or skimmed) to approximately 45-50°C. This temperature is crucial for activating the yoghurt cultures.
- Allow the milk to cool to about 40-45°C. It should be warm to the touch but not hot.
- Add 2-3 tablespoons of plain, natural yoghurt with live cultures (as a starter) or a packet of commercial yoghurt starter culture to the cooled milk. Stir well until fully combined. Ensure the starter yoghurt has the same fat content as the milk for best results.

- Optional: Add sugar or other flavorings at this stage if desired.

2. **Fill the Jars:** Pour the prepared yoghurt mixture evenly into the seven clean glass jars. Do not overfill.
3. **Place Jars in Unit:** Place the filled, open glass jars into the yoghurt maker unit.
4. **Cover:** Place the transparent lid securely onto the yoghurt maker unit.
5. **Connect to Power:** Plug the appliance into a suitable 230 Volt power outlet.
6. **Start Fermentation:** Press the illuminated On/Off switch to turn on the appliance. The indicator light will illuminate, signifying that the heating process has begun.
7. **Fermentation Time:** Allow the yoghurt to ferment for approximately 8-9 hours. The exact time may vary depending on the desired consistency and ambient temperature. Longer fermentation generally results in a thicker and tangier yoghurt.
8. **Switch Off:** Once the desired consistency is achieved, press the On/Off switch to turn off the appliance. Unplug the appliance from the power outlet.
9. **Cool and Store:** Remove the glass jars from the yoghurt maker. Screw on their lids. Allow the yoghurt to cool completely at room temperature before refrigerating. Store the finished yoghurt in the refrigerator for up to one week.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your yoghurt maker.

- **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water or any other liquid.
- **Glass Jars and Lids:** The glass jars and their screw lids, as well as the transparent lid, are dishwasher safe. Alternatively, they can be washed by hand in warm soapy water, rinsed thoroughly, and dried completely before storage or next use.
- **Storage:** Store the clean and dry appliance in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your yoghurt maker, consider the following common solutions:

- **Yoghurt is too watery or not setting:**
 - Ensure the milk was heated to the correct temperature (45-50°C) and cooled to the correct temperature (40-45°C) before adding the starter.
 - Verify that the starter yoghurt contains live, active cultures. Using old or inactive starter yoghurt will prevent proper fermentation.
 - Increase the fermentation time. Some recipes or desired consistencies may require longer than 8-9 hours.
 - Ensure the milk and starter yoghurt have similar fat content.
 - Avoid disturbing the yoghurt maker during the fermentation process.
- **Yoghurt is too sour:**

- Reduce the fermentation time.
- Ensure the ambient temperature is not excessively high.

• **Appliance does not turn on:**

- Check if the power cord is securely plugged into both the appliance and the wall outlet.
- Ensure the wall outlet is functioning correctly by testing it with another appliance.
- Verify that the On/Off switch is pressed.

If problems persist, contact customer support or a qualified technician.

SPECIFICATIONS

Brand:	Bomann
Model Number:	JM 1025 CB
Manufacturer Model Number:	610250
Capacity:	1.1 Liters (7 x 160 ml jars)
Power/Wattage:	14 Watts
Voltage:	230 Volts
Product Dimensions (L x W x H):	26.5 x 24 x 15 cm
Weight:	1.82 kg
Color:	Transparent, White

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact the retailer where the product was purchased. For technical support or service inquiries, please contact Bomann customer service or your local distributor. Keep your proof of purchase for warranty claims.