

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Casio](#) /
- › [Casio G-Shock GA100-1A1 User Manual](#)

Casio GA-100-1A1DR (G270)

Casio G-Shock GA100-1A1 User Manual

Model: GA-100-1A1DR (G270) | Brand: Casio

PRODUCT OVERVIEW

The Casio G-SHOCK GA100-1A1 is a robust and versatile analog-digital timepiece engineered for extreme durability and precision. It features shock resistance, magnetic resistance, and 200-meter water resistance, making it suitable for demanding environments and activities. Its design combines a matte black resin case and band with an oversized face and high-contrast display for optimal readability. This model is equipped with various functions including a 1/1000-second stopwatch, speed indicator, countdown timer, LED backlight with afterglow, five daily alarms, and world time settings.



Figure 1: Front view of the Casio G-Shock GA100-1A1 watch, showcasing its analog and digital displays, and rugged black design.

KEY FEATURES

- **Shock Resistant:** Engineered to withstand impacts and vibrations.
- **Magnetic Resistant:** Protects against magnetic fields that can affect timekeeping accuracy.
- **200M Water Resistant:** Suitable for professional marine activity and serious surface water sports, but not diving.
- **Auto LED Light with Afterglow:** Provides illumination for easy reading in low-light conditions, with a customizable afterglow duration.
- **1/1000-Second Stopwatch:** High-precision stopwatch function for timing events.
- **Speed Indicator:** Calculates and displays average speed based on distance and time.

- **Countdown Timer:** Set a timer for specific durations, up to 24 hours.
- **World Time:** Displays current time in 29 time zones (48 cities + UTC).
- **5 Daily Alarms + 1 Snooze Alarm:** Multiple alarms for daily reminders.
- **Hourly Time Signal:** An audible beep every hour on the hour.
- **Full Auto-Calendar:** Pre-programmed calendar until the year 2099.
- **12/24-Hour Format:** Option to display time in either 12-hour or 24-hour format.

SETUP

Upon first use or after a battery change, it is necessary to set the watch's time and date. The GA100-1A1 features both analog hands and digital displays that need to be synchronized. Refer to the detailed instructions below for initial setup.

Initial Time and Date Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button (top left) until the city code starts to flash in the digital display. This indicates the setting mode.
2. Use the **FORWARD** (top right) and **REVERSE** (bottom right) buttons to select your desired city code (time zone).
3. Press the **MODE** button (bottom left) to cycle through the settings: DST (Daylight Saving Time), 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day.
4. Use the **FORWARD** and **REVERSE** buttons to adjust each setting as it flashes.
5. After setting the digital time, the analog hands will automatically adjust to match the digital time. If they do not, or if they are misaligned, refer to the "Hand Home Position Correction" section in the full manual.
6. Press the **ADJUST** button to exit the setting mode.

OPERATING INSTRUCTIONS

The GA100-1A1 offers multiple modes for various functions. Use the **MODE** button (bottom left) to navigate between them.

Mode Navigation

- **Timekeeping Mode:** Displays current time, date, and day of the week. This is the default mode.
- **Stopwatch Mode (STW):** Press **MODE** once from Timekeeping Mode.
 - Press **START/STOP** (bottom right) to start/stop the stopwatch.
 - Press **SPLIT/RESET** (top right) for split times or to reset the stopwatch when stopped.
 - Features 1/1000-second measurement and speed calculation.
- **Countdown Timer Mode (TMR):** Press **MODE** twice from Timekeeping Mode.
 - Set the countdown start time (up to 24 hours) using **ADJUST** and **FORWARD/REVERSE** buttons.
 - Press **START/STOP** to begin the countdown.
- **World Time Mode (WT):** Press **MODE** three times from Timekeeping Mode.
 - Use **FORWARD/REVERSE** to view times in different city codes.
- **Alarm Mode (ALM):** Press **MODE** four times from Timekeeping Mode.
 - Cycle through AL1 to AL5, SNZ (Snooze), and SIG (Hourly Time Signal) using **FORWARD/REVERSE**.
 - To set an alarm, select the desired alarm (e.g., AL1), hold **ADJUST**, then use **FORWARD/REVERSE** to set the time. Press **ADJUST** to confirm.
- **LED Backlight:** Press the **LIGHT** button (top right) to illuminate the display.
 - The Auto LED Light feature can be enabled/disabled by holding the **LIGHT** button in Timekeeping Mode. When enabled, the light automatically turns on when the watch is tilted towards your face in a dark environment.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your G-Shock watch.

Cleaning

- Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture.
- For stubborn dirt, use a mild soap solution and a soft brush, then rinse thoroughly with fresh water and dry completely.
- Avoid using chemical cleaners or solvents, as they can damage the resin materials.

Water Resistance Care

- Rinse the watch with fresh water after exposure to saltwater or chlorine to prevent corrosion.
- Do not operate the buttons while the watch is submerged in water or wet.
- Avoid exposing the watch to extreme temperature changes (e.g., hot showers followed by cold water).

Battery Replacement

The watch uses 1 Lithium Metal battery (included). When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by an authorized Casio service center to ensure proper sealing and water resistance.

TROUBLESHOOTING

Common issues and their potential solutions.

• Time is inaccurate:

- Check if the Home City setting is correct for your time zone.
- Verify Daylight Saving Time (DST) setting is correct.
- Perform a Hand Home Position Correction if analog hands do not match digital time.

• Digital display is blank or dim:

- The battery may be low. Replace the battery.
- Ensure the watch is not in Power Saving mode (if applicable, though not a primary feature of this model).

• Buttons are unresponsive:

- Ensure the watch is not wet when operating buttons.
- If the watch has been exposed to extreme conditions, allow it to return to normal temperature.

For persistent issues, contact Casio customer support or an authorized service center.

SPECIFICATIONS

Brand	Casio
Model Number	GA-100-1A1DR (G270)
Product Dimensions	1 x 1 x 1 inches
Item Weight	2.5 ounces
Water Resistance	200 Meters (20 BAR)
Battery Type	1 Lithium Metal battery (included)
Material	Blend (Resin case and band)

Country of Origin	China
First Available Date	March 16, 2010

WARRANTY AND SUPPORT

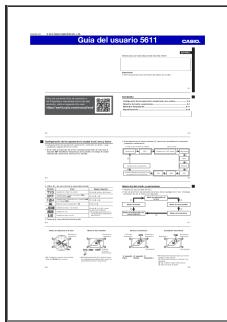
This Casio G-Shock watch comes with a manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Casio website.

For technical support, service, or inquiries regarding your Casio G-Shock GA100-1A1, please contact Casio customer service through their official channels. You can find contact information and frequently asked questions on the [Casio Support Website](#).

Please note the legal disclaimer provided with the product: "This watch is used, but like brand new. also it is navy blue". However, based on customer reviews, the product is typically new and black as advertised, despite this disclaimer.

Related Documents - GA-100-1A1DR (G270)

	<p>Casio G-Shock Watch Guide: History, Models, and Time Setting</p> <p>Explore the history and evolution of Casio G-Shock watches, discover key models like the Gravitymaster and Rangeman, and learn how to set the time on your digital or analog G-Shock timepiece.</p>
	<p>Casio G-Shock Database: Durability and Specifications</p> <p>Explore the Casio G-Shock Database for comprehensive details on shock-resistant and water-resistant watches. Find specifications, features, and heritage of the iconic G-Shock line.</p>
	<p>CASIO G-SHOCK GA-400 Watch Instruction Manual</p> <p>Comprehensive instruction manual for the CASIO G-SHOCK GA-400 watch, module 5398, covering features, operation, and maintenance. Includes details on timekeeping, alarms, stopwatch, world time, and water resistance.</p>

	<p>Guía del Usuario 5611 CASIO</p> <p>Manual de usuario para el reloj CASIO modelo 5611. Incluye configuración de hora, fecha, ciudad local, modos de operación, cronómetro, alarma y especificaciones técnicas.</p>
	<p>Casio G-Shock Watch Module 3031 User Manual (G-800/9000/9025)</p> <p>Comprehensive user manual for Casio G-Shock watches, Module 3031, covering models G-800, G-9000, and G-9025. Details include international warranty information, water resistance guidelines, operating modes (Current Time, Stopwatch, Countdown Timer, Alarm, World Time), care instructions, technical specifications, and product information.</p>
	<p>Casio G-SHOCK GLS-6900 Watch User Manual and Specifications</p> <p>Comprehensive guide to the Casio G-SHOCK GLS-6900 digital watch, covering timekeeping, alarms, stopwatch, timer, world time, water resistance, and international distributor information.</p>