

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Case Logic](#) /
- › [Case Logic 16-inch Laptop Backpack \(DLBP-116\) Instruction Manual](#)

Case Logic DLBP-116

Case Logic 16-inch Laptop Backpack (DLBP-116) Instruction Manual

Brand: Case Logic | **Model:** DLBP-116

INTRODUCTION

This manual provides comprehensive instructions for the Case Logic 16-inch Laptop Backpack (Model DLBP-116). Designed for comfort and usability, this backpack offers dedicated storage and organization for your laptop and essential accessories. Please read this manual thoroughly to understand the features and proper use of your new backpack.

KEY FEATURES

- **Dedicated Laptop Compartment:** Securely holds most laptops with up to a 16-inch screen.
- **Front Organization Pocket:** A zippered front pocket designed to organize your cell phone, MP3 player, cords, and other small accessories.
- **Scratch-Resistant Top Pocket:** A zippered pocket at the top, lined with a soft, felt-like material, ideal for sunglasses or touch screen devices.
- **Adjustable Shoulder Straps:** Features a strap management system to keep excess strap material rolled up and out of the way, ensuring a clean look and comfortable fit.
- **Device Compatibility:** Fits devices up to 15.2 x 1.8 x 10.8 inches.

SETUP AND ADJUSTMENT

To ensure optimal comfort and weight distribution, properly adjust the backpack straps before use.

1. **Adjust Shoulder Straps:** Place the backpack on your back. Use the adjustable buckles on the shoulder straps to raise or lower the backpack until it rests comfortably on your upper back, with the weight evenly distributed.
2. **Secure Excess Straps:** Utilize the integrated strap management system to roll up any excess strap material and secure it, preventing dangling straps.



Figure 1: Proper fit of the backpack with adjusted shoulder straps.

OPERATING INSTRUCTIONS

The Case Logic DLBP-116 backpack is designed for efficient organization of your daily essentials and electronic devices.

Storing Your Laptop and Tablet

Utilize the dedicated padded compartment for your laptop and the additional sleeve for a tablet or documents.



Figure 2: Inserting a laptop into its dedicated compartment.

Organizing Accessories

The front pocket offers multiple sleeves and zippered sections for smaller items.



Figure 3: Organized main compartment with accessories.

Using the Top Pocket

The soft-lined top pocket is ideal for delicate items like sunglasses or a smartphone.



Figure 4: Storing sunglasses in the top pocket.

Side Pockets

The zippered side pockets can hold items such as a water bottle or small essentials.



Figure 5: Water bottle in the side pocket.

Product Overview Video

Your browser does not support the video tag.

Video 1: A detailed overview of the Case Logic Laptop Backpack, demonstrating its features and storage capabilities.

MAINTENANCE

To maintain the longevity and appearance of your Case Logic backpack, follow these care instructions:

- **Cleaning:** Spot clean with a damp cloth and mild soap. Do not machine wash or tumble dry.
- **Drying:** Air dry the backpack completely before storing or reusing. Avoid direct sunlight or heat.
- **Storage:** Store in a cool, dry place away from extreme temperatures.
- **Zippers:** Periodically check zippers for smooth operation. If a zipper becomes stiff, apply a small amount of

zipper lubricant or wax.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Strap Discomfort:** If the backpack feels uncomfortable, re-adjust the shoulder straps to ensure the weight is evenly distributed and the pack sits correctly on your back.
- **Zippers Sticking:** Ensure no fabric is caught in the zipper. Apply a small amount of zipper lubricant or a graphite pencil to the zipper teeth to improve smoothness.
- **Limited Space:** Review the internal organization. Utilize all pockets and compartments efficiently. For larger items, consider if they exceed the backpack's intended capacity.

SPECIFICATIONS

Attribute	Detail
Brand	Case Logic
Series	DLBP-116
Item Model Number	3201268
Item Weight	11.2 ounces
Product Dimensions (LxWxH)	13.7 x 20 x 4 inches
Color	Black
Standing Screen Display Size (Max)	16 Inches
Department	unisex-adult
Manufacturer	Case Logic
Date First Available	November 1, 2010

WARRANTY AND SUPPORT

This Case Logic product is backed by the manufacturer's warranty. For detailed warranty information, product registration, or technical support, please visit the official Case Logic website or contact their customer service

department. Keep your purchase receipt as proof of purchase.