

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Curtis](#) /

> [Curtis 15-Inch LED TV with DVD Player \(Model LEDVD152\) Instruction Manual](#)

## Curtis LEDVD152

# Curtis 15-Inch LED TV with DVD Player (Model LEDVD152) Instruction Manual

Your guide to setting up and operating your new Curtis LED TV with integrated DVD player.

## INTRODUCTION

Thank you for purchasing the Curtis 15-Inch LED TV with built-in DVD player, model LEDVD152. This manual provides essential information for the safe and efficient operation of your new television. Please read it thoroughly before use and retain it for future reference.

This television features a 15-inch high-definition display, an integrated slot-loading DVD player, and multiple connectivity options including HDMI, VGA, and AV inputs. It is designed to provide a clear picture and convenient entertainment in a compact form factor.

## SAFETY INFORMATION

Always follow these basic safety precautions when using your television to reduce the risk of fire, electric shock, and injury.

- **Power Source:** Ensure the TV is connected to a power supply within the specified voltage range (110V).
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Power Cord:** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Curtis 15-Inch LED TV with Built-in DVD Player
- Remote Control

- TV Stand
- Power Cord
- Instruction Manual (this document)

## PRODUCT OVERVIEW

---

The Curtis LEDVD152 combines a compact LED television with a convenient built-in DVD player, offering versatile entertainment options.



**Image:** Front view of the Curtis 15-Inch LED TV with DVD Player. This image displays the television's screen, the integrated slot-loading DVD player opening, and the overall design of the unit.

### Key Features:

- 15-Inch TFT LCD Display with 720p Resolution (1366x768)
- Integrated Slot-Loading DVD Player
- ATSC Tuner for Digital Broadcast Reception
- Multiple Inputs: HDMI, VGA, Component (YPBPR), S-Video, AV (Composite), RF
- 60Hz Refresh Rate
- 1200:1 Contrast Ratio
- Built-in Stereo Speakers
- Sleep Timer Function
- Swivel Stand for Adjustable Viewing Angles

## SETUP

---

## 1. Attaching the Stand:

Carefully place the TV screen-down on a soft, clean surface to prevent scratches. Align the TV stand with the mounting holes on the bottom of the television. Secure the stand using the provided screws. Ensure the stand is firmly attached before placing the TV upright.

## 2. Power Connection:

Connect the power cord to the AC IN port on the back of the TV, then plug the other end into a standard 110V AC wall outlet.

## 3. Antenna/Cable Connection:

For receiving broadcast channels, connect an antenna or cable TV coaxial cable to the RF IN port on the back of the TV.

## 4. Initial Power On and Channel Scan:

Press the Power button on the TV or remote control. The first time you turn on the TV, an on-screen setup menu will guide you through language selection and an automatic channel scan. Follow the prompts to scan for available digital and analog channels.

## OPERATING INSTRUCTIONS

### Basic TV Functions:

- **Power On/Off:** Press the **POWER** button on the remote or TV.
- **Channel Selection:** Use the **CH+/-** buttons or number pad on the remote.
- **Volume Adjustment:** Use the **VOL+/-** buttons on the remote or TV.
- **Input Source:** Press the **INPUT** or **SOURCE** button to cycle through available inputs (TV, HDMI, VGA, AV, Component, DVD).
- **Menu Navigation:** Press the **MENU** button to access the on-screen display (OSD). Use arrow buttons to navigate and **ENTER** or **OK** to confirm selections.

### Using the Built-in DVD Player:

The TV features an integrated slot-loading DVD player. To use it:

1. **Select DVD Input:** Press the **INPUT** or **SOURCE** button on the remote until "DVD" is selected.
2. **Insert DVD:** Gently insert a DVD disc into the slot on the side of the TV with the label facing up. The player will automatically pull the disc in.
3. **Playback:** The DVD should begin playing automatically. If not, use the DVD control buttons on the remote (Play, Pause, Stop, Skip) to manage playback.
4. **Eject DVD:** Press the **EJECT** button on the remote to remove the disc.

*Note: The TV mode must be set to "DVD" for the internal DVD player to function.*

## CONNECTIONS

Your Curtis LEDVD152 TV offers various ports for connecting external devices.



**Image:** Rear view of the Curtis 15-Inch LED TV. This image illustrates the location of various input ports, including HDMI, VGA,

Component, and AV connections.

- **HDMI (High-Definition Multimedia Interface):** Connect high-definition devices like Blu-ray players, game consoles, or set-top boxes. (1 Input)
- **VGA (Video Graphics Array):** Connect a computer for use as a monitor. (1 Input)
- **Component (YPBPR):** Connect devices using component video cables (red, green, blue) for high-quality analog video, along with stereo audio (red, white). (1 Input)
- **AV (Composite Video):** Connect standard definition devices using composite video (yellow) and stereo audio (red, white) cables. (1 Input)
- **RF (Antenna/Cable):** Connect an antenna or cable TV coaxial cable.
- **Audio Out (Headphone Jack):** Connect headphones or external speakers.

After connecting a device, remember to select the corresponding input source using the **INPUT** button on your remote.

## MAINTENANCE

---

### Cleaning the TV:

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks on the screen, lightly dampen a soft cloth with water or a specialized screen cleaner (ensure it's safe for LCD/LED screens) and gently wipe. Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents as they can damage the finish.

### General Care:

- Avoid placing heavy objects on top of the TV.
- Do not expose the TV to extreme temperatures or humidity.
- If moving the TV, ensure it is properly supported and handled to prevent damage.

## TROUBLESHOOTING

---

Before contacting customer support, try these common troubleshooting steps.

Problem	Possible Solution
No Power	Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the wall outlet is working by plugging in another device. Press the Power button on the TV itself, not just the remote.
No Picture / Blue Screen	Verify the correct input source is selected (e.g., HDMI, AV, TV). Check all cable connections between the TV and external devices. If using an antenna, ensure it is properly connected and perform a channel scan.
No Sound	Increase the volume using the VOL+ button. Check if the TV is muted. Press the MUTE button on the remote. If using external devices, check their volume and audio output settings.

Problem	Possible Solution
DVD Player Not Working	<p>Ensure the input source is set to "DVD".</p> <p>Check if the disc is inserted correctly (label side up).</p> <p>Try a different DVD disc to rule out a faulty disc.</p> <p>Clean the disc if it has smudges or scratches.</p>
Remote Control Not Responding	<p>Replace the batteries with new ones.</p> <p>Ensure there are no obstructions between the remote and the TV's IR sensor.</p> <p>Point the remote directly at the TV's sensor.</p>

## SPECIFICATIONS

Feature	Detail
Model Number	LEDVD152
Screen Size	15 Inches
Display Technology	LCD (LED Backlight)
Resolution	1366 x 768 (720p)
Refresh Rate	60Hz (Native)
Aspect Ratio	16:9
Contrast Ratio	1200:1
Inputs	1 HDMI, 1 VGA, 1 Component (YPBPR), 1 Audio/Video (Composite), RF
Built-in DVD Player	Yes, Slot-loading
Dimensions (without stand)	17.38" W x 11.13" H x 2.25" D
Dimensions (with stand)	17.38" W x 13.00" H x 5.13" D
Item Weight	11.6 Pounds
Power Source	110V AC
Included Components	Remote, Stand, TV

## ENERGY INFORMATION

This section provides estimated energy consumption details for the Curtis 15.7" LCD TV, Model LCDVD152AC (similar to LEDVD152).



**Image:** Energy Guide label. This label provides estimated yearly energy cost and electricity usage for the television model.

- **Estimated Yearly Energy Cost:** \$5.90 (Based on 11 cents per kWh and 5 hours use per day).
- **Estimated Yearly Electricity Use:** 59 kWh.
- *Your actual cost depends on your utility rates and usage habits.*
- **Cost Range of Similar Models (0"-16"):** \$3.00 - \$6.00.
- For more information, visit [ftc.gov/energy](https://www.ftc.gov/energy).

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Curtis International Ltd. website. Keep your proof of purchase for warranty claims.

Curtis International Ltd. is headquartered in Toronto, Canada, with distribution facilities across North America and Europe.