

[Manuals.plus](#) /

› [Bell+Howell](#) /

› Bell & Howell S7 Slim Digital Camera User Manual

Bell+Howell S7

Bell & Howell S7 Slim Digital Camera User Manual

Model: S7

1. INTRODUCTION

Thank you for choosing the Bell & Howell S7 Slim Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera. The S7 is a compact digital camera featuring a slim design, 1080p video recording, and a unique Infrared Night Vision capability for capturing images in low-light conditions.



Figure 1.1: The Bell & Howell S7 Slim Digital Camera, shown with its included carrying pouch and a 2GB SD card. The image displays the camera's front with lens and flash, and its back with the LCD screen and control buttons.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment cover on the bottom or side of the camera.
2. Slide the cover open according to the arrow indicator.
3. Insert the battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

2.2. Memory Card Installation

The Bell & Howell S7 uses SD flash memory cards.

1. Locate the memory card slot, typically near the battery compartment.
2. Insert the SD card with the metal contacts facing the correct direction, usually downwards or towards the front of the camera.
3. Gently push the card until it clicks into place. To remove, push the card in again until it springs out.



Figure 2.1: An 8GB Transcend SDHC memory card, suitable for use with the Bell & Howell S7 camera. Ensure the card is inserted correctly into the camera's memory card slot.

2.3. Charging the Camera

Connect the camera to a power source using the provided USB cable. The charging indicator light will illuminate during charging and turn off or change color when fully charged.

2.4. Powering On/Off

Press and hold the **Power** button (usually labeled "ON/OFF") to turn the camera on or off.

3. OPERATING THE CAMERA

3.1. Taking Photos

1. Turn on the camera.
2. Frame your shot using the LCD screen.
3. Use the **W/T** (Wide/Telephoto) buttons to zoom in or out.
4. Press the **Shutter** button halfway to focus, then press fully to capture the image.

3.2. Recording Videos

1. Switch the camera to video mode (refer to your camera's on-screen menu or mode dial).
2. Press the **Shutter** button to start recording.

3. Press the **Shutter** button again to stop recording.

3.3. Infrared Night Vision

The S7 camera features Infrared Night Vision for capturing images in very low light or complete darkness.

1. Activate Night Vision mode through the camera's menu settings. This mode typically produces monochrome (black and white) images.
2. Frame your shot. The camera will automatically use its infrared illuminators.
3. Press the **Shutter** button to capture the image or start recording video.



Figure 3.1: This image demonstrates the effect of Infrared Night Vision. The top left shows an "Original" color image of pink flowers, while the top right shows the same scene in "Infrared Night Vision" as a monochrome image. A similar comparison is shown for lilies at the bottom.

3.4. Playback Mode

Press the **Playback** button (often indicated by a triangle icon) to review your photos and videos. Use the directional buttons to navigate through your media.

3.5. Connecting to a Computer

Use the provided USB cable to connect the camera to your computer. The camera will typically appear as a removable disk drive, allowing you to transfer files.

4. MAINTENANCE

4.1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Do not touch the lens or screen directly with your fingers.

4.2. Battery Care

- Remove the battery if the camera will not be used for an extended period.
- Store batteries in a cool, dry place.
- Avoid exposing batteries to extreme temperatures.

4.3. Storage

Store the camera in a dry, dust-free environment, preferably in a camera case or pouch to protect it from scratches and impacts.



Figure 4.1: A black camera case by Precision Design, suitable for protecting the Bell & Howell S7 camera during storage and transport.



Figure 4.2: Accessories for camera maintenance, including a screen protector and grid cards for calibration or cleaning. These help keep the camera's display and lens in optimal condition.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is dead or incorrectly inserted.	Charge the battery or re-insert it correctly.
Memory card error.	Card is full, corrupted, or incorrectly inserted.	Insert a new card, format the card (this will erase data), or re-insert the card.
Images are blurry.	Camera shake, dirty lens, or out of focus.	Hold the camera steady, clean the lens, or ensure the camera focuses before shooting.
Infrared Night Vision not working.	Mode not activated or insufficient darkness.	Ensure Night Vision mode is selected in the menu. It functions best in very low light or darkness.

6. SPECIFICATIONS

Feature	Detail
Brand	Bell+Howell
Model Name	S7
Form Factor	Slim
Special Feature	Night Vision
Color	Silver
Connectivity Technology	USB
File Format	JPEG, RAW
Image Stabilization	Digital
Item Weight	0.27 g
Video Resolution	1080p
Continuous Shooting	4 frames_per_second
Display Type	LCD
Flash Memory Type	SD
Compatible Mountings	Micro Four Thirds (Note: This might be a miscategorization in the source data as S7 is a compact camera, not typically M4/3. User should refer to actual product for lens mount.)
Expanded ISO Minimum	100
Wireless Technology	Infrared
Auto Focus Technology	Contrast Detection

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official

Bell+Howell website. Keep your proof of purchase for warranty claims.

Manufacturer: BELL & HOWELL

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question