

[Manuals.plus](#) /

› [WarnerBrothers](#) /

› WarnerBrothers Batman Beyond: The Complete Series DVD Instruction Manual

WarnerBrothers B003XMZVHY

Batman Beyond: The Complete Series DVD Instruction Manual

Model: B003XMZVHY

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the setup, operation, and maintenance of your *Batman Beyond: The Complete Series* DVD set. Please read thoroughly to ensure optimal enjoyment and longevity of your product. This collection features all 52 episodes of the animated series, following Terry McGinnis as the new Batman in a futuristic Gotham City, mentored by an aged Bruce Wayne.



Image 1.1: The *Batman Beyond: The Complete Series* DVD box set, showcasing the outer packaging, disc cases, and an included art booklet. The main box features Batman Beyond in a dynamic pose against a futuristic city backdrop, with the series title prominently displayed.

2. SETUP

2.1 Unboxing and Inspection

Carefully remove the DVD set from its packaging. Inspect all nine discs for any visible damage, such as scratches or cracks, before first use.

2.2 Disc Handling

Always hold discs by their edges to avoid leaving fingerprints or smudges on the playback surface. Avoid touching the shiny side of the disc.

2.3 Compatible Players

This DVD set is compatible with standard DVD players, Blu-ray players with DVD playback capability, and computer DVD-ROM drives.

2.4 Inserting Discs

Open your DVD player's disc tray or slot. Gently place the desired disc onto the tray or into the slot, ensuring the label side is facing up. Close the disc tray or allow the player to draw the disc in.

3. OPERATING INSTRUCTIONS

3.1 Power On and Input Selection

Turn on your DVD player and television. Select the correct input source on your television (e.g., HDMI 1, AV) for the DVD player.

3.2 Menu Navigation

Once the disc loads, the main menu will typically appear. Use your remote control's arrow keys (Up, Down, Left, Right) to navigate through the menu options. Press the 'Enter' or 'Play' button to select an option (e.g., 'Play All Episodes', 'Episode Selection', 'Special Features').

3.3 Playing Episodes

To watch the series consecutively, select 'Play All Episodes'. To choose specific episodes, navigate to the 'Episode Selection' menu and select your desired episode.

3.4 Special Features

Access bonus content, if available on the disc, through the 'Special Features' menu. Content may vary per disc.

3.5 Audio and Subtitle Options

Most DVD players allow selection of audio tracks and subtitle options via dedicated buttons on the remote control (often labeled 'Audio' or 'Subtitle'). Refer to your DVD player's manual for specific instructions.

4. MAINTENANCE

4.1 Cleaning Discs

To clean discs, gently wipe from the center outwards with a soft, lint-free cloth. Do not use abrasive materials, paper towels, or harsh chemical cleaners, as these can scratch the disc surface.

4.2 Storage

Store discs in their original cases when not in use. Keep cases away from direct sunlight, extreme temperatures, and high humidity. Store cases upright to prevent disc warping over time.

4.3 Handling

Avoid bending discs or placing heavy objects on them. Excessive force can cause irreparable damage.

5. TROUBLESHOOTING

5.1 Disc Not Playing

- Ensure the disc is clean and free of scratches.
- Verify the disc is inserted correctly into the player, label side up.
- Try playing the disc in another compatible DVD player to rule out an issue with your primary player.

5.2 Skipping or Freezing

- Clean the disc thoroughly as described in Section 4.1.
- Check for deep scratches on the disc surface. Severely scratched discs may not play correctly.
- Ensure your player's lens is clean. Refer to your player's manual for lens cleaning instructions.

5.3 No Audio or Video

- Check all cable connections between the DVD player and your television. Ensure they are securely plugged in.
- Confirm that your television is set to the correct input source for the DVD player.
- Verify that the disc is actively playing and not paused.
- Adjust the volume on both your television and DVD player.

5.4 Menu Unresponsive

- If the menus are unresponsive, try restarting the DVD player by powering it off and then on again.
- Ensure your remote control batteries are functional and properly inserted.

6. SPECIFICATIONS

MPAA Rating	NR (Not Rated)
Product Dimensions	11 x 8 x 1.5 inches
Media Format	AC-3, Animated, Box set, Color, Dolby, Full Screen, Limited Edition, Multiple Formats, NTSC
Release Date	November 23, 2010
Actors	Kevin Conroy, Will Friedle
Language	English (Dolby Digital 5.1)
Studio	WarnerBrothers
ASIN	B003XMZVHY

Number of Discs	9
Genre	Action & Adventure, Animation, Television

7. WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For specific warranty details, technical support, or service inquiries, please refer to the contact information provided by WarnerBrothers or visit their official support website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question