

[Manuals.plus](#) /

› [NESCAFÉ Dolce Gusto](#) /

› NESCAFÉ Dolce Gusto Piccolo KP1006ES Coffee Capsule Machine User Manual

NESCAFÉ Dolce Gusto KP1006ES

NESCAFÉ Dolce Gusto Piccolo KP1006ES Coffee Capsule Machine User Manual

Model: KP1006ES

INTRODUCTION

Welcome to the user manual for your NESCAFÉ Dolce Gusto Piccolo KP1006ES Coffee Capsule Machine. This manual provides essential information for the safe and efficient operation, setup, and maintenance of your new coffee machine. Please read all instructions carefully before first use and keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Always unplug the machine from the power outlet before cleaning or when not in use for extended periods.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep children away from the appliance during operation, as hot water and steam can cause burns.
- Use only NESCAFÉ Dolce Gusto capsules in this machine.
- Never open the capsule holder during brewing.
- Ensure the water tank is filled with fresh, clean water before each use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your NESCAFÉ Dolce Gusto Piccolo machine.



Figure 1: Side view of the NESCAFÉ Dolce Gusto Piccolo KP1006ES coffee machine, showcasing its compact design and water tank.





Figure 2: Front view of the machine with an espresso cup on the adjustable drip tray.

Key Components:

- **Water Tank:** Removable, 0.6-liter capacity, located at the back/side.

- **Capsule Holder:** Magnetic, slides out for capsule insertion.
- **Brewing Head:** Where the capsule is pierced and water is injected.
- **Control Lever:** Manual lever for hot (red) or cold (blue) water selection and flow control.
- **Power Button:** On/Off button with LED indicator.
- **Drip Tray:** Height-adjustable for various cup sizes, removable for cleaning.

SETUP

1. Unpacking

Carefully remove all packaging materials from the machine. Ensure all components are present: the machine, water tank, drip tray, and capsule holder. Keep the user manual and any included welcome pack.



Figure 3: The coffee machine alongside its packaging and welcome materials.

2. Initial Cleaning

- Wash the water tank, drip tray, and capsule holder with warm water and a mild detergent. Rinse thoroughly and dry.
- Wipe the exterior of the machine with a damp cloth.

3. Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, potable water up to the MAX level indicator.
3. Replace the water tank securely on the machine.

4. First Use / Priming

1. Plug the machine into a grounded power outlet.
 2. Press the power button. The LED will blink red and then turn solid green when ready.
 3. Place an empty container (at least 200ml) on the drip tray.
 4. Without a capsule inserted, lift the locking handle and pull out the capsule holder. Push it back in and close the locking handle.
 5. Move the control lever to the hot (red) position and let water flow until the tank is empty.
 6. Repeat the process with the cold (blue) position until the tank is empty.
 7. Refill the water tank. Your machine is now primed and ready for use.
-

OPERATING INSTRUCTIONS

1. Powering On

Ensure the machine is plugged in and the water tank is filled. Press the power button. The LED will turn solid green when the machine is heated and ready (approximately 30 seconds).

2. Inserting a Capsule

1. Lift the locking handle.
2. Pull out the capsule holder.
3. Insert a NESCAFÉ Dolce Gusto capsule into the holder.
4. Slide the capsule holder back into the machine.
5. Push down the locking handle firmly until it clicks into place.



Figure 4: Demonstrates the process of inserting a coffee capsule into the machine's magnetic holder.

3. Adjusting Drip Tray

Adjust the height of the drip tray to match your cup size. This prevents splashing and ensures optimal coffee temperature.

4. Brewing Your Drink (Manual Control)

1. Place your cup on the drip tray.
2. Move the control lever to the **red** position for hot beverages or the **blue** position for cold beverages.
3. The water will start flowing. Monitor the amount of liquid in your cup.
4. Once the desired amount is reached, return the control lever to the central (OFF) position to stop the flow.



Figure 5: A hand demonstrating the use of the manual control lever for hot or cold beverage selection.



Figure 6: The machine in operation, preparing a layered latte macchiato.

5. Removing the Used Capsule

1. After brewing, lift the locking handle.

2. Pull out the capsule holder.
3. Dispose of the used capsule in a waste bin. Be careful, as the capsule may still be hot and contain residual liquid.
4. Slide the capsule holder back into the machine and close the locking handle.



Figure 7: An assortment of NESCAFÉ Dolce Gusto capsules and the diverse range of beverages they can produce.

MAINTENANCE

1. Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray after each use or when full.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Capsule Holder:** Rinse the capsule holder under running water.

- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

2. Descaling

Regular descaling is crucial to maintain your machine's performance and extend its lifespan. The frequency depends on water hardness and usage, but generally every 3-6 months.

1. Purchase a descaling solution suitable for coffee machines (e.g., NESCAFÉ Dolce Gusto descaling kit).
2. Follow the instructions provided with the descaling solution carefully.
3. Typically, this involves mixing the solution with water in the tank, running it through the machine, and then rinsing thoroughly with clean water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet faulty.	Check power cord connection; try a different outlet.
No water flow / very slow flow.	Water tank empty; machine needs descaling; capsule blocked.	Refill water tank; perform descaling; check capsule for proper insertion or blockages.
Water leaks from machine.	Water tank not properly seated; drip tray full.	Ensure water tank is correctly positioned; empty and re-seat drip tray.
Drink is not hot enough.	Machine not fully heated; machine needs descaling.	Wait for the LED to turn solid green; perform descaling.

SPECIFICATIONS

- **Model Number:** KP1006ES
- **Brand:** NESCAFÉ Dolce Gusto (Manufactured by Krups)
- **Dimensions (L x W x H):** 22 x 15.9 x 28.7 cm
- **Weight:** 2 kg
- **Water Tank Capacity:** 0.6 Litres
- **Power / Wattage:** 1500 watts
- **Voltage:** 230 Volts
- **Pump Pressure:** Max 15 bar
- **Material:** Aluminum, Stainless Steel
- **Special Features:** Detachable water tank, adjustable drip tray, energy-saving mode (auto-off after 5 min).



Figure 8: Visual representation of the machine's dimensions (height, width, depth).

WARRANTY AND SUPPORT

Your NESCAFÉ Dolce Gusto Piccolo machine comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage. For technical assistance, spare parts, or further information, please contact NESCAFÉ Dolce Gusto or Krups customer support in your region. Contact details can typically be found on the official brand websites or in your product documentation.