

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Silit](#) /

› [Silit Sicomatic econtrol Pressure Cooker Lid Handle Instruction Manual](#)

Silit 2150264484

Silit Sicomatic econtrol Pressure Cooker Lid Handle Instruction Manual

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Silit Sicomatic econtrol pressure cooker lid handle. This handle is designed as a spare part for Silit Sicomatic econtrol pressure cookers with a diameter of 18 cm and 22 cm. Please read these instructions carefully before use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW



Image 1: The Silit Sicomatic econrol pressure cooker lid handle, showing its approximate length of 10 inches (26 cm). This handle features a central control dial for adjusting cooking settings.

The Silit Sicomatic econrol lid handle is a high-quality plastic component featuring an innovative one-hand turning knob for easy operation. It includes a color-coded doneness indicator and offers three fixed adjustable cooking settings: gentle, quick, and steam cooking. The handle is designed to be removable for simple and easy cleaning and incorporates a maintenance-free valve system.

INSTALLATION INSTRUCTIONS

This lid handle is designed to replace an existing handle or be installed on a compatible Silit Sicomatic econrol pressure cooker lid. It is important to ensure compatibility with your specific pressure cooker model (Ø 18 cm or 22 cm).

1. **Preparation:** Ensure the pressure cooker lid is clean and dry. If replacing an old handle, carefully remove it, noting how it was attached.
2. **Positioning:** Align the new lid handle with the designated mounting points on the pressure cooker lid.
3. **Attachment:** Secure the handle to the lid. This typically involves tightening screws from the underside of the lid into the handle. Refer to your pressure cooker's original manual for specific screw placement and tightening instructions. *Note: This product includes only the upper handle part; any necessary screws or base components must be sourced separately if not already present on your lid.*

4. **Verification:** After installation, gently tug on the handle to ensure it is securely fastened and does not wobble.

OPERATING THE LID HANDLE

The lid handle integrates the control mechanism for your Sicomatic econtrol pressure cooker.

- **Control Dial:** Use the central turning knob to select one of the three cooking settings: **Gentle**, **Quick**, or **Steam Cooking**. Rotate the knob until it clicks into the desired position.
- **Color-Coded Doneness Indicator:** Observe the color indicator on the handle. This indicator provides visual feedback on the pressure level inside the cooker, helping you monitor the cooking process and determine when the desired doneness is reached.
- **Opening the Lid:** Always ensure that the pressure has fully released and the doneness indicator has returned to its lowest position before attempting to open the lid. Never force the lid open.

CARE AND MAINTENANCE

Proper care ensures the longevity and hygienic use of your lid handle.

- **Cleaning:** The lid handle is designed to be easily removable for cleaning. After each use, detach the handle from the lid.
- **Hand-Wash Only:** Clean the handle by hand using warm soapy water. Avoid abrasive cleaners or scouring pads, which can damage the plastic surface. Rinse thoroughly and dry completely before reattaching.
- **Valve System:** The integrated valve system is maintenance-free. Do not attempt to disassemble or modify the valve components.
- **Storage:** Store the handle in a clean, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your lid handle, refer to the following common solutions:

- **Handle Does Not Fit:** Verify that the item model number (2150264484) matches your pressure cooker's requirements and that your cooker is a Silit Sicomatic econtrol model with a diameter of 18 cm or 22 cm. Incorrect model compatibility is a common reason for ill-fitting parts.
- **Difficulty Turning Control Dial:** Ensure the handle is clean and free from food debris or residue that might obstruct the turning mechanism. If the issue persists, ensure the handle is correctly seated and secured on the lid.
- **Pressure Not Building Correctly:** This issue is often related to the pressure cooker's sealing ring or the lid's proper closure, rather than the handle itself. However, ensure the handle is securely attached and the valve system appears unobstructed. Refer to your pressure cooker's main instruction manual for comprehensive troubleshooting on pressure building.
- **Handle Feels Loose:** Check the screws that secure the handle to the lid. Gently tighten them if necessary, but do not overtighten to avoid damaging the plastic.

SPECIFICATIONS

Brand	Silit
Model Number	2150264484
Compatibility	Silit Sicomatic econrol pressure cookers (Ø 18 cm and 22 cm)
Material	High-quality Plastic
Color	Black
Product Dimensions	10.63 x 3.74 x 3.35 inches (27 x 9.5 x 8.5 cm)
Item Weight	1.19 pounds (0.54 kg)
Special Feature	Removable for cleaning

WARRANTY AND SUPPORT

This Silit lid handle is a spare part designed for durability and performance. While Silit offers a 30-year guarantee on the inner and outer ceramic Silargan surface of its Sicomatic econrol pressure cookers, this specific guarantee applies to the cooker's main body and not directly to plastic spare parts like the lid handle. For specific warranty information regarding this spare part, or for any technical support, please contact Silit customer service directly. Contact details can typically be found on the official Silit website or through your retailer.