

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Proco](#) /

> [Proco S12-10 TS-TS Speaker Cable - 10 Feet User Manual](#)

Proco S12-10

Proco S12-10 TS-TS Speaker Cable - 10 Feet User Manual

Model: S12-10

INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your Proco S12-10 TS-TS Speaker Cable. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

SAFETY INFORMATION

Always observe the following safety precautions:

- Do not expose the cable to extreme temperatures or direct sunlight for extended periods.
- Avoid bending or kinking the cable sharply, as this can damage internal wiring.
- Keep the cable away from water or other liquids to prevent electrical hazards.
- Ensure connectors are clean and free of debris before connecting to equipment.
- Do not attempt to modify or repair the cable yourself. Refer to qualified personnel for service.

PRODUCT OVERVIEW

The Proco S12-10 is a high-quality 10-foot speaker cable designed for reliable audio signal transmission. It features TS (Tip-Sleeve) connectors on both ends, suitable for connecting speakers to various audio devices.



Image: Proco S12-10 TS-TS Speaker Cable, showing the cable with its TS connectors.

This image displays the Proco S12-10 speaker cable, highlighting its robust construction and the TS connectors at each end. The cable is black and designed for durability in various audio setups.

Key Features:

- **Connector Type:** TS to TS
- **Gauge:** 12 Gauge
- **Length:** 10 Feet
- **Construction:** Designed for demanding audio applications.

SETUP INSTRUCTIONS

Follow these steps to properly connect your Proco S12-10 speaker cable:

1. **Identify Connections:** Locate the speaker output on your audio amplifier or receiver and the input on your speaker. Both should be compatible with TS (Tip-Sleeve) connectors.
2. **Power Off Equipment:** Ensure all audio equipment (amplifier, receiver, speakers) is powered off before making any connections. This prevents potential damage to your devices.
3. **Connect to Amplifier/Receiver:** Insert one end of the Proco S12-10 TS connector firmly into the speaker output jack of your amplifier or receiver.
4. **Connect to Speaker:** Insert the other end of the Proco S12-10 TS connector firmly into the input jack of your speaker.
5. **Secure Connections:** Ensure both connections are snug and fully inserted to prevent signal loss or intermittent audio.
6. **Power On:** Once connections are secure, you may power on your audio equipment and test the sound.

Note: Always use appropriate speaker cables for your audio setup. Using incorrect cables can result in poor sound quality or equipment damage.

OPERATING GUIDELINES

The Proco S12-10 speaker cable is designed for straightforward operation. Once connected, it facilitates the transmission of audio signals between your amplifier/receiver and speakers.

- **Signal Integrity:** The cable is engineered to maintain signal integrity, providing clear and consistent audio.
- **Cable Management:** Route the cable in a way that avoids tripping hazards and protects it from being stepped on or crushed.
- **Environmental Conditions:** While suitable for indoor and outdoor use, avoid prolonged exposure to harsh weather conditions to maximize cable lifespan.

MAINTENANCE AND CARE

Proper care will extend the life and performance of your Proco S12-10 speaker cable:

- **Cleaning:** Wipe the cable periodically with a soft, dry cloth to remove dust and dirt. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, coil the cable loosely. Avoid tight coiling or sharp bends, which can stress the internal conductors. Store in a cool, dry place.
- **Inspection:** Regularly inspect the cable and connectors for any signs of wear, cuts, or damage. If damage is observed, discontinue use and consider replacement.

TROUBLESHOOTING

If you experience issues with your Proco S12-10 speaker cable, consider the following common solutions:

Problem	Possible Cause	Solution
No sound or intermittent audio	Loose connection, damaged cable, incorrect input/output selected.	<ul style="list-style-type: none">◦ Ensure both TS connectors are fully inserted into their respective jacks.◦ Check if the correct input source is selected on your amplifier/receiver.◦ Inspect the cable for visible damage. If damaged, replace the cable.◦ Test with another known working cable if available.
Poor sound quality (e.g., static, hum)	Interference, faulty connection, damaged cable.	<ul style="list-style-type: none">◦ Ensure the cable is not running parallel to power cords or other sources of electromagnetic interference.◦ Verify connections are secure and clean.◦ Test the cable with different equipment if possible to isolate the issue.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Proco
Model Number	S12-10
Connector Type	TS-TS (Tip-Sleeve)
Cable Type	Speaker Cable
Gauge	12 Gauge
Length	10 Feet
Compatible Devices	Speakers, Amplifiers, Receivers
Recommended Uses	Connecting speakers to audio devices
Color	Black
Connector Gender	Male-to-Male
Indoor/Outdoor Usage	Indoor, Outdoor
Item Weight	1.04 pounds (approx.)
Product Dimensions	10.85 x 8.5 x 1.3 inches (packaging)
UPC	703272079766

WARRANTY INFORMATION

All Pro Co Sound brand cables, including the S12-10, carry **alimited lifetime warranty** to the original purchaser against defects in materials and workmanship. For warranty claims or further details, please refer to the official Pro Co Sound website or contact their customer support.

CUSTOMER SUPPORT

For additional assistance, technical support, or inquiries regarding your Proco S12-10 speaker cable, please visit the official Proco website or contact their authorized distributors. Always refer to the manufacturer's official resources for the most accurate and up-to-date information.