

## Oster 1503-000

# Oster Classic Series Heritage Blender Instruction Manual

Model: 1503-000 | Brand: Oster

## INTRODUCTION

The Oster Classic Series Heritage Blender is designed for versatile use in your kitchen, making it perfect for preparing smoothies, dips, soups, and sauces. Its powerful motor and durable construction ensure efficient blending for a variety of ingredients, from soft fruits to hard ice.

This manual provides essential information on the setup, operation, maintenance, and troubleshooting of your new blender to ensure optimal performance and longevity.

## SETUP

Before initial use, ensure all components are clean. Wash the Boroclass glass jar, lid, and filler cap in warm, soapy water or in a dishwasher. The blade assembly can also be disassembled for thorough cleaning.





**Image Description:** A stainless steel Oster Classic Series Heritage Blender with a 6-cup Boroclass glass jar filled with various fruits (pineapple, blueberries, raspberries) ready for blending. The blender base is brushed stainless steel with a simple toggle switch for operation.

1. Place the blender base on a stable, flat surface.
2. Ensure the blade assembly is securely attached to the bottom of the 6-cup Boroclass glass jar.
3. Carefully place the assembled jar onto the blender base, aligning it properly.
4. Place the lid securely on the glass jar. The 2-ounce filler cap should be inserted into the opening of the lid.

5. Plug the power cord into a standard electrical outlet.

## OPERATING INSTRUCTIONS

The Oster Classic Series Heritage Blender features a simple 2-speed toggle control for ease of use.

- **Adding Ingredients:** Add your desired ingredients to the Boroclass glass jar. Ensure the liquid ingredients are added first to facilitate smoother blending. The 2-ounce filler cap allows for convenient addition of ingredients while blending.
- **Speed Selection:** Use the toggle switch on the blender base to select your desired speed.
  - **HIGH:** For powerful blending, ideal for crushing ice, frozen fruits, and tougher ingredients.
  - **LOW:** For lighter blending tasks, such as mixing sauces or pureeing soft foods.
  - **PULSE:** For short bursts of power, useful for chopping or controlling texture. Activate by momentarily moving the toggle switch to the pulse position and releasing.
- **Blending:** Begin blending by selecting the appropriate speed. The powerful 1000-watt motor and Crush Pro 4 Blade (stainless steel, 4-point design) will pulverize and chop ingredients with precision.
- **Stopping:** To stop blending, return the toggle switch to the 'OFF' (center) position.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your blender.

- **Unplug Before Cleaning:** Always unplug the blender from the electrical outlet before cleaning.
- **Glass Jar and Lid:** The 6-Cup Boroclass Glass Jar and its lid are dishwasher safe for easy cleanup. They can also be washed by hand with warm, soapy water.
- **Blade Assembly:** The Crush Pro 4 Blade assembly can be detached from the jar for thorough cleaning. Exercise caution as the blades are sharp. Wash with warm, soapy water and rinse thoroughly.
- **Blender Base:** Wipe the blender base with a damp cloth. Do not immerse the base in water or any other liquid.
- **Storage:** Store the blender in a dry place. Ensure all parts are completely dry before storing.

## TROUBLESHOOTING

If your blender is not operating as expected, please check the following common issues:

- **Blender Does Not Turn On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the toggle switch is in the 'ON' position.
- **Ingredients Not Blending Properly:** Ensure the jar is properly seated on the base. Add more liquid if the

mixture is too thick. Cut larger ingredients into smaller pieces.

- **Loud Noise/Vibration:** This may indicate that the jar is not properly aligned on the base or that the ingredients are too dense. Stop the blender, adjust the jar, or add more liquid.
- **Leakage from Jar:** Ensure the blade assembly is tightly secured to the bottom of the jar and that the gasket is correctly in place. Also, check that the lid is properly sealed.

## SPECIFICATIONS

Feature	Detail
Brand	Oster
Model Number	1503-000
Color	Brushed Stainless/6-Cup
Special Feature	Multiple Speeds
Capacity	6 Cups
Product Dimensions	8.5"D x 10.4"W x 13.8"H
Power Source	Corded Electric
Number of Speeds	2
Voltage	120 Volts
Item Weight	8.03 pounds
UPC	034264437333

## WARRANTY AND SUPPORT

Your Oster Classic Series Heritage Blender is backed by a **10 Year DURALAST All-Metal Drive Limited Warranty**, ensuring lasting durability and peace of mind. Additionally, it comes with a **3 Year Satisfaction Guarantee**.

For detailed warranty information, troubleshooting beyond this manual, or to contact customer support, please refer to the official user manual or visit the Oster website.

You can download the full User Manual in PDF format [here](#).

no relevant documents