

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [PIONEER](#) /

› Pioneer DEH-1300MP Single DIN In-Dash CD Receiver User Manual

PIONEER DEH1300MP

Pioneer DEH-1300MP Single DIN In-Dash CD Receiver

USER MANUAL

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Pioneer DEH-1300MP Single DIN In-Dash CD Receiver. Please read this manual thoroughly before using the product to ensure proper usage and to prevent damage. Keep this manual for future reference.



Figure 1: Front view of the Pioneer DEH-1300MP CD Receiver.

Setup

What's in the Box

Verify that all components are present before beginning installation:

- Pioneer DEH-1300MP Receiver
- Sleeve/Trim Ring
- Wiring Harness
- Remote Control
- Installation Hardware (screws, mounting brackets)
- Owner's Manual (this document)
- Warranty Card



Figure 2: Included components of the DEH-1300MP package.

Installation Guidelines

Installation of the DEH-1300MP requires basic automotive electrical knowledge. If you are unsure about any steps, it is recommended to consult a professional installer.

1. **Disconnect Battery:** Before starting, disconnect the negative terminal of your vehicle's battery to prevent electrical shorts.
2. **Remove Existing Unit:** Carefully remove your vehicle's existing head unit. This may require specialized tools depending on your vehicle model.
3. **Connect Wiring Harness:** Connect the supplied wiring harness to your vehicle's wiring. Ensure all connections are secure and insulated. Refer to the wiring diagram provided in the separate installation guide for specific connections (power, ground, speaker outputs, antenna).
4. **Mount Receiver:** Install the mounting sleeve into your vehicle's dashboard opening. Slide the DEH-1300MP receiver into the sleeve until it locks into place. Secure with the provided installation hardware.
5. **Reconnect Battery:** Once installation is complete, reconnect the negative terminal of your vehicle's battery.

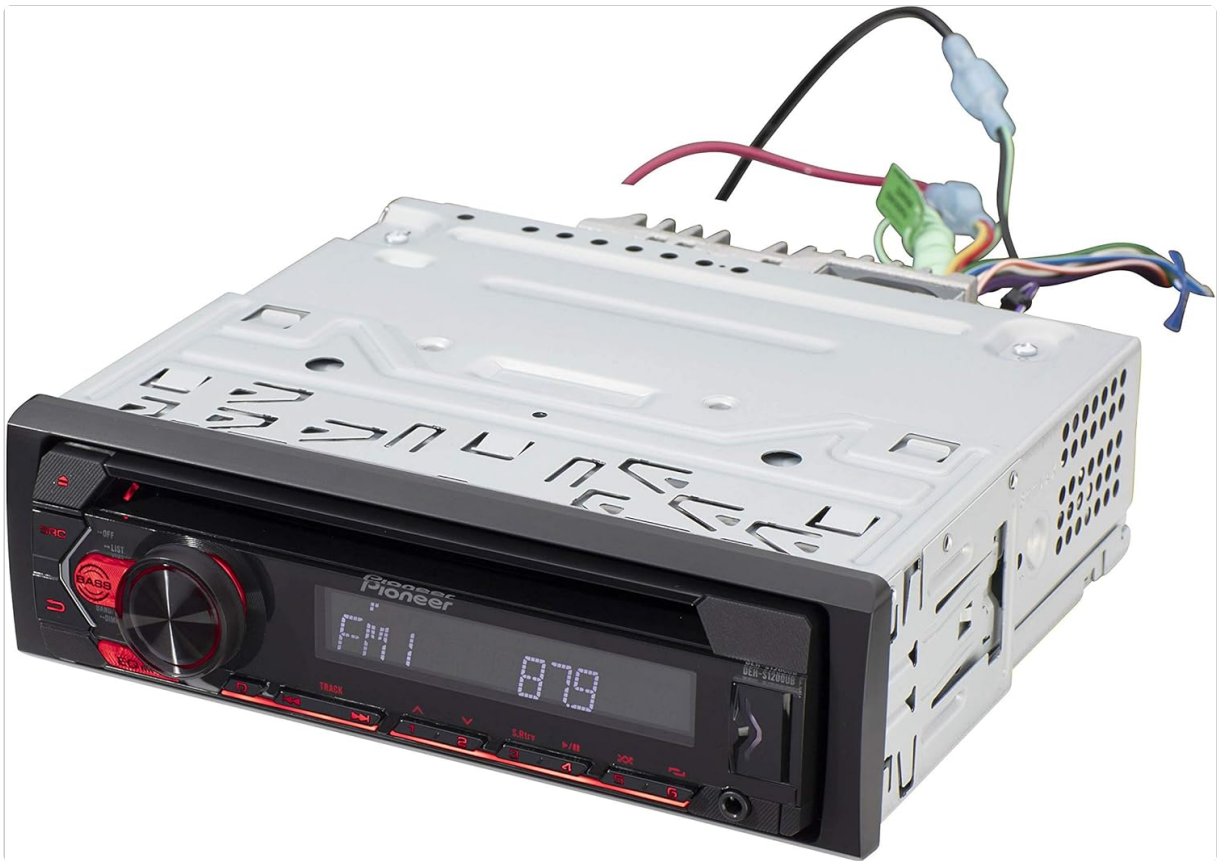


Figure 3: Rear view of the receiver showing wiring harness connection points.



Figure 4: Side view illustrating the mounting points for secure installation.

Operating Instructions

Basic Controls

Familiarize yourself with the front panel controls:



Figure 5: Front panel layout with key controls highlighted.

- **SRC (Source) Button:** Press to cycle through available audio sources (CD, Tuner, AUX).
- **Volume Knob:** Rotate to adjust the audio output level. Press to access audio settings.
- **BASS Button:** Activates or deactivates the Bass Boost feature.
- **BAND/DIMMER Button:** In tuner mode, press to select radio bands (FM1, FM2, FM3, AM). Press and hold to adjust display dimmer settings.
- **EQ (Equalizer) Button:** Press to select preset equalizer curves or to access custom EQ settings.
- **Track/Seek Buttons:** Use to skip tracks on a CD or USB device, or to seek radio stations.

CD Playback

Insert a CD into the disc slot. The unit will automatically begin playback. The DEH-1300MP supports standard audio CDs, as well as CD-R/RW discs containing MP3 and WMA audio files. Use the track buttons to navigate between songs.

Radio Operation

Press the SRC button to select the Tuner source. Use the BAND button to switch between FM1, FM2, FM3, and AM bands. Press the seek buttons to automatically find the next strong station. To manually tune, press and hold the seek buttons. The Supertuner IIID technology enhances reception quality.

Auxiliary Input

Connect an external audio device (e.g., MP3 player, smartphone) to the 3.5mm auxiliary input jack located on the front panel. Select the AUX source using the SRC button. Audio from the connected device will play through the car speakers.

Remote Control

The included remote control allows for convenient operation of various functions from a distance, including power, volume, source selection, and track navigation.

Maintenance

Cleaning the Unit

Wipe the front panel with a soft, dry cloth. For stubborn dirt, dampen the cloth with water. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the finish. Do not spray liquid directly onto the unit.

CD Player Care

Handle CDs by their edges to avoid fingerprints and scratches. If a CD is dirty, wipe it gently from the center outwards with a soft, lint-free cloth. Do not use solvents or abrasive cleaners on CDs. Avoid using irregularly shaped discs or discs with labels that may peel off inside the player.

Troubleshooting

If you encounter issues with your DEH-1300MP, refer to the following common problems and solutions:

- **No Power:**
 - Check the vehicle's fuse box for a blown fuse.
 - Ensure the wiring harness is securely connected to the vehicle's power supply.

- Verify the vehicle's battery is charged.
- **No Sound:**
 - Check speaker connections for proper polarity and secure contact.
 - Ensure the volume is not set to minimum or muted.
 - Verify the correct audio source is selected.
- **CD Does Not Play/Eject:**
 - Ensure the disc is inserted correctly with the label side up.
 - Check the disc for scratches, dirt, or damage.
 - If the disc is stuck, try pressing the eject button repeatedly. If it still doesn't eject, consult a service center.
- **Poor Radio Reception:**
 - Check the antenna connection at the back of the unit.
 - Ensure the antenna is fully extended (if applicable).
 - Move to a different location, as reception can be affected by terrain or buildings.

For issues not covered here, please contact Pioneer customer support.

Specifications

Feature	Specification
Brand	PIONEER
Model Number	DEH1300MP
Connectivity Technology	Auxiliary
Controller Type	Android (via Pioneer ARC App, if compatible with specific Android models)
Special Feature	Equalizer
Compatible Devices	Smartphone, Speaker
Connector Type	3.5mm Jack
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2 Channel
Color	Black
Item Weight	3.25 Pounds
Output Power	50 Watts (per channel)
Number of Channels	4
Output Wattage (Max)	200 Watts (4 x 50W)

Feature	Specification
Control Method	Remote
Audio Output Type	Speakers
Supported Formats	MP3, WMA
Wireless Technology	IR (for remote control)
Preamp Outputs	Two-channel 2V RCA

Warranty Information

The Pioneer DEH-1300MP comes with a one-year limited warranty. Please refer to the warranty card included in the product packaging for full terms and conditions. Keep your proof of purchase for warranty claims.

Support

For further assistance, technical support, or to inquire about service, please visit the official Pioneer website or contact Pioneer customer service directly. Contact information can typically be found on the Pioneer website or on the warranty card.

Official Pioneer Website: www.pioneerelectronics.com