

Microsoft NSF-00023

Xbox 360 Wireless Controller Instruction Manual

Model: NSF-00023

1. INTRODUCTION

The Xbox 360 Wireless Controller is designed to provide an immersive and responsive gaming experience. Utilizing 2.4GHz wireless technology, it offers a reliable connection with a range of up to 30 feet, allowing for flexible gameplay. This controller features a glossy black finish, an integrated headset port for communication, and adjustable vibration feedback to enhance in-game sensations.



Figure 1.1: Front view of the Xbox 360 Wireless Controller.

2. SETUP

2.1 Battery Installation

The Xbox 360 Wireless Controller requires two (2) AA batteries for operation. Follow these steps to install or replace the batteries:

1. Locate the battery compartment on the back of the controller.
2. Press the small tab on the battery pack and pull the pack downwards to remove it.
3. Insert two new AA batteries into the battery pack, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery pack back into the controller until it clicks securely into place.



Figure 2.1: Rear view of the controller with the battery compartment.

Video 2.1: Tutorial on installing batteries and powering on the Xbox 360 Wireless Controller.

2.2 Connecting to the Xbox 360 Console

To connect your wireless controller to the Xbox 360 console:

1. Turn on your Xbox 360 console.
2. Press and hold the Guide button (**Xbox logo**) on the controller until it turns on.
3. Press the connect button on the console (located near the memory unit slots on original models, or near the USB ports on Slim models). The lights around the console's power button will flash.
4. Within 20 seconds, press the connect button on the controller (located on the top edge, between the shoulder buttons). The lights around the Guide button on the controller will flash.
5. Once connected, one of the four quadrants around the Guide button will light up, indicating the controller's assigned player number. The lights on the console will also stop flashing and show the corresponding quadrant.

3. OPERATING THE CONTROLLER

3.1 Basic Controls

The Xbox 360 Wireless Controller features a standard layout for intuitive gameplay:

- **Left and Right Analog Sticks:** Used for movement and camera control.
- **D-Pad (Directional Pad):** For precise directional input, often used in menus or fighting games.
- **A, B, X, Y Buttons:** Action buttons, typically color-coded (Green A, Red B, Blue X, Yellow Y).
- **Left and Right Shoulder Buttons (LB, RB):** Often used for quick actions or weapon switching.
- **Left and Right Triggers (LT, RT):** Pressure-sensitive for actions like accelerating or firing.
- **Guide Button:** Central button with the Xbox logo. Press to access the Xbox Guide, hold to turn off the console or controller.
- **Start and Back Buttons:** Used for pausing games, accessing menus, or specific in-game functions.

3.2 Integrated Headset Port

The controller includes an integrated headset port, allowing you to connect an Xbox 360 Headset (sold separately) for two-way voice communication during Xbox LIVE multiplayer sessions. Simply plug your compatible headset into the port located at the bottom of the controller.

3.3 Adjustable Vibration Feedback

The controller features adjustable vibration feedback, providing tactile responses to in-game events such as explosions or collisions. This feature can be adjusted or turned off via the console settings to conserve battery life or suit personal preference.

4. MAINTENANCE

4.1 Battery Care

- Always use high-quality AA alkaline batteries.
- Remove batteries from the controller if it will not be used for an extended period to prevent leakage.
- If using rechargeable batteries, ensure they are fully charged before use.
- Dispose of used batteries responsibly according to local regulations.

4.2 Cleaning

To clean your controller, use a soft, dry cloth. Avoid using abrasive cleaners, solvents, or strong chemicals, as these can damage the controller's finish and internal components.

5. TROUBLESHOOTING

5.1 Controller Not Connecting

- Ensure the controller has fresh batteries installed.
- Verify that the console is powered on.
- Repeat the connection steps outlined in Section 2.2.
- Ensure you are within the 30-foot wireless range of the console.
- Check for any obstructions or interference between the controller and the console.

5.2 Buttons or Sticks Unresponsive

- Restart the controller by holding the Guide button until it turns off, then press it again to turn it back on.
- Ensure the controller is clean and free of debris around the buttons and sticks.
- If the issue persists, the controller may require service.

6. SPECIFICATIONS

Feature	Specification
Model Number	NSF-00023
Wireless Technology	2.4GHz RF Wireless
Wireless Range	Up to 30 feet (9 meters)
Battery Type	2 x AA batteries (not included)
Approximate Battery Life	Up to 40 hours (may vary with vibration feedback usage)
Product Dimensions	17.8 x 8.5 x 18.39 inches
Item Weight	4 ounces



7. WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the official Microsoft Xbox 360 Wireless Controller User Guide. A digital version of the user guide can be accessed via the following link:

[Download Official User Guide \(PDF\)](#)

You may also visit the official Microsoft support website or contact their customer service for further assistance.

Related Documents - NSF-00023

	<p>Xbox 360 Chatpad User Manual and Guide</p> <p>Comprehensive user guide for the Microsoft Xbox 360 Chatpad. Learn about its features, setup, connecting to your controller, using the keyboard, troubleshooting common issues, and important safety information. Compatible with Xbox 360 consoles and controllers.</p>
	<p>Xbox 360 Controller User Manual and Safety Guide</p> <p>Official user manual and safety guide for the Microsoft Xbox 360 Controller, covering setup, usage, health warnings, and troubleshooting.</p>




[Project Gotham Racing 3 \(PGR3\) Xbox 360 Game Manual](#)

Official game manual for Project Gotham Racing 3 on Xbox 360, detailing game controls, modes, features, career progression, online play, cities, cars, and technical information.




[Xbox 360 Wireless Controller User Manual](#)

Official user manual for the Xbox 360 Wireless Controller, detailing setup, connection, usage, safety precautions, and troubleshooting. Learn how to connect and use your controller for an optimal gaming experience.

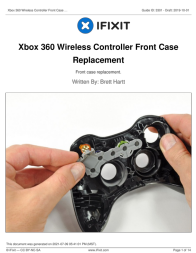

[Xbox 360 Wireless Controller Front Case Replacement Guide](#)

A step-by-step guide to replacing the front case of an Xbox 360 Wireless Controller, including tools and parts needed for the repair.

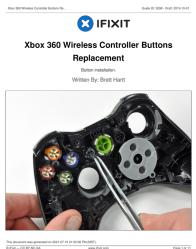

[Xbox 360 Wireless Controller Button Replacement Guide](#)

Step-by-step instructions from iFixit for replacing buttons on a Microsoft Xbox 360 Wireless Controller. Includes required tools and parts.