

[Manuals.plus](#) /

› [Regency Hill](#) /

› Regency Hill Traditional Adjustable Swing Arm Floor Lamp Instruction Manual

Regency Hill N1061

Regency Hill Traditional Adjustable Swing Arm Floor Lamp

Instruction Manual

INTRODUCTION

Thank you for purchasing the Regency Hill Traditional Adjustable Swing Arm Floor Lamp, Model N1061. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new floor lamp. Please read this manual thoroughly before installation and retain it for future reference.





Image: The Regency Hill Traditional Adjustable Swing Arm Floor Lamp, showcasing its full design with a beige drum shade and black bronze finish.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury to persons:

- Always turn off and unplug the lamp and allow it to cool before replacing the light bulb.
- Do not touch the bulb when the lamp is on.
- Keep flammable materials away from the light bulb.
- Do not operate the lamp with a damaged cord or plug.
- Do not use this lamp in wet locations. It is designed for indoor use only.
- Ensure the lamp is assembled correctly and stable before plugging it in.
- Use only bulbs of the specified type and wattage (max 150W, E26 base).

PACKAGE CONTENTS

Carefully unpack all components and check for any damage. Ensure all parts listed below are present. If any parts are missing or damaged, do not attempt to assemble or use the lamp. Contact customer support immediately.

- Lamp Base (1)
- Lamp Pole Sections (typically 2-3 sections, depending on packaging)
- Lamp Head with Swing Arm and Socket (1)
- Faux Silk Beige Drum Shade (1)
- Finial (1)
- Instruction Manual (this document)

Note: Light bulb is not included.

SETUP AND ASSEMBLY

Follow these steps to assemble your floor lamp. Assembly typically requires no tools.

1. **Attach Lamp Pole to Base:** Carefully thread the lowest lamp pole section clockwise into the lamp base until secure. Ensure the power cord is not twisted or pinched.



Image: A close-up view of the sturdy, black bronze lamp base, illustrating the connection point for the pole.

2. **Connect Pole Sections:** If your lamp pole comes in multiple sections, carefully thread each subsequent section clockwise onto the previous one, pulling any excess cord through the base as you go. Ensure all connections are tight.



Image: Detail of the lamp's decorative swirl font section, part of the upper pole assembly.

3. **Attach Lamp Head:** Thread the lamp head section (with the swing arm and bulb socket) clockwise onto the top pole section until it is firmly attached.
4. **Install Light Bulb:** Insert one standard-medium base (E26) light bulb, up to 150 watts, into the lamp socket. (Bulb not included).
5. **Place Lamp Shade:** Carefully place the faux silk beige drum shade onto the lamp harp (the U-shaped wire frame above the socket).



Image: A detailed view of the faux silk beige drum shade, highlighting its texture and shape.

6. **Secure Shade with Finial:** Screw the finial (the decorative cap) onto the threaded rod at the top of the harp to secure the shade in place. Do not overtighten.
7. **Position Lamp:** Place the assembled lamp on a flat, stable surface. Ensure the cord is not under the lamp base or in a position where it could be tripped over.



Image: The Regency Hill floor lamp positioned in a room, demonstrating its aesthetic appeal and size relative to a typical living space.

OPERATING INSTRUCTIONS

Your Regency Hill floor lamp is designed for ease of use.

- **Power On/Off:** Plug the lamp's power cord into a standard 120V AC wall outlet. The lamp features an on-off rotary switch located on the socket. Turn the switch clockwise to turn the lamp on, and counter-clockwise to turn it off.
- **Adjusting the Swing Arm:** The lamp is equipped with an adjustable swing arm. Gently pivot the arm to position the light source as desired. The arm can swing up to 10 inches from the center of the lamp.





Image: The Regency Hill floor lamp with its swing arm extended, demonstrating its adjustable functionality for directed lighting.

MAINTENANCE

Proper care will ensure the longevity and appearance of your lamp.

- **Cleaning:**

- Always unplug the lamp before cleaning.
- Wipe the metal and resin parts with a soft, dry cloth. Do not use abrasive cleaners or polishes as they may damage the finish.
- For the faux silk shade, gently dust with a soft brush or a lint roller. Do not use water or liquid cleaners on the shade.

- **Bulb Replacement:**

- Ensure the lamp is unplugged and the bulb has cooled completely.
- Unscrew the old bulb counter-clockwise.
- Screw in a new E26 base bulb, up to 150 watts, clockwise until snug. Do not overtighten.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not light up.	Lamp not plugged in. Bulb is loose or burnt out. Power outlet is not working. Switch is faulty.	Ensure the plug is fully inserted into a working outlet. Tighten the bulb or replace it with a new one. Test the outlet with another appliance. Check circuit breaker. Contact customer support if the switch is suspected to be faulty.
Lamp flickers.	Loose bulb. Incorrect bulb wattage. Loose connection within the lamp.	Tighten the bulb. Ensure bulb wattage does not exceed 150W. Unplug the lamp and check all threaded connections for tightness.

Problem	Possible Cause	Solution
Lamp is unstable.	Sections not fully tightened. Placed on an uneven surface.	Unplug the lamp and re-tighten all pole sections and the base connection. Move the lamp to a flat, stable surface.

SPECIFICATIONS

Model Number	N1061
Dimensions (Overall)	58" H x 14.5" W x 14.5" D (147.3 cm H x 36.8 cm W x 36.8 cm D)
Base Diameter	11.5" (29.2 cm)
Shade Dimensions	9.5" Top x 14.5" Bottom x 10.5" H (24.1 cm Top x 36.8 cm Bottom x 26.7 cm H)
Swing Arm Extension	Up to 10" (25.4 cm) from center
Weight	14 lbs (6.35 kg)
Bulb Type	E26 Medium Base (Standard)
Max Wattage	150 Watts
Voltage	120V AC
Switch Type	Rotary On/Off Socket Switch
Cord Length	8 feet (2.44 meters)
Materials	Cast Resin, Metal, Faux Silk
Finish	Painted Restoration Black Bronze
Certifications	UL Listed





Image: A technical diagram illustrating the key dimensions of the floor lamp, including overall height, base width, and shade measurements.

WARRANTY AND SUPPORT

Regency Hill products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Regency Hill website. If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact the manufacturer's customer support directly.

For further assistance, you may visit the [Regency Hill Store on Amazon](#).

