

Sony RM-KZ1

Sony RM-KZ1 Universal Children's Remote Control User Manual

Model: RM-KZ1

INTRODUCTION

The Sony RM-KZ1 Universal Children's Remote Control is designed to provide a simplified and controlled television viewing experience for children. This remote allows parents to pre-program up to 7 approved channels, ensuring children can easily access appropriate content while limiting access to others. Its durable, child-friendly design makes it suitable for everyday use.

SAFETY INFORMATION

- Do not expose the remote control to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the remote to strong impacts.
- Keep batteries out of reach of small children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.
- Do not attempt to disassemble or modify the remote control.

PACKAGE CONTENTS

Please check that your package contains the following items:

- Sony RM-KZ1 Universal Children's Remote Control
- Instruction Manual (this document)
- *Note: 2 AAA batteries are required and sold separately.*

PRODUCT OVERVIEW

The RM-KZ1 remote features a robust, ergonomic design with large, distinct buttons for easy use by children. Key features include:

- **7 Programmable Channel Buttons:** Shaped buttons (star, circle, square, etc.) for assigning favorite channels.
- **Power Button:** To turn the television or cable box on/off.
- **Volume Up/Down Buttons:** To adjust audio levels.
- **Battery Compartment:** Located on the back, secured with a screw.
- **Programming Panel:** Hidden under a screw-secured panel for parental control.



Image 1: Front view of the Sony RM-KZ1 remote control, highlighting its green casing and the seven distinctively shaped, colorful channel buttons.



Image 2: Side view of the Sony RM-KZ1 remote control, showing its ergonomic shape.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Using a small Phillips head screwdriver, loosen the screw securing the battery compartment cover. The screw is captive and will not detach completely.
3. Remove the cover.
4. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw to secure it.

2. Programming the Remote Control

The RM-KZ1 can control a television and/or a cable box. Programming involves entering specific codes for your devices and then assigning channels to the shaped buttons. It is recommended to program the TV first for power and volume, then the cable box for channel control.

1. **Accessing Programming Mode:** Locate the small programming panel on the remote, usually secured by a screw. Loosen the screw and remove the panel to reveal the programming buttons.
2. **Programming the TV (Power and Volume):**
 - Refer to the code list provided with your remote (or search online for Sony RM-KZ1 TV codes). TV codes typically start with '0'.
 - Follow the specific instructions in the full manual for entering the TV code. This usually involves holding a 'SET' or 'PROGRAM' button, entering the code, and confirming.
 - Test the remote's power and volume buttons with your TV.
3. **Programming the Cable Box (Channels):**
 - Refer to the code list for your cable box. Cable box codes typically start with '1'.
 - Follow the specific instructions for entering the cable box code.
 - Test the channel changing functionality. Note that this remote may not be compatible with advanced cable boxes (e.g., Xfinity X1) or digital channels requiring decimal points (e.g., 15.1).
4. **Assigning Channels to Shaped Buttons:**
 - Once the TV and/or cable box are programmed, you can assign up to 7 channels to the shaped buttons.
 - Enter programming mode again (if necessary).
 - Select a shaped button (e.g., Star).
 - Enter the desired channel number using the programming interface. For best reliability with cable boxes, a 0.8-second interval for keying may be optimal.
 - Repeat for the remaining 6 shaped buttons.
 - Exit programming mode and replace the programming panel cover, securing it with the screw.

3. Volume Limiting Function

The RM-KZ1 includes a volume limiting feature to prevent excessively loud audio. This function can be activated during the programming process. Consult the full instruction manual for detailed steps on how to enable and set the volume limit, typically capping the maximum volume at a safe level (e.g., level 28).

OPERATING INSTRUCTIONS

Once programmed, using the Sony RM-KZ1 is straightforward:

- **Power On/Off:** Press the large power button to turn your TV and/or cable box on or off.
- **Change Channels:** Press any of the 7 shaped buttons to switch directly to the pre-programmed channel.
- **Adjust Volume:** Use the volume up (+) and volume down (-) buttons to control the audio level. If the volume limiting function is active, the volume will not exceed the set maximum.

Note: If a menu appears when pressing a channel button, it often indicates that the remote is attempting to change to the channel it is already on. Simply press a different channel button to resolve this.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes. Follow the battery installation steps in the Setup section.
- **Storage:** If storing the remote for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote does not respond.	Check if batteries are inserted correctly and are not depleted. Replace if necessary. Ensure there is a clear line of sight between the remote and the device (TV/cable box).
Cannot program TV/cable box.	Verify that you are using the correct code for your specific TV/cable box model. Ensure you are following the programming steps precisely. Some advanced cable boxes (e.g., Xfinity X1) or digital channels (e.g., 15.1) may not be fully compatible. Try alternative codes for your device if the first one fails.
Menu pops up when changing channels.	This typically occurs when the remote attempts to change to a channel it is already on. Press a different channel button.
Volume limiting function not working.	Ensure the volume limiting feature was correctly activated during the programming process. Refer to the full manual for specific steps.

SPECIFICATIONS

Feature	Detail
Model Number	RM-KZ1
Brand	Sony
Product Dimensions	10.25 x 6.15 x 1.5 inches
Item Weight	4.8 ounces

Feature	Detail
Batteries Required	2 AAA batteries (not included)
Max Number of Supported Devices	1 (TV and/or Cable Box)
Compatible Devices	Television, Cable Box
Special Feature	Universal, Volume Limiting, Child-friendly design
Color	Green

WARRANTY INFORMATION

This product is covered by a limited warranty provided by Sony. Please refer to the warranty card included with your purchase or visit the official Sony website for detailed terms and conditions, including warranty period and coverage specifics. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, programming questions, or service inquiries, please contact Sony Customer Support. You can find contact information, including phone numbers and online support resources, on the official Sony website or in the documentation provided with your product.

Online Support: www.sony.com/electronics/support