

[manuals.plus](#) /› [Rollei](#) /› [Rollei Compactline 360 TS Digital Camera User Manual](#)

## Rollei Compactline 360 TS

# Rollei Compactline 360 TS Digital Camera User Manual

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Rollei Compactline 360 TS digital camera. Please read this manual thoroughly before using the camera and keep it for future reference. This document covers setup, basic operation, advanced features, maintenance, and troubleshooting.

## 2. SAFETY INFORMATION

- **Battery Safety:** Use only the specified Lithium-ion battery. Do not expose batteries to excessive heat, direct sunlight, or fire. Do not short-circuit or disassemble batteries. Keep batteries out of reach of children.
- **Water Resistance:** This camera is **not waterproof**. Avoid exposing it to water, rain, or high humidity.
- **Handling:** Avoid dropping the camera or subjecting it to strong impacts. Do not attempt to repair the camera yourself; refer to qualified service personnel.
- **Cleaning:** Use a soft, dry cloth for cleaning. For the lens, use a specialized lens cleaning cloth. Do not use harsh chemicals.
- **Operating Temperature:** Operate the camera within recommended temperature ranges to prevent damage.

## 3. PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Rollei Compactline 360 TS Digital Camera
- Lithium-ion Battery
- USB Cable
- Wrist Strap
- User Manual (this document)

- Power Adapter (for charging via USB cable)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Rollei Compactline 360 TS camera.



**Figure 4.1: Front View of the Camera.** This image displays the front of the Rollei Compactline 360 TS digital camera. Key features visible include the lens with 4x optical zoom, the flash unit, and the Rollei branding. The camera body is pink.

### 4.1 Front Panel

- **Lens:** 4x Optical Zoom Lens (28-112mm equivalent focal length, f/2.8 aperture).
- **Flash:** Built-in flash for low-light conditions.
- **Self-Timer Lamp/AF Assist Lamp:** Indicates self-timer countdown and assists autofocus in dim light.

### 4.2 Rear Panel



**Figure 4.2: Rear View of the Camera.** This image shows the back of the Rollei Compactline 360 TS digital camera, highlighting its 3-inch LCD touchscreen display. The screen is actively displaying a vibrant image, and a playback button is visible on the right side.

- **3-inch LCD Touchscreen:** For viewing images, videos, and navigating menus.
- **Playback Button:** Enters playback mode to review photos and videos.
- **Directional Pad/Control Buttons:** For menu navigation and setting adjustments.

### 4.3 Top Panel

- **Power Button:** Turns the camera on or off.
- **Shutter Button:** Press halfway to focus, fully to take a picture.

### 4.4 Bottom Panel

- **Battery/Memory Card Compartment:** Houses the Lithium-ion battery and memory card.
- **Tripod Mount:** For attaching the camera to a tripod.

## 5. SETUP

### 5.1 Charging the Battery

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the Lithium-ion battery, ensuring correct orientation.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the supplied USB cable and power adapter. The charging indicator will illuminate.
5. Once charging is complete, the indicator will change or turn off. Disconnect the camera.

### 5.2 Inserting a Memory Card

The camera supports standard SD memory cards (not included). Ensure the camera is off before inserting or removing a memory card.

1. Open the battery/memory card compartment cover.
2. Insert the memory card into the designated slot with the contacts facing the correct direction (usually towards the front of the camera). Push until it clicks into place.
3. Close the compartment cover.

## 5.3 Initial Power On and Language Setting

1. Press the Power button to turn on the camera.
2. The first time you power on, you may be prompted to set the language, date, and time. Follow the on-screen instructions using the touchscreen or control buttons.

# 6. OPERATING THE CAMERA

---

## 6.1 Taking Photos

1. Turn on the camera by pressing the Power button.
2. Frame your shot using the 3-inch LCD touchscreen.
3. Use the zoom controls (if available on the camera body or via touchscreen) to adjust the 4x optical zoom and 12x digital zoom.
4. Press the Shutter button halfway down to allow the camera to autofocus. The focus frame will turn green when focus is achieved.
5. Press the Shutter button fully down to capture the image.

## 6.2 Recording Videos

The Rollei Compactline 360 TS supports video capture, but please note that it records **without sound**.

1. Switch the camera to video recording mode (refer to the on-screen icons or menu for this option).
2. Press the Shutter button to start recording.
3. Press the Shutter button again to stop recording.

## 6.3 Playback Mode

1. Press the Playback button (usually indicated by a triangle icon) to enter playback mode.
2. Use the directional controls or swipe on the touchscreen to browse through your photos and videos.
3. To exit playback mode, press the Playback button again or the Shutter button to return to shooting mode.

## 6.4 Menu Settings

Access the camera's menu to adjust various settings such as:

- Image Resolution (up to 12 Megapixels)
- Flash Mode
- Self-Timer
- Exposure Compensation (Automatic exposure control)
- White Balance

- ISO Sensitivity (Auto ISO)
- Date and Time
- Language
- Formatting Memory Card

## 6.5 Connecting to a Computer (PictBridge)

The camera supports PictBridge technology for direct printing and can connect to computers, external storage devices, phones, and tablets via USB for file transfer.

1. Ensure the camera is off.
2. Connect the camera to your computer or PictBridge-compatible printer using the supplied USB cable.
3. Turn on the camera. It should be recognized as a removable storage device or offer PictBridge options.
4. Follow the on-screen prompts on your computer or printer to transfer or print images.

## 7. MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, lint-free cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water, then wipe dry.
- **Cleaning the Lens:** Use a lens brush to remove dust, then gently wipe with a specialized lens cleaning cloth. Do not touch the lens surface with your fingers.
- **Cleaning the LCD Screen:** Use a soft, dry cloth. Avoid pressing too hard on the screen.
- **Storage:** When not in use for extended periods, remove the battery and store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted.	Charge the battery. Reinsert the battery correctly.
Cannot take pictures.	Memory card is full, locked, or not inserted.	Delete unnecessary files. Unlock the memory card. Insert the memory card correctly.
Images are blurry.	Lens is dirty, camera shake, or out of focus.	Clean the lens. Hold the camera steady or use a tripod. Ensure autofocus locks before shooting.
Flash does not fire.	Flash mode is set to off or red-eye reduction.	Change flash mode in the menu.
Camera freezes.	Temporary software glitch.	Remove and reinsert the battery to reset the camera.

## 9. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model Name	Compactline 360 TS
Sensor Technology	CMOS
Effective Still Resolution	12 Megapixels
Optical Zoom	4x
Digital Zoom	12x
Focal Length	28-112mm (equivalent)
Maximum Aperture	f/2.8
Display	3-inch LCD Touchscreen
Image Stabilization	Yes
ISO Range	Auto
Focus Type	Autofocus
Exposure Control	Automatic
Burst Mode Speed	30 FPS
Video Capture	Yes (without sound)
Supported File Formats	JPEG, MP4
Connectivity	PictBridge, USB
Battery Type	Lithium-ion
Tripod Mount	Yes
Product Dimensions (L x W x H)	9.16 x 1.82 x 5.78 cm
Product Weight	108.86 grams
Water Resistance Level	Not waterproof
Model Year	2010

## 10. WARRANTY AND SUPPORT

---



**Figure 10.1: Rollei Warranty Badge.** This image displays a golden badge indicating a 24-month warranty and replacement service provided by Rollei, ensuring product quality.

Your Rollei Compactline 360 TS digital camera comes with a **24-month warranty and replacement service**, guaranteeing quality and support for your product.

- **Spare Parts Availability:** Information regarding the availability of spare parts is currently unavailable.
- **Software Updates:** Information regarding guaranteed software updates is currently unavailable.

For further assistance or warranty claims, please contact your local Rollei customer support or refer to the official Rollei website.

## Related Documents - Compactline 360 TS

	<p><a href="#">Rollei Powerflex X8 Dual Lens User Manual</a></p> <p>Comprehensive user manual for the Rollei Powerflex X8 Dual Lens camera, covering setup, operation, features, and technical specifications. Learn how to capture stunning 5K video and high-resolution photos with this versatile digital camera.</p>
	<p><a href="#">Rollei Compactline 880 Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für die Rollei Compactline 880 Digitalkamera, die detaillierte Anweisungen zur Ersteinrichtung, Bedienung, Einstellungen, Fehlerbehebung und Entsorgung bietet. Enthält Sicherheitshinweise und technische Daten.</p>
	<p><a href="#">Rollei Compactline 880 Digital Camera Manual</a></p> <p>User manual for the Rollei Compactline 880 digital camera, covering setup, operation, safety, and troubleshooting in multiple languages.</p>
	<p><a href="#">Rollei Powerflex 10x Digital Camera User Manual</a></p> <p>Comprehensive user manual for the Rollei Powerflex 10x digital camera, detailing safety instructions, product features, setup, settings, operational modes, connectivity options, and maintenance procedures.</p>



### [Rollei Pissarro DPF-880 Digital Photo Frame User Manual](#)

Comprehensive user manual for the Rollei Pissarro DPF-880 digital photo frame, covering setup, operation, technical specifications, safety guidelines, and disposal information.



### [Rollei Actioncam 40s Pro User Guide: Setup, Operation, and Features](#)

Explore the features and functionalities of the Rollei Actioncam 40s Pro with this official user guide. This comprehensive manual covers everything from initial setup and operation to advanced settings, waterproof use, and WiFi connectivity, ensuring you can capture high-quality footage in any adventure. Learn about technical specifications, safety guidelines, and maintenance from Rollei.