

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Candy](#) /
- › [Candy FPP 6071 X Electric Oven User Manual](#)

## Candy FPP 6071 X

# Candy FPP 6071 X Electric Oven User Manual

Model: FPP 6071 X

## INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your new Candy FPP 6071 X Electric Oven. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and care will ensure optimal performance and longevity of your oven.



This image shows the front of the Candy FPP 6071 X electric oven. It features a sleek stainless steel exterior, a large glass door, and a control panel at the top with two rotary knobs and a central digital display.

## SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the oven is properly installed by a qualified technician before first use.
- Do not touch hot surfaces. Always use oven mitts or pot holders.
- Keep children away from the appliance during operation.
- Never use water to extinguish grease fires; turn off the appliance and cover the flame.
- Unplug the oven from the power supply before cleaning or maintenance.
- Do not store flammable materials in or near the oven.
- Ensure adequate ventilation around the appliance.
- Do not attempt to repair or modify the oven yourself. Contact qualified service personnel.

## SETUP AND INSTALLATION

---

The Candy FPP 6071 X electric oven is designed for built-in installation. Professional installation is highly recommended to ensure proper electrical connection and ventilation.

### Dimensions and Weight:

**Product Dimensions:** 59.5 x 53 x 59.5 cm (Width x Depth x Height)

**Product Weight:** 33 kg

### Electrical Requirements:

**Power Consumption:** 2100 Watts

**Fuel Type:** Electric

Ensure the electrical supply matches the requirements specified on the appliance rating plate.

Refer to the detailed installation diagram provided with the packaging for precise cabinet cutout dimensions and ventilation requirements. Ensure the oven is level and securely fastened within its housing.

## OPERATING INSTRUCTIONS

---

Your Candy FPP 6071 X oven features intuitive controls for various cooking functions.

### Control Panel Overview:

The control panel consists of two rotary knobs and a central digital display.

- **Left Rotary Knob:** Used to select cooking functions (e.g., conventional, grill, fan-assisted).
- **Right Rotary Knob:** Used to set the desired temperature in degrees Celsius.
- **Digital Display:** Shows the current time, cooking duration, and other relevant indicators. It also allows for setting the timer and programming cooking cycles.

### Basic Operation:

1. **Turn On:** Rotate the left knob to select a cooking function.
2. **Set Temperature:** Rotate the right knob to set the desired temperature. The oven will begin to preheat.
3. **Timer Function:** Use the digital display controls to set a cooking timer or delayed start. Refer to the detailed instructions in the full manual for specific timer programming.
4. **Interior Light:** The oven is equipped with an interior light for visibility during cooking. This light typically activates when the oven is in operation or when the door is opened.
5. **Turn Off:** Once cooking is complete, turn both rotary knobs to the "OFF" position.

For specific cooking modes and advanced features, please consult the detailed sections in the complete product manual.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will help preserve the appearance and functionality of your oven.

- **Before Cleaning:** Always ensure the oven is cool and disconnected from the power supply.
- **Exterior Cleaning:** Use a soft cloth dampened with warm soapy water to clean the stainless steel exterior. For stubborn marks, use a non-abrasive stainless steel cleaner. Dry thoroughly with a clean cloth.
- **Interior Cleaning:** Remove all racks and accessories. Wipe the interior with a damp cloth and mild detergent. For baked-on food, use a specialized oven cleaner, following the product instructions carefully. Ensure all cleaner

residue is removed before next use.

- **Glass Door:** Clean the glass door with a glass cleaner or warm soapy water. Avoid abrasive materials that could scratch the glass.
- **Racks and Accessories:** Wash racks and trays in warm soapy water or in a dishwasher if suitable.

Do not use steam cleaners or high-pressure cleaning devices on the oven.

## TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; oven not turned on; fuse blown.	Check power connection; ensure knobs are set to a function and temperature; check household fuse/circuit breaker.
Digital display is blank.	No power supply.	Check power connection and fuse/circuit breaker.
Food is not cooking evenly.	Incorrect temperature setting; improper rack position; oven door not fully closed.	Verify temperature setting; use recommended rack position; ensure door is sealed.
Oven light not working.	Light bulb needs replacement.	Refer to the full manual for instructions on replacing the oven light bulb.

If the problem persists after attempting these solutions, please contact Candy customer service or a qualified technician.

## SPECIFICATIONS

Key technical specifications for the Candy FPP 6071 X Electric Oven:

Feature	Value
Brand	Candy
Model Number	8016361786882
Product Dimensions (W x D x H)	59.5 x 53 x 59.5 cm
Product Weight	33 kg
Heating Method	Electric Oven
Fuel Type	Electric
Wattage	2100 Watts
Color	Stainless Steel
ASIN	B0040FUVDM
First Available on Amazon.de	July 1, 2011

# WARRANTY AND SUPPORT

---

For information regarding the warranty period and terms for your Candy FPP 6071 X Electric Oven, please refer to the warranty card included with your purchase or visit the official Candy website. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Candy customer service. Contact details can typically be found on the Candy website or in the documentation provided with your appliance.

