

Teka TMW 18 BIH**Teka TMW 18 BIH 18-Liter Stainless Steel Microwave Oven**

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Teka TMW 18 BIH 18-liter stainless steel microwave oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and keep them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

3. PRODUCT OVERVIEW

The Teka TMW 18 BIH is a built-in microwave oven designed for seamless integration into your kitchen. It offers efficient cooking and defrosting capabilities with a user-friendly interface.

Key Features:

- Stainless steel anti-fingerprint finish.
- 18-liter capacity.
- Four power levels, 800 W output.
- Integrated turntable.
- 0-90 minute timer.
- Automatic defrost by time and weight.
- Three direct access menus.
- Child safety lock for the control panel.
- Stainless steel interior.

Appliance View:



Image Description: A front view of the Teka TMW 18 BIH microwave oven. The appliance features a brushed stainless steel finish. On the left is the microwave door with a dark glass panel. On the right is the control panel, which includes a digital display at the top, several push buttons for various functions (such as defrost, clock, auto menu, quick start, micro/grill, cancel/stop), and two rotary knobs for setting time/power and selecting menus. The Teka logo is visible at the bottom center of the unit.

4. INSTALLATION

The Teka TMW 18 BIH is designed for built-in installation. Ensure proper ventilation and follow the manufacturer's guidelines for cabinet dimensions. Before installation, ensure the power cord is accessible and

the appliance is unplugged.

Internal Components Assembly:

Your browser does not support the video tag.

Video Description: This video demonstrates the unboxing and assembly of the internal components of a microwave oven. It shows how to correctly place the turntable support ring, the glass turntable plate, and the metal grill rack inside the microwave cavity. This ensures proper function and even cooking.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operating the microwave oven.

5.1. Setting the Clock

1. Plug in the microwave oven. The display will show '0:00'.
2. Press the 'Clock/Pre-set' button once.
3. Turn the time/power rotary knob to set the hour.
4. Press the 'Clock/Pre-set' button again.
5. Turn the time/power rotary knob to set the minutes.
6. Press the 'Clock/Pre-set' button to confirm the setting.

5.2. Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Turn the time/power rotary knob to select the desired cooking time.
4. Press the 'Micro/Grill' button repeatedly to select the desired power level (P100, P80, P50, P30, P10).
5. Press the 'Start' button to begin cooking.

5.3. Grill Cooking

1. Place food on the grill rack (if applicable) or a heat-resistant dish.
2. Close the door.
3. Press the 'Micro/Grill' button until 'G' appears on the display.
4. Turn the time/power rotary knob to set the grilling time.
5. Press the 'Start' button to begin grilling.

5.4. Combination Cooking

This oven offers combination cooking modes (microwave + grill). Refer to the specific symbols on the control panel for available combinations.

1. Place food in a suitable container.
2. Close the door.
3. Press the 'Micro/Grill' button to cycle through combination modes (e.g., C-1, C-2).
4. Turn the time/power rotary knob to set the cooking time.
5. Press the 'Start' button to begin.

5.5. Automatic Defrost

The oven features automatic defrost by time and weight.

- **Defrost by Weight:** Press 'Defrost by W.T', turn the knob to select weight, then press 'Start'.
- **Defrost by Time:** Press 'Defrost by Time', turn the knob to select time, then press 'Start'.

5.6. Quick Start

For quick cooking at full power, simply press the 'Quick Start' button. Each press adds 30 seconds of cooking time at maximum power.

5.7. Child Safety Lock

To activate the child safety lock, press and hold the 'Cancel/Stop' button for 3 seconds. A lock indicator will appear on the display. To deactivate, repeat the process.

6. CARE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and hygienic operation.

- Always unplug the appliance before cleaning.
- Clean the oven cavity after every use with a damp cloth and mild detergent.
- The turntable and turntable support can be removed and washed in warm soapy water or a dishwasher.
- Wipe the exterior surfaces with a damp cloth. Avoid abrasive cleaners or scouring pads.
- Clean the door and door seals regularly to prevent food residue buildup.

7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following table before contacting customer service.

Problem	Possible Cause	Solution
Oven will not start	Power cord not securely plugged in. Door not closed properly.	Ensure the power cord is plugged in. Close the door firmly.
Food not heating	Incorrect cooking time or power level set. Microwave-safe dish not used.	Adjust cooking time/power. Use appropriate cookware.
Turntable not rotating	Turntable not correctly placed. Obstruction under the turntable.	Ensure turntable and support are correctly positioned. Remove any obstructions.
Display shows error code	Internal malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer service.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	TMW 18 BIH
Brand	Teka
Capacity	18 Liters
Microwave Output Power	800 Watts
Material	Stainless steel
Color	Stainless Steel
Dimensions (Product)	32.5 x 59.5 x 39 cm
Weight	17 kg
Installation Type	Built-in
Human Interface Input	Buttons, Touch Screen
Special Features	3 direct access menus, LED Display

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Teka website. Keep your proof of purchase for any warranty claims.