

[Manuals.plus](#) /

› [Memorex](#) /

› Memorex MI7805P iPod/iPhone Speaker Dock with CD Player User Manual

Memorex MI7805P

Memorex MI7805P iPod/iPhone Speaker Dock with CD Player User Manual

Model: MI7805P

1. INTRODUCTION

Thank you for purchasing the Memorex MI7805P iPod/iPhone Speaker Dock with CD Player. This device is designed to provide high-quality audio playback from your 30-pin iPod or iPhone, CDs, and other audio devices via its auxiliary input. It also features an integrated AM/FM radio. This manual provides essential information for the safe and efficient operation of your new speaker dock.



Image showing the Memorex MI7805P speaker dock, a black cube-shaped device with a top-loading CD player, an iPod/iPhone dock on top, and speakers on the sides.

2. SAFETY INFORMATION

Important Safety Instructions:

- Read these instructions thoroughly before operating the unit.
- Keep these instructions for future reference.
- Heed all warnings on the product and in the operating instructions.
- Do not use this apparatus near water or moisture.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not expose the unit to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.

3. PACKAGE CONTENTS

Please check that all items are present:

- Memorex MI7805P Speaker Dock
- AC Power Adapter
- AM Antenna
- FM Antenna
- User Manual (this document)

4. PRODUCT FEATURES

- **30-Pin iPod/iPhone Dock:** Powers and charges compatible iPod and iPhone devices.
- **Multi-directional Speakers:** Provides high-quality sound distribution throughout the room.
- **Top-Loading CD Player:** Supports standard audio CDs.
- **Digital AM/FM Radio:** Built-in tuner with station presets for easy access to your favorite radio stations.
- **Auxiliary Line-in Jack:** Connects other audio devices such as MP3 players, smartphones, or tablets.

- **Rechargeable Lithium-Ion Battery:** Provides 4 to 6 hours of continuous playback for portable use.
- **Intuitive Button Layout:** Designed for ease of use.

5. CONTROLS AND CONNECTIONS

Top Panel Controls:

- **Power Button:** Turns the unit on or off.
- **Mode Button:** Switches between iPod/iPhone, CD, FM, AM, and AUX modes.
- **Volume Up/Down Buttons:** Adjusts the audio output level.
- **Play/Pause Button:** Controls playback for iPod/iPhone and CD.
- **Skip/Search Buttons:** Navigates tracks for iPod/iPhone and CD, or tunes radio stations.
- **Preset Buttons:** Stores and recalls favorite radio stations.
- **CD Door Open/Close:** For accessing the CD compartment.

Rear Panel Connections:

- **DC IN Jack:** Connects the AC power adapter.
- **AUX IN Jack:** 3.5mm stereo input for external audio devices.
- **FM Antenna Terminal:** Connects the supplied FM wire antenna.
- **AM Antenna Terminal:** Connects the supplied AM loop antenna.

6. SETUP

6.1 Powering the Unit

The MI7805P can be powered by the included AC adapter or its internal rechargeable lithium-ion battery.

1. **AC Power:** Connect the small end of the AC power adapter to the DC IN jack on the rear of the unit. Plug the other end into a standard wall outlet.
2. **Battery Power:** The internal battery will automatically charge when the unit is connected to AC power. A full charge provides approximately 4-6 hours of playback.

6.2 Connecting Antennas

For optimal radio reception, connect the supplied antennas:

1. **FM Antenna:** Connect the FM wire antenna to the FM ANT terminal on the rear of the unit. Extend the wire fully for best reception.
2. **AM Antenna:** Connect the AM loop antenna to the AM ANT terminals on the rear of the unit. Position the antenna for best reception.

7. OPERATING INSTRUCTIONS

7.1 Power On/Off

Press the **POWER** button on the top panel to turn the unit on or off.

7.2 iPod/iPhone Playback

1. Carefully place your 30-pin iPod or iPhone into the docking well on the top of the unit. Ensure it is seated correctly.
2. Press the **MODE** button repeatedly until "iPod" or "iPhone" mode is selected.
3. Use the **PLAY/PAUSE** and **SKIP/SEARCH** buttons on the unit, or control playback directly from your docked device.
4. Adjust the volume using the **VOLUME +/-** buttons.
5. The docked device will charge automatically when the speaker dock is connected to AC power.

7.3 CD Playback

1. Press the **CD DOOR OPEN/CLOSE** button to open the CD compartment.
2. Place an audio CD into the compartment with the label side facing up.
3. Close the CD compartment.
4. Press the **MODE** button repeatedly until "CD" mode is selected.
5. The CD should begin playing automatically. If not, press the **PLAY/PAUSE** button.
6. Use the **SKIP/SEARCH** buttons to navigate tracks.
7. Adjust the volume using the **VOLUME +/-** buttons.

7.4 AM/FM Radio Operation

1. Press the **MODE** button repeatedly until "FM" or "AM" mode is selected.
2. **Manual Tuning:** Press the **SKIP/SEARCH** buttons briefly to tune to the next available station. Hold the button to scan for stations.
3. **Setting Presets:**
 - Tune to your desired station.
 - Press and hold a **PRESET** button (e.g., P1, P2) until the display flashes, indicating the station is saved.
4. **Recalling Presets:** Briefly press the desired **PRESET** button to recall a saved station.
5. Adjust the volume using the **VOLUME +/-** buttons.

7.5 Auxiliary Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN jack on the rear of the MI7805P.
2. Connect the other end of the audio cable to the headphone jack or line-out jack of your external audio device.
3. Press the **MODE** button repeatedly until "AUX" mode is selected.
4. Start playback on your external audio device.
5. Adjust the volume using the **VOLUME +/-** buttons on the MI7805P and/or your external device.

8. MAINTENANCE

8.1 Cleaning the Unit

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

- For the CD player, use a specialized CD lens cleaner if playback issues occur.

8.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If the unit will not be used for an extended period, charge the battery fully before storage and recharge it every few months.
- Do not expose the battery to excessive heat or direct sunlight.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected or faulty; battery discharged.	Ensure AC adapter is securely plugged into the unit and wall outlet. Charge the internal battery.
No sound	Volume too low; incorrect mode selected; device not properly connected.	Increase volume. Select the correct input mode (iPod, CD, FM, AM, AUX). Ensure iPod/iPhone is docked correctly or AUX cable is fully inserted.
iPod/iPhone not charging	Unit not connected to AC power; device not properly docked.	Connect the unit to AC power. Re-seat the iPod/iPhone in the dock.
CD skipping or not playing	CD is dirty or scratched; CD inserted incorrectly; lens dirty.	Clean the CD with a soft cloth. Ensure CD is inserted label-side up. Try a different CD. Use a CD lens cleaner.
Poor radio reception	Antennas not connected or poorly positioned; interference.	Connect and fully extend the FM antenna. Adjust the position of both AM and FM antennas. Move the unit away from other electronic devices.

10. SPECIFICATIONS

Feature	Detail
Model Number	MI7805P
Brand	Memorex
Connectivity Technology	Auxiliary, 30-pin Dock
Speaker Type	Stereo, 2 multi-directional speakers
Dimensions (L x W x H)	10.3 x 7.6 x 6.3 inches
Power Source	Battery Powered (Rechargeable Lithium-Ion), AC Adapter
Battery Life	4 to 6 hours (continuous play)

Feature	Detail
Compatible Devices	30-pin iPod/iPhone, MP3 Player, Smartphone, Tablet (via AUX)
Supported Standards	CD
Supported Audio Format	CD, MP3
Bluetooth Support	No
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0

11. WARRANTY AND SUPPORT

11.1 Warranty Information

This Memorex MI7805P unit comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes such as power surges. Please retain your proof of purchase for warranty claims.

11.2 Customer Support

For technical assistance, troubleshooting, or warranty service, please contact Memorex customer support. Refer to the official Memorex website or product packaging for the most current contact information. When contacting support, please have your product model number (MI7805P) and proof of purchase readily available.