

GEFU GF12330

GEFU GE12330 Digital Timer User Manual

Comprehensive Guide for Your GEFU Digital Timer

1. INTRODUCTION

Thank you for choosing the GEFU GE12330 Digital Timer. This manual provides detailed instructions for the setup, operation, and maintenance of your new kitchen timer. Designed for precision and convenience, this timer will assist you in achieving perfect results in your cooking and baking endeavors.

The GEFU GE12330 features a clear digital display, intuitive controls, and a versatile design that allows it to be magnetically attached to metal surfaces or stood upright using its integrated stand. Its durable stainless steel construction ensures longevity and easy cleaning.



Figure 1: Front view of the GEFU GE12330 Digital Timer, highlighting its sleek stainless steel finish and clear digital readout.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the timer to ensure safe operation and to prevent damage to the device or injury.

- Do not immerse the timer in water or any other liquid. It is not waterproof.
- Keep the device away from extreme heat sources, open flames, and direct sunlight.
- Avoid dropping the timer or subjecting it to strong impacts, as this may damage internal components.
- Do not attempt to disassemble or repair the timer yourself. Refer to qualified service personnel for any repairs.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x GEFU GE12330 Digital Timer
- 1 x AAA Battery (pre-installed or included separately)
- 1 x User Manual (this document)

4. SETUP

4.1 Battery Installation

The GEFU GE12330 Digital Timer operates on one AAA battery. If the display is blank or dim, the battery may need to be installed or replaced.

1. Locate the battery compartment cover on the back of the timer.
2. Slide or gently pry open the cover.
3. Insert one AAA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely. The display should now show "00:00" or the current time if it has a clock function (this model is a timer only).

4.2 Placement Options

The timer offers two convenient placement options:

- **Magnetic Attachment:** The back of the timer features a strong magnet, allowing it to be securely attached to metallic surfaces such as refrigerators, oven doors, or range hoods.
- **Integrated Stand:** Pull out the small stand located on the back of the timer to place it upright on any flat surface, such as a countertop or table.



Figure 2: The GEFU Digital Timer in a kitchen environment, showcasing its compact size and practical placement on a countertop.

5. OPERATING INSTRUCTIONS

The GEFU GE12330 Digital Timer can count up (stopwatch) or count down (timer).

5.1 Setting the Countdown Timer

To set a specific countdown time:

1. Ensure the display shows "00:00". If not, press the **MIN** and **SEC** buttons simultaneously to reset.
2. Press the **MIN** button repeatedly to set the desired minutes. Each press increases the minutes by one. Holding the button down will accelerate the setting. The maximum setting is 99 minutes.
3. Press the **SEC** button repeatedly to set the desired seconds. Each press increases the seconds by one. Holding the button down will accelerate the setting. The maximum setting is 59 seconds.
4. Once the desired time is set, press the **START/STOP** button to begin the countdown. The display will show the remaining time.
5. When the timer reaches "00:00", an audible alarm will sound. Press any button to stop the alarm.

5.2 Using the Stopwatch (Count-Up) Function

To use the timer as a stopwatch:

1. Ensure the display shows "00:00". If not, press the **MIN** and **SEC** buttons simultaneously to reset.
2. Press the **START/STOP** button. The timer will immediately begin counting up from "00:00".
3. To pause the stopwatch, press the **START/STOP** button again.
4. To resume counting, press **START/STOP** once more.
5. To reset the stopwatch to "00:00", press the **MIN** and **SEC** buttons simultaneously while the stopwatch is paused or running.

5.3 Pausing and Resetting

- To pause the timer (either countdown or count-up), press the **START/STOP** button. Press it again to resume.
- To reset the timer to "00:00" at any point, press the **MIN** and **SEC** buttons simultaneously.

6. MAINTENANCE

6.1 Cleaning

To clean your GEFU Digital Timer:

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or display.
- Ensure no water enters the battery compartment or other openings.

6.2 Battery Replacement

If the display becomes dim or the timer stops functioning, replace the AAA battery following the instructions in Section 4.1.

6.3 Storage

When not in use for extended periods, store the timer in a cool, dry place. It is recommended to remove the battery if storing for several months to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is dead or incorrectly installed.	Replace the AAA battery, ensuring correct polarity.
Timer does not start/stop.	Buttons are stuck or internal malfunction.	Ensure buttons are not obstructed. If problem persists, contact customer support.
Alarm is not sounding.	Battery low or internal speaker issue.	Replace battery. If still no sound, contact customer support.
Timer resets unexpectedly.	Low battery or internal circuit issue.	Replace battery. Avoid strong impacts.

8. SPECIFICATIONS

Model:	GE12330 (GF12330)
Material:	Stainless Steel, Plastic
Color:	Inox (Stainless Steel)
Dimensions (L x W x H):	8.2 x 2.2 x 19.2 cm (approx. 3.2 x 0.9 x 7.6 inches)
Weight:	72 grams (approx. 2.5 oz)
Power Source:	1 x AAA Battery (included)
Timer Range:	59 seconds to 99 minutes
Display Type:	Digital LCD
Display Size:	7.2 cm (diagonal)

9. WARRANTY AND SUPPORT

9.1 Product Warranty

The GEFU GE12330 Digital Timer comes with a **5-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized modification, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9.2 Customer Support






For technical assistance, warranty claims, or general inquiries, please contact GEFU customer support through their official website or the contact information provided with your purchase. When contacting support, please have your product model number (GE12330) and purchase details ready.

10. DISPOSAL INFORMATION

This product contains electronic components and a battery. Do not dispose of it with general household waste. Please follow local regulations for the proper disposal of electronic waste and batteries. Recycling helps conserve natural resources and protects the environment.

© 2024 GEFU. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - GF12330

	<p>GEFU CONTARE Digital Timer User Manual</p> <p>User manual for the GEFU CONTARE digital timer (Model 12330). Provides comprehensive instructions on operation, safety, care, specifications, and troubleshooting for this versatile kitchen timer.</p>
	<p>GEFU TEMPERE Digital Roast Thermometer with Timer - User Manual</p> <p>Comprehensive user manual for the GEFU TEMPERE digital roasting thermometer with timer, detailing technical specifications, usage instructions, cleaning, battery replacement, and safety guidelines.</p>
	<p>GEFU Pasta Perfetta De Luxe Pasta Machine User Manual and Recipe</p> <p>Comprehensive user manual for the GEFU Pasta Perfetta De Luxe pasta machine (Art.-Nr. 28300), including setup, operation for various pasta types (tagliolini, tagliatelle, lasagne, spaghetti, ravioli), drying, cooking, cleaning, and a pasta dough recipe.</p>
	<p>EU Declaration of Conformity for GEFU Digital Timer CONTARE (Model 12330)</p> <p>This document is the EU Declaration of Conformity for the GEFU Digital Timer CONTARE, item number 12330. It confirms compliance with EU directives including RoHS (2011/65/EU), Electromagnetic Compatibility (EMC) (2014/30/EU), and Batteries (2023/1542), and specifies applied EMC norms.</p>
	<p>GEFU 35400 Kitchen Blow Torch FUEGO - EU Declaration of Conformity</p> <p>Official EU Declaration of Conformity for the GEFU 35400 Kitchen Blow Torch FUEGO, confirming compliance with Regulation (EU) 2016/426 and standard EN 521:2019+AC:2019.</p>



EU-Konformitätserklärung

Hersteller: GEFU GmbH, Postfach 10, 40892 Krefeld, Deutschland
Kontakt: +49 (0)203 200-1000
E-Mail: info@gefu.de
Web: www.gefu.de
Produkt: Digitaler Timer mit Funkempfang
Modell: GEFU-DT-12335
Version: 1.0
Datum: 15.05.2024
Gezeichnet: [Signature]
Gefür: [Signature]
Gefu GmbH
Geschäftsbereich: Qualität Management

[GEFU GmbH Digital-Timer SAFE Article No. 12335 EU Declaration of Conformity](#)

EU Declaration of Conformity for the GEFU GmbH Digital-Timer SAFE (Article No. 12335), confirming compliance with RoHS, EMC, and Battery directives, and relevant EN IEC standards.