

Gemmy 23623G

User Manual for Gemmy Airblown Animated Cat (Model 23623G)

Your guide to setting up, operating, and maintaining your animated inflatable.

INTRODUCTION

Thank you for purchasing the Gemmy Airblown Animated Cat. This inflatable decoration is designed to bring a unique and spooky element to your outdoor Halloween display. Featuring an animated head and internal lighting, it creates an eye-catching presence that inflates in seconds for quick and easy setup.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before use. Keep this manual for future reference.

- **Keep Away From Fire:** Ensure the inflatable is placed a safe distance from any open flames, heat sources, or combustible materials.
- Do not operate in strong winds or storms. Secure properly to prevent damage or injury.
- Ensure all electrical connections are dry and protected from moisture.
- Do not attempt to modify or repair the product. Contact qualified personnel for assistance.
- Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement.

PACKAGE CONTENTS

Your Gemmy Airblown Animated Cat package includes everything needed for setup:

- 1 x Airblown Animated Cat Inflatable
- Stakes for securing
- Tethers/Ropes for securing
- Internal fan/blower (pre-installed)

- Internal lights (pre-installed)
- Spare light bulbs

SETUP INSTRUCTIONS

Follow these steps to set up your Airblown Animated Cat:

1. Placement

Choose a flat, clear area on your lawn or in your backyard. Ensure there are no sharp objects or debris that could puncture the inflatable. The product is designed for outdoor settings.



Image: The fully inflated Gemmy Airblown Animated Cat positioned on a green lawn.

2. Inflation

1. Unpack the inflatable and lay it flat on the chosen surface.
2. Locate the internal fan/blower and ensure it is free from obstructions.
3. Plug the power cord into a standard electrical outlet. The inflatable will self-inflate in seconds.

Watch the official setup video for a visual guide:

Your browser does not support the video tag.

Video: A demonstration of the Airblown Animated Cat inflating and showcasing its animated head movement.

3. Securing the Inflatable

Once fully inflated, secure the inflatable using the provided stakes and tethers:

- Attach the tethers to the designated loops on the inflatable.
- Stake the tethers into the ground at an angle to provide maximum stability.
- Ensure the inflatable is firmly anchored to prevent it from being blown away by wind.



Image: A side view of the Gemmy Airblown Animated Cat, highlighting its overall shape and size.

OPERATING INSTRUCTIONS

Daily Operation

To operate the Airblown Animated Cat, simply plug it into a power source. The internal fan will inflate the decoration, and the lights and animated head mechanism will activate automatically. To turn off, unplug the unit from the power source.

Lighting and Animation

The inflatable features internal lighting that illuminates the entire structure, making it visible and vibrant at night. The animated head moves from side to side, adding a dynamic and engaging element to your display. These features are integrated and operate simultaneously when the unit is powered on.

MAINTENANCE

Cleaning

To clean your inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the material or graphics. Ensure the unit is completely dry before storing.

Storage

Before storing, ensure the inflatable is completely deflated and dry. Fold it neatly and place it back into its original packaging or a suitable storage container. Store in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

If any lights need replacement, use the provided spare light bulbs. Refer to the product's internal wiring for specific bulb locations and replacement instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate fully.	Power cord not plugged in; fan obstructed; zipper/opening not closed.	Ensure power cord is securely plugged in. Check for debris blocking the fan intake. Verify all zippers or openings are fully closed.
Lights are not working.	Bulbs are loose or burnt out.	Check if bulbs are securely screwed in. Replace any burnt-out bulbs with spare ones.
Animated head is not moving.	Mechanism obstructed; motor issue.	Ensure no fabric or debris is interfering with the head's movement. If the issue persists, contact customer support.
Inflatable falls over easily.	Not properly secured; strong winds.	Re-stake the inflatable, ensuring tethers are taut and stakes are angled correctly. Consider additional securing points in windy conditions.

SPECIFICATIONS

Brand: Gemmy

Model: 23623G

Theme: Animal (Black Cat)

Occasion: Halloween

Material: Nylon, Cotton

Dimensions (L x H x W): Approximately 73" x 51" x 48.5"

Item Weight: 3.63 pounds

Features: Self-inflates, Lights up, Animated head movement

Power Source: Plug-in (AC)
UPC: 086786236239

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Gemmy Industries website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question