

[Manuals.plus](#) /

› [Casio](#) /

› Casio A159W-N1DF Classic Digital Bracelet Watch User Manual

Casio A159W-N1DF

Casio A159W-N1DF Classic Digital Bracelet Watch User Manual

Model: A159W-N1DF | Brand: Casio

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Casio A159W-N1DF Classic Digital Bracelet Watch. Designed for durability and functionality, this timepiece offers essential features for daily use. Please read this manual thoroughly to ensure proper handling and to maximize the lifespan of your watch.



Figure 1: Front view of the Casio A159W-N1DF watch, displaying the digital time and various function labels.

SETUP

1. Setting the Time and Date

1. Press the **MODE** button (bottom left) repeatedly until the time setting screen appears. The seconds digits will flash.
2. Press the **START/STOP/12-24H** button (bottom right) to reset the seconds to 00.
3. Press the **LIGHT/LAP-RESET** button (top right) to move the flashing selection to the hour digits.
4. Use the **START/STOP/12-24H** button to adjust the hour.
5. Press the **LIGHT/LAP-RESET** button to move to the minute digits, then use **START/STOP/12-24H** to adjust.
6. Continue this process for year, month, and day settings.
7. Once all settings are correct, press the **MODE** button to exit the setting mode.

2. Adjusting the Bracelet

The stainless steel bracelet can be adjusted to fit your wrist. This typically involves moving the clasp or removing links. For precise adjustment, it is recommended to visit a professional jeweler.



Figure 2: Rear view of the watch showing the fold-over clasp, which can be adjusted for wrist size.

OPERATING INSTRUCTIONS

1. Mode Navigation

Press the **MODE** button (bottom left) to cycle through the different modes:

- Timekeeping Mode (displays current time, day, date)
- Alarm Mode
- Stopwatch Mode

2. Using the Alarm

1. From Timekeeping Mode, press **MODE** to enter Alarm Mode.
2. Press **LIGHT/LAP-RESET** (top right) to select the hour or minute digits.
3. Use **START/STOP/12-24H** (bottom right) to set the desired alarm time.
4. Press **MODE** to return to Timekeeping Mode.
5. To toggle the alarm on/off, press **START/STOP/12-24H** while in Alarm Mode. An indicator will show if the alarm is active.

3. Using the Stopwatch

1. From Timekeeping Mode, press **MODE** twice to enter Stopwatch Mode.
2. Press **START/STOP/12-24H** to start and stop the stopwatch.
3. Press **LIGHT/LAP-RESET** to reset the stopwatch to zero.

4. Illuminator (Micro Light)

Press the **LIGHT/LAP-RESET** button (top right) in Timekeeping Mode to illuminate the display for easy viewing in low light conditions.

MAINTENANCE

1. Battery Replacement

The watch uses a CR2016 battery with an approximate life of 7 years. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is highly recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

2. Cleaning Your Watch

Wipe the watch case and band with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner, gasoline, alcohol, or chemical sprays, as they may damage the watch.

3. Water Resistance

This watch is water resistant. However, it is not designed for diving or prolonged submersion. Avoid operating buttons while the watch is wet. Exposure to excessive water pressure or hot water (e.g., in showers or saunas) can compromise the water resistance seals.



Figure 3: Side profile of the watch, highlighting its slim design and button placement.

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setting the Time and Date" section to reset.
Alarm does not sound.	Alarm is turned off or set incorrectly.	Ensure alarm is activated and set to the correct time.
Water inside the watch.	Compromised water resistance due to impact, aging seals, or button operation underwater.	Immediately take the watch to a qualified service center. Do not attempt to dry it yourself.

SPECIFICATIONS

Model Number: A159W-N1DF

Module: 593

Case Dimensions (H x W x D): 37.5 x 33.5 x 9.5 mm

Total Weight: 58g

Case/Bezel Material: Resin / Chrome plated

Band Material: Stainless Steel

Clasp Type: Foldover Clasp

Water Resistance: Water Resistant (suitable for minor splashes, not swimming)

Power Source: CR2016 Lithium Metal Battery (included)

Battery Life: Approximately 7 years

Accuracy: +/-30 seconds per month

Features: Micro Light, Daily Alarm, Hourly Time Signal, Auto Calendar



Figure 4: The Casio A159W-N1DF watch displayed on a wrist, showcasing its classic fit and appearance.

WARRANTY AND SUPPORT

Casio watches are manufactured to high standards and come with a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Casio website.

For technical support, service, or inquiries regarding your Casio A159W-N1DF watch, please contact Casio customer service or an authorized service center. Contact information can typically be found on the Casio official website or on your product packaging.

You can visit the official Casio Store on Amazon for more information:[Casio Store](#)

