

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cuisinart](#) /

› [Cuisinart ICE-21RP1 Ice Cream Maker Instruction Manual](#)

Cuisinart ICE-21RP1

Cuisinart ICE-21RP1 Ice Cream Maker Instruction Manual

Model: ICE-21RP1

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Cuisinart ICE-21RP1 Ice Cream Maker. Please read all instructions carefully before using the appliance. Keep this manual for future reference.



Image: The Cuisinart ICE-21RP1 Ice Cream Maker, a compact red appliance designed for making frozen desserts.

PRODUCT COMPONENTS

Your Cuisinart ICE-21RP1 Ice Cream Maker consists of several key components:

- **Base Unit:** Houses the motor and controls.
- **Freezer Bowl:** Double-insulated bowl that must be pre-frozen.
- **Mixing Paddle (Dasher):** Churns and aerates ingredients.
- **Easy-Lock Transparent Lid:** Secures the components and features a large spout for adding ingredients.



Cuisinart®

FROZEN YOGURT ICE CREAM & SORBET MAKER

Red ICE-21RP1

Make your favorite frozen treats at home in 20 minutes or less with the fully automatic Cuisinart® Frozen Yogurt - Ice Cream & Sorbet Maker!

Image: An exploded diagram showing the base unit, freezer bowl, mixing paddle, and transparent lid of the ice cream maker.

SETUP

1. **Prepare the Freezer Bowl:** Place the double-insulated freezer bowl in the freezer for at least 16-24 hours. Ensure your freezer is set to 0°F (-18°C) or colder. The bowl must be completely frozen to achieve proper consistency.
2. **Prepare Ingredients:** Prepare your ice cream, frozen yogurt, or sorbet mixture according to your recipe. Ensure the mixture is chilled in the refrigerator before adding it to the freezer bowl.
3. **Assemble the Unit:**
 - Place the base unit on a clean, dry, and level countertop.
 - Insert the frozen freezer bowl into the base.
 - Place the mixing paddle into the freezer bowl, ensuring it rests correctly.
 - Position the transparent lid onto the base, aligning the tabs and twisting to lock it securely.

OPERATING INSTRUCTIONS

1. **Start the Machine:** Plug in the unit and press the ON button. The mixing paddle will begin to rotate.
2. **Add Ingredients:** Slowly pour your chilled mixture through the large spout in the transparent lid.
3. **Churning Process:** Allow the machine to churn for approximately 20 minutes, or until the desired consistency is reached. The mixture will thicken as it churns.
4. **Add Mix-ins:** If adding solid ingredients like chocolate chips, nuts, or fruit pieces, add them during the last 5 minutes of churning through the spout.
5. **Serving:** Once churning is complete, press the OFF button and unplug the unit. Remove the lid and mixing paddle. Use a rubber spatula to scoop the frozen dessert into a separate container.
6. **Storage:** For a firmer consistency, transfer the dessert to an airtight container and place it in the

freezer for 2-4 hours.

Your browser does not support the video tag.

Video: An official product overview demonstrating the assembly and operation of the Cuisinart Ice Cream Maker.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your ice cream maker.

1. **Before Cleaning:** Always unplug the unit before cleaning.
2. **Base Unit:** Wipe the base unit with a damp cloth. Do not immerse the base in water or any other liquid.
3. **Freezer Bowl:** Hand wash the freezer bowl with warm, soapy water. Dry thoroughly before placing it back in the freezer. Do not wash in a dishwasher, as this can damage the bowl.
4. **Lid and Mixing Paddle:** The transparent lid and mixing paddle are top-rack dishwasher safe, or can be hand washed with warm, soapy water.
5. **Storage:** Store the freezer bowl in the freezer so it is always ready for use. Store the other components in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Unit not plugged in; power outlet not working.	Ensure the unit is securely plugged into a working outlet.
Mixture does not freeze.	Freezer bowl not sufficiently frozen; ingredients not chilled.	Freeze bowl for 16-24 hours; chill ingredients thoroughly before use.
Mixing paddle stops during operation.	Mixture is too thick or frozen solid.	Turn off the machine, remove the mixture, and allow it to soften slightly before re-churning if possible. Do not force the motor.

SPECIFICATIONS

Brand: Cuisinart

Model: ICE-21RP1

Color: Red

Capacity: 1.5 Quarts

Special Feature: Double Insulated Freezer, Manual

Material: Plastic

Included Components: Ice-cream maker, plastic lid, freezer bowl, blade, bowl, lid

Product Dimensions: 9.5"L x 9"W x 11.25"H

Item Weight: 10.3 Pounds

Operation Mode: Automatic

Product Care Instructions: Hand Wash

UPC: 086279168115

WARRANTY AND SUPPORT

The Cuisinart ICE-21RP1 Ice Cream Maker comes with a **Limited 3-Year Warranty**. For warranty claims, product support, or to purchase replacement parts, please contact Cuisinart customer service or visit their official website. Keep your proof of purchase for warranty validation.

For additional information and recipes, you may visit the [Cuisinart Store on Amazon](#).