



Manuals.plus /

› Sanrio /

› Charmmy Kitty #01 DVD Instruction Manual

## Sanrio Charmmy Kitty #01 DVD (ASIN: B0041KXKMU)

# Charmmy Kitty #01 DVD Instruction Manual

Brand: Sanrio | Model: Charmmy Kitty #01 DVD (ASIN: B0041KXKMU)

## INTRODUCTION

---

This manual provides essential information for the proper use and care of your Charmmy Kitty #01 DVD. This animated series DVD features Charmmy Kitty, Hello Kitty's pet cat, and her adventures. Please read this manual thoroughly before use to ensure optimal viewing experience and longevity of the product.



Image: Front cover of the Charmmy Kitty #01 DVD. It displays Charmmy Kitty, a white cat with a pink bow, alongside a small white mouse, set against a vibrant pink background with decorative black scrollwork. The title "CHARMMY KITTY" is prominently displayed at the bottom.

## SETUP

---

To begin watching your Charmmy Kitty #01 DVD, follow these steps:

1. **Connect your DVD Player:** Ensure your DVD player is properly connected to your television or display device according to its manufacturer's instructions. Typically, this involves connecting video cables (HDMI, composite, or component) and audio cables.
2. **Power On:** Turn on your television and your DVD player.
3. **Select Input:** Use your television remote to select the correct input source (e.g., HDMI 1, AV, Component) that corresponds to your DVD player's connection.
4. **Insert DVD:** Gently insert the Charmmy Kitty #01 DVD into the disc tray of your DVD player with the label side facing up. Close the disc tray.
5. **Automatic Playback:** The DVD should begin playing automatically or display a main menu.

## OPERATING

---

Once the DVD is loaded, use your DVD player's remote control to navigate and control playback:

- **Play/Pause:** Press the **PLAY** button to start playback or resume from a pause. Press the **PAUSE** button to temporarily stop playback.
- **Stop:** Press the **STOP** button to end playback and return to the beginning of the disc or the main menu.
- **Fast Forward/Rewind:** Use the **FF (Fast Forward)** and **REW (Rewind)** buttons to quickly scan through the content.
- **Skip Chapter:** Use the **NEXT** or **PREVIOUS** chapter buttons to jump to the next or previous chapter/segment of the program.
- **Menu Navigation:** Use the arrow keys (**UP, DOWN, LEFT, RIGHT**) and the **ENTER** or **OK** button on your remote to navigate through the DVD's main menu options, such as episode selection or language settings.
- **Language Selection:** This DVD is in Italian. If your DVD player offers language options, ensure Italian is selected for audio playback.

## MAINTENANCE

---

Proper care will extend the life of your Charmmy Kitty #01 DVD:

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (such as a microfiber cloth) from the center outwards in a straight line. Do not wipe in circular motions. For stubborn marks, a small amount of disc cleaning solution or water can be applied to the cloth, not directly to the disc.
- **Storage:** Store the DVD in its original case or a suitable DVD storage sleeve to protect it from dust, scratches, and direct sunlight.
- **Avoid Extremes:** Do not expose the DVD to extreme temperatures, high humidity, or direct sunlight, as this can cause warping or damage to the disc.

## TROUBLESHOOTING

---

If you encounter issues while using your Charmmy Kitty #01 DVD, consider the following:

- **Disc Not Playing / Disc Error:**

- Ensure the disc is clean and free of scratches or smudges. Clean as per the Maintenance section.
  - Verify the disc is inserted correctly into the DVD player (label side up).
  - Try playing another DVD to confirm your DVD player is functioning correctly.
  - Restart your DVD player and television.
- **No Sound:**
    - Check the volume level on your television and DVD player.
    - Ensure audio cables are securely connected between the DVD player and television/audio system.
    - Verify the correct audio input is selected on your television or audio receiver.
- **No Picture:**
    - Ensure video cables are securely connected between the DVD player and television.
    - Verify the correct video input is selected on your television.
    - Check if the television is set to the correct aspect ratio (e.g., 4:3).
- **Skipping or Freezing:**
    - Clean the disc thoroughly.
    - Inspect the disc for deep scratches or damage. Severely damaged discs may not play correctly.

## SPECIFICATIONS

---

Feature	Detail
Product Title	Charmmy Kitty #01 [Italian Edition]
Format	DVD
ASIN	B0041KXKMU
Language	Italian (Dolby Digital 2.0 Stereo)
Aspect Ratio	4:3
Number of Discs	1
Package Dimensions	7.1 x 5.42 x 0.58 inches
Item Weight	2.93 ounces

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage or technical support for your Charmmy Kitty #01 DVD, please refer to the contact information provided by the original retailer or the product packaging. If purchased new, the DVD is typically covered by standard consumer guarantees against manufacturing defects.

For further assistance, you may also contact the seller from whom you purchased this product or the official Sanrio customer support channels, if available for media products.

