

- Manuals.plus /
- > [Hermle](#) /
 - > Hermle Wall Clock Model 30471-000870 Instruction Manual

Hermle 30471-000870

Hermle Wall Clock Model 30471-000870 Instruction Manual

Model: 30471-000870 | Brand: Hermle

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Hermle Wall Clock Model 30471-000870. Please read this manual thoroughly before use to ensure proper functionality and longevity of your clock.

PRODUCT OVERVIEW



Figure 1: Front view of the Hermle Wall Clock Model 30471-000870. This image displays the clock's white dial, black hour and minute hands, a red second hand, and a brushed stainless steel frame.

The Hermle Wall Clock Model 30471-000870 is a radio-controlled wall clock featuring a classic station clock design. It is constructed with a stainless steel case and an arched front glass. The radio time receiver ensures precise timekeeping and automatic adjustment for daylight saving time.

- **Model:** 30471-000870
- **Brand:** Hermle
- **Type:** Wall Clock
- **Movement:** Radio Controlled Clockwork
- **Material:** Stainless Steel
- **Display:** Analog

PACKAGE CONTENTS

Verify that all items are present in the package:

- Hermle Wall Clock Model 30471-000870
- Instruction Manual (this document)
- *Note: Battery is not included and must be purchased separately.*

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one AA battery (not included) according to the polarity markings (+/-).
4. Close the battery compartment cover securely.

2. Initial Time Synchronization

Upon battery installation, the clock will automatically search for the radio time signal. This process may take several minutes. Ensure the clock is placed in an area with good signal reception, away from large metal objects or electronic devices that may cause interference.

- The hands will move to the 12 o'clock position and then begin to search for the signal.
- Once the signal is received, the clock will set itself to the correct time.
- Automatic adjustment for daylight saving time will occur without manual intervention.

3. Mounting the Clock

The clock is designed for wall mounting. Use appropriate hardware (not included) for your wall type to ensure secure installation.

1. Select a suitable location on a wall, preferably indoors and away from direct sunlight or extreme temperatures.
2. Mark the desired position for the mounting screw/hook.
3. Install a screw or hook securely into the wall, ensuring it can support the clock's weight (approximately 2.82 pounds).
4. Carefully hang the clock onto the installed screw/hook using the hanging slot on the back of the clock.



Figure 2: The Hermle Wall Clock displayed in a typical indoor setting, demonstrating its appearance when mounted on a wall.

OPERATING INSTRUCTIONS

Once the battery is installed and the clock has synchronized with the radio signal, no further manual operation is typically

required. The clock will continuously display the correct time and adjust automatically.

- **Time Display:** The clock features an analog display with hour, minute, and second hands.
- **Radio Control:** The integrated radio receiver ensures accurate timekeeping by synchronizing with a time signal.
- **Automatic Adjustments:** The clock automatically adjusts for daylight saving time (summer/winter time changes).

MAINTENANCE

Cleaning

- To clean the clock, use a soft, dry cloth.
- For the glass, a slightly damp cloth can be used, followed by a dry cloth to prevent streaks.
- Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.

Battery Replacement

Replace the battery when the clock hands stop moving or the time becomes inaccurate. Refer to the "Battery Installation" section under Setup for instructions.

- Always use a fresh, high-quality AA battery.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not start or stops	Dead or incorrectly installed battery.	Replace the battery with a new AA battery, ensuring correct polarity.
Clock displays incorrect time	Poor radio signal reception or interference.	Move the clock to a different location, away from electronic devices or large metal objects. Allow time for re-synchronization.
Clock does not adjust for daylight saving time	Weak radio signal or temporary signal disruption.	Ensure the clock is in a location with good signal reception. The clock should automatically adjust within 24 hours. If not, try removing and re-inserting the battery to force a re-synchronization.
Hands are stuck or move erratically	Low battery or internal mechanism issue.	Replace the battery. If the problem persists, contact customer support.

SPECIFICATIONS

- **Brand:** Hermle
- **Model Number:** 30471-000870
- **Color:** Silver
- **Display Type:** Analog
- **Special Feature:** Radio Controlled

- **Product Dimensions:** 11.81" (Diameter) x 1.97" (Depth) (approx. 30cm x 5cm)
- **Power Source:** Battery Powered (1x AA battery, not included)
- **Indoor/Outdoor Usage:** Indoor
- **Material:** Stainless Steel (Frame Material)
- **Item Weight:** 2.82 Pounds (approx. 1.28 kg)
- **Mounting Type:** Wall Mount
- **Manufacturer:** Hermle Uhrenmanufaktur

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Hermle website or contact your retailer. Keep your purchase receipt as proof of purchase.

Manufacturer: Hermle Uhrenmanufaktur

Website: www.hermle-clocks.com

© 2023 Hermle Uhrenmanufaktur. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0041KZWBM>

More documents and user manuals: <https://manuals.plus/>