

Nikon S8100

Nikon Coolpix S8100 Digital Camera Instruction Manual

Model: S8100

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your Nikon Coolpix S8100 digital camera. Please read this manual thoroughly before using your camera and keep it in a safe place for future reference.

2. CAMERA COMPONENTS

Familiarize yourself with the main components of your Nikon Coolpix S8100 camera.



Figure 2.1: Front view of the Nikon Coolpix S8100 camera, showing the lens, flash, and brand logo.



Figure 2.2: Angled view of the Nikon Coolpix S8100 camera, highlighting the top controls and LCD screen.

2.1. Front Panel

- **Lens:** 10x Optical Zoom-Nikkor ED Glass Lens.
- **Flash:** Built-in flash for low-light conditions.
- **Self-Timer Lamp:** Indicates self-timer operation.

2.2. Rear Panel

- **LCD Monitor:** 3-inch Ultra-High Resolution (921,000-dot) Clear Color Display.
- **Control Buttons:** Navigation, menu, playback, and delete functions.

2.3. Top Panel

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Captures still images.
- **Zoom Control:** Adjusts optical zoom.

3. INITIAL SETUP

3.1. Inserting the Battery

The camera uses an EN-EL12 Li-ion rechargeable battery. Ensure the battery is fully charged before first use.

1. Open the battery chamber cover located on the bottom of the camera.
2. Insert the EN-EL12 battery with the correct orientation, matching the polarity indicators.
3. Close the battery chamber cover securely.

3.2. Inserting a Memory Card

The Nikon Coolpix S8100 supports SD/SDHC memory cards (not included).

1. Open the memory card slot cover, usually located next to the battery chamber.
2. Insert the SD/SDHC card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. Close the memory card slot cover.

3.3. Charging the Battery

Use the supplied EH-68P Charging AC Adapter and UC-E6 USB Cable to charge the battery while it is in the camera.

1. Connect the UC-E6 USB Cable to the camera's USB port.
2. Connect the other end of the USB cable to the EH-68P Charging AC Adapter.
3. Plug the AC adapter into a power outlet. The charging indicator will light up.
4. Charging is complete when the indicator turns off.

4. BASIC OPERATION

4.1. Turning the Camera On/Off

Press the **Power button** on the top panel to turn the camera on or off.

4.2. Taking Still Images

1. Turn on the camera.
2. Frame your shot using the LCD monitor.
3. Press the **Shutter button** halfway down to focus. The focus indicator will light up.
4. Press the **Shutter button** all the way down to capture the image.

4.3. Recording Full HD Movies

The Coolpix S8100 supports Full HD (1080p) movie recording with stereo sound.

1. Turn on the camera.
2. Press the dedicated **Movie Record button** (usually marked with a red dot) to start recording.
3. Press the **Movie Record button** again to stop recording.
4. During recording, you can use the zoom control to adjust the optical zoom.



Video 4.1: Official product video demonstrating the Nikon Coolpix S8100's features, including its fast operation and Full HD movie recording capabilities.

4.4. Playback

To view captured images and videos:

1. Press the **Playback button** (usually marked with a play icon).
2. Use the navigation buttons to scroll through your photos and videos.
3. Press the **OK/SET button** to play a video.

5. ADVANCED FEATURES

5.1. Scene Modes

The camera offers 17 scene modes, including Scene Auto Selector, which automatically recognizes the scene and selects the most appropriate mode.

- Access scene modes via the **Mode Dial** or **MODE button**.
- Select a scene mode that matches your shooting environment for optimized results.

5.2. Image Stabilization (VR)

The 4-way VR Image Stabilization System minimizes camera shake for sharper images and smoother videos.

- **Optical VR:** Lens shift technology.
- **Motion Detection:** Adjusts shutter speed and ISO for moving subjects.

5.3. Smart Portrait System

Enhance your portraits with features like:

- **Smile Timer:** Automatically releases the shutter when a smile is detected.
- **In-Camera Red-Eye Fix:** Corrects red-eye automatically.
- **Face-Priority AF:** Detects up to 12 faces for optimal focus.
- **Skin Softening:** Smoothes skin tones.
- **Blink Warning:** Alerts if a subject has blinked.

6. MAINTENANCE AND CARE

6.1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution.
- Avoid using harsh chemicals or abrasive materials.

6.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Do not expose batteries to extreme temperatures.
- Charge batteries fully before extended storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted.	Charge the battery or reinsert it correctly.
Images are blurry.	Camera shake, subject movement, or incorrect focus.	Hold the camera steady, use a faster shutter speed, or ensure proper focus.
Cannot record video.	Memory card is full or too slow.	Delete unnecessary files or use a faster SDHC card (Class 6 or higher recommended).

8. SPECIFICATIONS

- **Image Sensor:** 12.1-megapixel CMOS sensor
- **Lens:** 10x Optical Zoom-Nikkor ED Glass Lens (30-300mm equivalent)
- **Display:** 3-inch Ultra-High Resolution (921,000-dot) Clear Color LCD
- **Image Stabilization:** 4-way Optical VR Image Stabilization
- **Video Recording:** Full HD (1080p) with Stereo Sound
- **ISO Sensitivity:** ISO 160 - 3200
- **Storage Media:** SD/SDHC memory cards
- **Connectivity:** HDMI, USB
- **Power Source:** EN-EL12 Li-ion rechargeable battery
- **Dimensions:** Approximately 103.7 x 59.2 x 27.2 mm (4.1 x 2.3 x 1.1 in.)
- **Weight:** Approximately 150 g (5.3 oz) including battery and SD memory card

9. WARRANTY AND SUPPORT

9.1. Limited Warranty

This product is covered by a limited warranty. Please refer to the warranty card included in the product packaging for full details regarding coverage, duration, and conditions. The warranty typically covers defects in materials or workmanship under normal use.

Note: Warranty may be voided by misuse, abuse, negligence, sand, liquids, impact, current fluctuations, or failure to follow operating instructions.





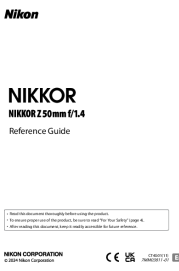
9.2. Customer Support

For technical assistance, product inquiries, or service requests, please visit the official Nikon support website or contact their customer service. Contact information can typically be found on the warranty card or the Nikon website.

© 2023 Nikon Corporation. All rights reserved.

Related Documents - S8100

[illegible]

	<p>Nikon COOLPIX 8800: 8MP Digital Camera with 10x Optical Zoom and VR</p> <p>Explore the Nikon COOLPIX 8800, an 8.0-megapixel digital camera featuring a 10x optical Zoom-Nikkor ED lens, Vibration Reduction (VR) system, and a versatile Vari-Angle LCD monitor for exceptional image quality and shooting flexibility.</p>
	<p>Nikon COOLPIX 8700 Digital Camera: Features, Specifications, and Overview</p> <p>Explore the Nikon COOLPIX 8700, an 8.0-megapixel digital camera featuring an 8x Zoom-Nikkor ED lens, advanced shooting modes, and robust build. Discover its key features, specifications, and included accessories.</p>
	<p>Nikon COOLPIX A900 Digital Camera Specifications</p> <p>Detailed technical specifications for the Nikon COOLPIX A900 compact digital camera, including sensor, lens, display, connectivity, power, and dimensions.</p>
	<p>Nikon NIKKOR Z DX 16-50mm f/3.5-6.3 VR User's Manual</p> <p>User's manual for the Nikon NIKKOR Z DX 16-50mm f/3.5-6.3 VR lens, covering safety precautions, usage instructions, parts identification, care, accessories, and technical specifications.</p>
	<p>NIKKOR Z 50mm f/1.4 Lens Reference Guide Nikon</p> <p>Official reference guide for the Nikon NIKKOR Z 50mm f/1.4 lens. Covers usage, safety, maintenance, specifications, and compatibility for Nikon Z mount cameras.</p>