

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bodum](#) /
- › [Bodum Bistro Electric Conical Burr Coffee Grinder User Manual](#)

## Bodum 10903-01US-3

# Bodum Bistro Electric Conical Burr Coffee Grinder

## USER INSTRUCTION MANUAL

Model: 10903-01US-3 | Brand: Bodum

## INTRODUCTION

The Bodum Bistro Electric Conical Burr Coffee Grinder is designed to consistently crush coffee beans between conical burrs, preserving the coffee's intrinsic flavor and aroma. This manual provides detailed instructions for the proper setup, operation, and maintenance of your grinder to ensure optimal performance and longevity.

## KEY FEATURES

- **Conical Burr Grinding:** Crushes beans between stainless steel conical burrs, preserving flavor and aroma better than blade grinders.
- **Preset Timer:** Push-button timer allows grinding of exact coffee amounts, reducing waste and maintaining freshness.
- **12 Adjustable Grind Settings:** Easily adjust from fine espresso grind to coarse French press grind.
- **Friction Clutch:** Protects the grinding gear from small stones or foreign objects.
- **Borosilicate Glass Catcher:** Dishwasher-safe glass container with a silicone grip reduces static cling of coffee grounds.
- **Capacity:** Holds up to 7.75 ounces of coffee beans.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the grinder on a stable, dry, and level surface. Ensure it is away from water and heat sources.
3. **Assemble:** Ensure the borosilicate glass catcher is securely placed in its position at the base of the unit.
4. **Power Connection:** Plug the power cord into a standard 120-volt electrical outlet.



The Bodum Bistro Electric Conical Burr Coffee Grinder, ready for use.

## OPERATING INSTRUCTIONS

1. **Fill Bean Hopper:** Open the lid of the bean hopper at the top of the grinder and pour in your desired amount of whole coffee beans. Do not overfill beyond the MAX line. Close the lid securely.
2. **Select Grind Setting:** Rotate the upper bean container to select your desired grind setting. The grinder offers 12 adjustable settings, ranging from fine (for espresso) to coarse (for French press). Refer to the markings on the grinder for guidance.



Adjustable grind settings for various brewing methods.

3. **Set Grinding Time:** Use the pre-set timer dial on the top of the unit to select the desired grinding duration (from 5 to 20 seconds). This controls the amount of coffee ground.

## PRE-SET TIMER

Grind the exact amount of coffee needed, keeping beans fresh and preventing waste.



The pre-set timer dial for precise grinding.

4. **Start Grinding:** Press the start/stop button located on the top of the grinder. The grinder will operate for the selected duration. You can press the button again to stop grinding prematurely if needed.
5. **Collect Ground Coffee:** Once grinding is complete, carefully remove the borosilicate glass catcher from the base of the unit. The ground coffee is now ready for brewing.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Empty Hopper:** Empty any remaining whole beans from the hopper.
3. **Clean Burr:** Use a brush (often supplied with the grinder) to remove any residual coffee grounds from the burrs. The upper burr can typically be removed for deeper cleaning.
4. **Wash Container:** The borosilicate glass catcher is dishwasher-safe. Wash it with warm, soapy water or place it in the dishwasher. Ensure it is completely dry before reattaching.

5. **Wipe Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not immerse the main unit in water.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in; power switch off; hopper/container not correctly seated.	Ensure power cord is securely plugged in. Turn on the side power switch. Check that the bean hopper lid and ground coffee container are properly in place.
Grinder stops during operation.	Overheating; jam in burrs; timer expired.	Unplug and allow to cool for 5-10 minutes. Check for foreign objects or excessive coffee buildup in the burrs and clean. Adjust timer setting if more grinding time is needed.
Inconsistent grind.	Burrs are dirty or worn; incorrect grind setting.	Clean the burrs thoroughly. Adjust the grind setting to a finer or coarser option as needed for your brewing method.
Excessive static cling of grounds.	Dry beans; environmental humidity.	While the glass container helps, a few drops of water on the beans before grinding can reduce static. Ensure the container is completely dry.

## SPECIFICATIONS

Attribute	Detail
Brand	Bodum
Model Number	10903-01US-3
Color	Black
Product Dimensions	7.6"L x 7.1"W x 12.5"H
Item Weight	7.8 ounces
Voltage	120 Volts
Grind Settings	12 (Adjustable)
Bean Hopper Capacity	7.75 ounces

## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Bodum website or contact their customer service directly.

Additional documentation, including a Safety Information PDF and a User Manual PDF, may be available for download:

[Safety Information \(PDF\)](#)

[User Manual \(PDF\)](#)

