

Ford Mustang

2006 Ford Mustang Repair Shop Manual

Official Service and Maintenance Instructions

[Introduction](#) [Preparation](#) [Using the Manual](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides comprehensive service and repair information for the 2006 Ford Mustang. It is designed for technicians and individuals with mechanical aptitude to perform maintenance, diagnosis, and repair procedures correctly and safely. Adherence to the instructions and safety warnings within this manual is crucial for preventing personal injury and vehicle damage.

All information, illustrations, and specifications contained in this manual are based on the latest product information available at the time of publication. Ford reserves the right to make changes at any time without notice.

2. PREPARATION AND SAFETY

Before commencing any repair or maintenance work on your 2006 Ford Mustang, ensure the following safety precautions and preparations are observed:

- **Personal Protective Equipment:** Always wear appropriate safety gear, including safety glasses, gloves, and protective clothing.
- **Vehicle Stability:** Ensure the vehicle is parked on a level surface, the parking brake is engaged, and the wheels are chocked. If lifting the vehicle, use approved jack stands or a hoist.
- **Battery Disconnection:** Disconnect the negative battery cable before working on electrical components to prevent accidental activation or short circuits.
- **Fluid Handling:** Exercise caution when handling vehicle fluids (oil, coolant, brake fluid, etc.). Dispose of all fluids responsibly according to local regulations.
- **Tool Selection:** Use only the correct tools for each task. Refer to the manual for any special tools required.

No product images are available for embedding in this section based on the provided data.

3. USING THIS MANUAL

This manual is organized into sections covering various vehicle systems and components. Each section provides detailed procedures, specifications, and diagnostic information. To effectively use this manual:

1. **Identify the System:** Locate the relevant section for the component or system you are working on (e.g., Engine, Transmission, Brakes, Electrical).
2. **Review Safety Warnings:** Pay close attention to all safety warnings and cautions presented at the beginning of each section and within specific procedures.
3. **Follow Step-by-Step Procedures:** Perform tasks in the order specified. Do not skip steps.
4. **Consult Diagrams and Illustrations:** Use the provided diagrams, exploded views, and wiring schematics to aid in understanding component locations and assembly.
5. **Refer to Specifications:** Always use the specified torque values, fluid types, and capacities.

No official product videos are available for embedding in this section based on the provided data.

4. SCHEDULED MAINTENANCE

Regular maintenance is essential for the longevity and optimal performance of your 2006 Ford Mustang. This section outlines common maintenance tasks and refers to detailed procedures found elsewhere in the manual.

Key Maintenance Items:

- **Engine Oil and Filter Change:** Refer to the 'Engine Lubrication System' section for detailed steps and recommended oil specifications.
- **Air Filter Replacement:** Instructions for replacing the engine air filter and cabin air filter (if equipped) are in the 'Engine Air Intake' and 'HVAC' sections, respectively.
- **Tire Rotation and Inspection:** Consult the 'Wheels and Tires' section for proper rotation patterns and inspection criteria.
- **Fluid Level Checks:** Regularly inspect coolant, brake fluid, power steering fluid, and transmission fluid levels. Refer to the respective system sections for correct procedures and fluid types.
- **Brake System Inspection:** Periodically check brake pad wear, rotor condition, and brake fluid lines. Detailed procedures are in the 'Brake System' section.

5. TROUBLESHOOTING COMMON ISSUES

This section provides guidance on diagnosing common operational problems. For detailed diagnostic charts and specific repair procedures, refer to the relevant system sections within the manual.

Diagnostic Approach:

1. **Symptom Identification:** Clearly define the problem (e.g., engine misfire, brake noise, electrical malfunction).
2. **Initial Checks:** Perform basic checks such as fluid levels, battery condition, and visual inspection for loose connections or obvious damage.
3. **Diagnostic Trouble Codes (DTCs):** If the 'Check Engine' light is illuminated, retrieve DTCs using an OBD-II scanner. Refer to the 'On-Board Diagnostics' section for code interpretation.
4. **Follow Diagnostic Charts:** Use the step-by-step diagnostic flowcharts provided in the manual for the specific system exhibiting the fault.
5. **Test and Verify:** After performing a repair, test the vehicle to ensure the problem is resolved and no new issues have arisen.

6. GENERAL SPECIFICATIONS

This section provides general information about the 2006 Ford Mustang Repair Shop Manual. For detailed vehicle-specific specifications (e.g., torque values, fluid capacities, dimensions), refer to the relevant sections within the manual.

Attribute	Value
Publisher	Ford
Publication Date	January 1, 2006
Language	English
Item Weight	0.01 ounces
Dimensions	11 x 8.5 x 2.75 inches

7. WARRANTY AND SUPPORT

This manual is a reference document for vehicle repair and maintenance. It does not carry a separate warranty. For information regarding the warranty of your 2006 Ford Mustang vehicle, please consult your vehicle's original owner's manual or contact an authorized Ford dealership.

Technical Support:

For technical assistance related to vehicle repair or specific procedures not clearly understood, it is recommended to:

- Contact an authorized Ford service center.
- Consult with a certified automotive technician.