

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sony](#) /

› [Sony DPF-D830 8-Inch SVGA Digital Photo Frame User Manual](#)

Sony DPF-D830

Sony DPF-D830 8-Inch SVGA Digital Photo Frame User Manual

Model: DPF-D830

Introduction	Safety Information	Package Contents	Setup	Operation	Maintenance
					Warranty & Support
	Troubleshooting	Specifications			

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Sony DPF-D830 8-Inch SVGA Digital Photo Frame. Please read this manual thoroughly before using the product to ensure correct usage and to maximize its performance and lifespan.

The Sony DPF-D830 is designed to display your digital photos and videos with clarity on its 8-inch SVGA LCD screen. It features various slideshow transitions, clock and calendar modes, and includes a built-in battery for portable use.



Figure 1.1: Sony DPF-D830 Digital Photo Frame. This image shows the black digital photo frame with a family photo displayed on its screen, featuring a mother, father, and child smiling.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the product and ensure user safety:

- Do not expose the device to rain or moisture to avoid fire or electric shock.
- Do not open the casing. Refer all servicing to qualified personnel.
- Keep the device away from direct sunlight, heat sources, and extreme temperatures.
- Use only the specified power adapter.
- Avoid placing heavy objects on the power cord.
- Clean the screen with a soft, dry cloth. Do not use liquid cleaners.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Sony DPF-D830 Digital Photo Frame
- AC Power Adapter
- Remote Control
- Stand (if applicable)
- User Manual (this document)

Note: A USB cable for connecting to a computer may not be included and might need to be purchased separately.

4. SETUP

4.1. Physical Setup

1. **Attach the Stand:** Securely attach the included stand to the back of the digital photo frame. Ensure it is stable on a flat surface.
2. **Connect Power:** Plug the AC power adapter into the DC IN port on the frame, then plug the adapter into a wall outlet. The frame will typically power on automatically or enter standby mode.

4.2. Loading Photos and Videos

The DPF-D830 supports loading media via USB or memory card slots (if available). It also has internal memory.

- **Using a USB Device:** Connect a USB flash drive or a camera directly to the USB port on the frame. Navigate to the "Import" menu to transfer files to the internal memory.
- **Using Memory Cards:** Insert a compatible memory card (e.g., SD, Memory Stick) into the appropriate slot. The frame should detect the card, allowing you to view or import files.
- **From a Computer:** Connect the digital photo frame to your computer using a USB cable. The frame will appear as a removable drive, allowing you to drag and drop files into its internal memory.

Note: Image resolution may affect the number of photos that can be stored. Resizing photos to a resolution closer to the frame's native resolution (SVGA) can optimize storage space.

5. OPERATION

5.1. Basic Navigation and Controls

The digital photo frame can be operated using the buttons on the device or the included remote control.

- **Power Button:** Turns the frame on or off.

- **Menu Button:** Accesses the main menu for settings and options.
- **Arrow Buttons:** Navigate through menus and select options.
- **Enter Button:** Confirms selections.
- **View Mode Button:** Changes the display mode (e.g., single photo, index view). *Note: Some users report this button may require a firm press or primarily functions via remote control.*

5.2. Displaying Photos and Videos

Once media is loaded, you can select various display options:

- **Slideshow:** From the main menu, select "Slideshow" to begin displaying your photos in sequence. You can customize slideshow intervals and transition effects in the settings.
- **Single Photo View:** Browse through your photos one by one using the arrow buttons.
- **Video Playback:** Select a video file from your media library to play it. The frame supports playback of video files.
- **Background Music:** Enable background music playback with your photos through the settings menu.

5.3. Clock and Calendar Modes

The frame offers additional utility modes:

- **Clock Mode:** Displays the current time.
- **Calendar Mode:** Displays a calendar, often with a small photo preview.
- Access these modes via the main menu or dedicated buttons on the remote control.

5.4. Image Import and Export

You can manage your media files directly on the frame:

- **Import:** Transfer photos and videos from connected USB devices or memory cards to the frame's internal memory.
- **Export:** Copy files from the frame's internal memory to an external USB device or memory card.
- These options are typically found within the "File Management" or "Settings" menu.

6. MAINTENANCE

6.1. Cleaning the Frame

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water, then wipe dry immediately. Avoid harsh chemicals or abrasive materials.
- **Casing:** Wipe the exterior casing with a soft, dry cloth.
- Ensure the device is powered off and unplugged before cleaning.

6.2. Battery Care

The DPF-D830 features a built-in battery for portable use.

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the frame for an extended period, charge the battery to approximately 50% before storage.
- Do not expose the battery to extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your digital photo frame, refer to the following common solutions:

Problem	Possible Cause / Solution
Frame does not power on.	<ul style="list-style-type: none"> Ensure the AC power adapter is securely connected to both the frame and a working power outlet. Check if the power outlet is functional. If using battery power, ensure the battery is charged.
No images displayed.	<ul style="list-style-type: none"> Verify that photos have been successfully loaded onto the frame's internal memory or a connected storage device. Check the file formats of your images. The frame supports common formats like JPEG. Ensure the correct source (internal memory, USB, memory card) is selected in the menu.
Remote control not working.	<ul style="list-style-type: none"> Check and replace the battery in the remote control. Ensure there are no obstructions between the remote and the frame's IR receiver. Point the remote directly at the frame.
"View Mode" button unresponsive.	<ul style="list-style-type: none"> Press the button firmly and hold for a moment. If the issue persists, try using the remote control to change the view mode.
Cannot import/export files.	<ul style="list-style-type: none"> Ensure the external storage device (USB drive, memory card) is properly inserted and recognized by the frame. Check if the storage device has sufficient free space. Verify that the files are in a compatible format.

8. SPECIFICATIONS

Feature	Detail
Brand	Sony
Model Number	DPF-D830
Screen Size	8 Inches
Resolution	SVGA (Super Video Graphics Array)
Aspect Ratio	4:3
Color	Black
Power Source	Battery Powered (Built-in battery) / AC Adapter
Product Dimensions	9.7 x 7.1 x 0.91 inches
Item Weight	1.64 pounds
Supported Media	Photos (JPEG), Videos, Background Music
Connectivity	USB, Memory Card Slots (specific types not detailed in source, assuming common ones)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Sony support website. Keep your proof of purchase for warranty claims.

Online Support: For the latest support information, FAQs, and software updates, please visit the Sony support website.

Contact Information: Refer to your product's packaging or the Sony website for regional customer service contact details.

© 2024 Sony Corporation. All rights reserved. Specifications are subject to change without notice.