

KORG MICROPIANOBK

Korg microPiano 61-Key Miniature Grand Piano User Manual

Model: MICROPIANOBK

INTRODUCTION

The Korg microPiano is a compact digital piano designed with the aesthetic of a grand piano, featuring an opening lid. It incorporates Korg's expressive 61-key Natural Touch mini-keyboard, engineered for playability. The instrument produces a rich, stereo-sampled grand piano sound, utilizing the same samples found in Korg's higher-end digital pianos. This manual provides essential information for setting up, operating, and maintaining your microPiano.



Figure 1: Korg microPiano 61-Key Miniature Grand Piano. This image displays the compact digital piano with its lid open, showcasing its miniature grand piano design and 61-key keyboard.

SETUP

1. Unpacking and Placement

- Carefully remove the microPiano from its packaging.

- Place the instrument on a stable, flat surface. Its dimensions are approximately 34.5 x 8.5 x 16 inches (87.6 x 21.6 x 40.6 cm) and it weighs about 11.44 pounds (5.2 kg).
- Ensure adequate ventilation around the unit.

2. Power Supply

The Korg microPiano can be powered in two ways:

- **AC Adapter:** Connect the included AC adapter to the DC IN jack on the rear panel of the microPiano and then to a standard electrical outlet.
- **Batteries:** For portable use, the microPiano requires six AA batteries (alkaline recommended). Insert the batteries into the battery compartment located on the underside of the unit, ensuring correct polarity.

3. Audio Connections

- **Headphones/Auxiliary Output:** A 3.5mm jack is provided for connecting headphones for private practice or for connecting to an external amplifier or sound system.



Figure 2: Angled view of the Korg microPiano. This image highlights the side profile and the control panel area, where power and audio connections are typically located.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power button, typically on the rear or side panel. Press it to turn the microPiano on. Press it again to turn it off.

2. Adjusting Volume

Use the volume control knob or buttons to adjust the output level. Note that the volume control may be compact in size.

3. Sound Selection

The microPiano offers 61 distinct sounds, including various pianos, electric pianos, organs, harpsichords, and other instruments. Refer to the instrument's control panel for buttons or a dial to browse and select different sounds. The primary grand piano sound uses high-quality stereo samples.



Figure 3: Top-down view of the Korg microPiano keyboard. This image clearly shows the 61-key Natural Touch mini-keyboard, essential for sound input.

4. Short Phrase Sounds

Among the 61 sounds, 25 are designated as "Short Phrase Sounds." These sounds automatically generate musical phrases when a key is held down. Examples include arpeggiated piano patterns or organ phrases. Experiment with these to discover unique musical textures and effects.

5. Demonstration Songs

The microPiano includes 40 demonstration songs, primarily classical compositions. These can be played back for enjoyment or as background music. The demonstration songs can be played with their pre-assigned sounds or with any other selected sound.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the microPiano. For stubborn dirt, slightly dampen the cloth with water and a mild, non-abrasive cleaner, then wipe dry immediately. Avoid using harsh chemicals, solvents, or abrasive materials.
- **Storage:** When not in use, keep the microPiano covered to protect it from dust. Store it in a location free from extreme temperatures, humidity, and direct sunlight.
- **Battery Care:** If using batteries, remove them if the instrument will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

No Sound

- Ensure the power is on and the AC adapter is securely connected, or that batteries are correctly inserted and not depleted.
- Check the volume level. Increase it if it is set too low.
- If headphones are connected, ensure they are fully plugged in and functioning. Disconnect them to check if sound comes from the internal speakers.

Keys Not Responding

- Ensure the instrument is powered on.
- If only certain keys are not responding, gently clean around the keys. If the issue persists, professional service may be required.

Distorted Sound

- Reduce the volume level.
- If connected to an external amplifier, check the amplifier's input level and volume settings.

SPECIFICATIONS







Feature	Detail
Model Name	microPiano 61
Model Number	MICROPIANO61K
Brand	KORG
Number of Keys	61
Keyboard Type	Natural Touch mini-keyboard
Sounds	61 (including 25 Short Phrase Sounds)
Demonstration Songs	40
Connectivity	3.5mm Jack (Headphones/Auxiliary Out)
Power Source	Electric (AC Adapter) or 6 AA Batteries (Alkaline)
Product Dimensions	34.5 x 8.5 x 16 inches (87.6 x 21.6 x 40.6 cm)
Item Weight	11.44 pounds (5.2 kg)
First Available	February 18, 2011

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official KORG website. Contact details for customer support are typically available on the manufacturer's website.

Note: No official product videos from the seller were available for embedding in this manual.

Related Documents - MICROPIANO61K

<p>XE20/XE20SP DIGITAL ENSEMBLE PIANO</p> <p>Quick Start Guide Guide de prise en main Blickstart Guía de inicio rápido クイックスタートガイド</p>  <p>KORG</p>	<p>Korg XE20/XE20SP Digital Ensemble Piano Quick Start Guide</p> <p>Get started with your Korg XE20/XE20SP digital ensemble piano. This quick start guide covers essential setup, basic operations, features, and precautions for immediate musical enjoyment.</p>
<p>SP-500 DIGITAL PIANO</p> <p>Owner's Manual</p>  <p>KORG</p>	<p>Korg SP-500 Digital Piano Owner's Manual</p> <p>Explore the features and operations of the Korg SP-500 Digital Piano with its comprehensive owner's manual. Learn about sound selection, automatic accompaniment, recording, and more.</p>
<p>XE20/XE20SP DIGITAL ENSEMBLE PIANO</p> <p>Manual del usuario</p>  <p>KORG</p>	<p>Korg XE20/XE20SP Digital Ensemble Piano User Manual</p> <p>Comprehensive user manual for the Korg XE20 and XE20SP Digital Ensemble Pianos, covering setup, operations, styles, songs, settings, connections, and troubleshooting.</p>
<p>KRONOS Sound Libraries EXs Expansion Samples</p>  <p>Owner's Manual</p> 	<p>Korg KRONOS EXs165 Modern Grand Expansion Library Owner's Manual</p> <p>This owner's manual provides detailed instructions for installing, loading, and authorizing the Korg KRONOS EXs165 Modern Grand sound library. It covers system requirements, demo mode, installation procedures, loading sounds and programs, and purchasing authorization codes.</p>
<p>Service Manual</p> <p>SP-250</p> <p>CONTENTS 1. Circuit Diagrams Page 2-11 2. Disassembly Page 2-12 3. Test Mode Page 11-18 4. Parts List Page 18-19</p> <p>1st Edition Issued Date: March 30, 2006 Issued By: KORG INC.</p>	<p>KORG SP-250 Service Manual: Circuit Diagrams, Disassembly, Test Modes, and Parts List</p> <p>This service manual provides detailed technical information for the KORG SP-250 digital piano, including circuit diagrams, disassembly instructions, test modes, and a comprehensive parts list. Issued by KORG INC. on March 30, 2006.</p>
	<p>Korg B2/B2SP/B2N Digital Piano Owner's Manual</p> <p>Comprehensive owner's manual for Korg B2, B2SP, and B2N digital pianos, detailing setup, features, specifications, and troubleshooting.</p>