

Lincat GS4

Lincat GS4 Machine Steel Plate Griddle User Manual

Model: GS4

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Lincat GS4 Machine Steel Plate Griddle. Please read this manual thoroughly before installation and use, and retain it for future reference.

The Lincat GS4 is a robust electric griddle designed for commercial use, featuring a durable stainless steel construction and precise temperature control.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- Ensure the appliance is connected to a properly grounded electrical supply.
- Do not immerse the appliance or its electrical components in water.
- Keep hands and utensils away from hot surfaces during operation.
- Disconnect from power supply before cleaning or maintenance.
- This appliance is intended for commercial use by trained personnel only.

3. SETUP AND INSTALLATION

Unpack the griddle carefully and inspect for any shipping damage. Place the griddle on a stable, heat-resistant surface with adequate ventilation.

3.1 Unpacking

Remove all packaging materials, including any protective films or ties. Retain packaging for potential future transport.

3.2 Placement

Position the griddle on a level, non-combustible surface. Ensure there is sufficient clearance around the unit for air circulation and heat dissipation. Avoid placing near flammable materials.

3.3 Electrical Connection

The Lincat GS4 requires a 2700-watt electrical supply. Connect the appliance to a suitable power outlet in accordance with local electrical codes. If in doubt, consult a qualified electrician.



Figure 1: Front view of the Lincat GS4 Machine Steel Plate Griddle, showing the control knob and indicator lights.

4. OPERATING INSTRUCTIONS

4.1 Initial Use

Before first use, clean the griddle plate with a damp cloth to remove any manufacturing residues. Heat the griddle to a medium temperature for approximately 15 minutes to burn off any remaining factory oils. Ensure the area is well-ventilated during this process.

4.2 Temperature Control

The griddle is equipped with a thermostat for precise temperature control. Turn the control knob clockwise to increase the temperature. The indicator light will illuminate when the heating elements are active and turn off when the set temperature is reached.



Figure 2: Side view of the Lincat GS4 Griddle, illustrating its compact design suitable for various kitchen layouts.

4.3 Cooking

Preheat the griddle to the desired cooking temperature. Apply a thin layer of cooking oil to the griddle surface before placing food. After cooking, turn the temperature knob to the 'OFF' position and allow the griddle to cool down before cleaning.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Lincat GS4 griddle.

5.1 Daily Cleaning

1. Ensure the griddle is completely cool and disconnected from the power supply.
2. Scrape off any food residues from the griddle plate using a suitable griddle scraper.
3. Wipe the griddle plate and exterior surfaces with a damp cloth and mild detergent.
4. Rinse with a clean damp cloth and dry thoroughly. Do not use abrasive cleaners or steel wool.

5.2 Deep Cleaning

Periodically, a deeper clean may be required. Consult a professional cleaning service or refer to Lincat's official cleaning guidelines for commercial kitchen equipment.

5.3 Preventative Maintenance

Regularly check the power cord for damage. Ensure ventilation openings are clear of obstructions. For any internal maintenance or repairs, contact a qualified service technician.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Lincat GS4 griddle.

Problem	Possible Cause	Solution
Griddle not heating	No power supply; thermostat set too low; faulty element.	Check power connection and circuit breaker; adjust thermostat; contact service technician.
Uneven heating	Griddle not level; element issue.	Ensure griddle is on a level surface; contact service technician.
Excessive smoke during initial use	Burning off manufacturing oils.	Ensure adequate ventilation. This is normal for first use.

If the problem persists after attempting these solutions, please contact Lincat customer support or a qualified service technician.

7. SPECIFICATIONS

Feature	Detail
Model	GS4
Manufacturer	Lincat
Material	Stainless Steel
Colour	Silver

Feature	Detail
Wattage	2700 watts
Item Weight	30 kg
Product Dimensions (L x W x H)	61.11 x 45.01 x 32.99 cm
Special Feature	Thermostat
First Available	10 Sept. 2010

 
8. WARRANTY INFORMATION

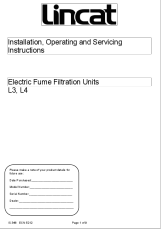
The Lincat GS4 Machine Steel Plate Griddle comes with a**Limited Warranty**. For specific terms and conditions, please refer to the warranty card included with your product or visit the official Lincat website. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For technical assistance, spare parts, or service inquiries, please contact Lincat customer support. You can find contact details on the official Lincat website or through your authorized dealer. Visit the [Lincat Store on Amazon](#) for more information on Lincat products.

Related Documents - GS4

	Lincat CiBO+ Oven: Installation & Operating Instructions Comprehensive installation and operating instructions for the Lincat CiBO+ UL models high-speed oven. Includes safety guidelines, technical data, and operational procedures.
---	--

	Lincat SmartVent Extraction Canopies: User and Installation Instructions User and installation guide for Lincat SmartVent extraction canopies (SV1212, SV1216, SV1220, SV1224). Covers technical specifications, installation procedures, operation, cleaning, component replacement, and warranty information.
	Lincat EB3FX/HC/PB Water Boiler and Chiller Installation, Operating, and Servicing Instructions Comprehensive guide for the Lincat EB3FX/HC/PB water boiler and chiller, covering installation, operation, maintenance, troubleshooting, and safety precautions. Includes technical data and spare parts list.
	Lincat L3, L4 Electric Fume Filtration Units: Installation, Operating, and Servicing Instructions Comprehensive guide for Lincat L3 and L4 Electric Fume Filtration Units, covering installation, operation, maintenance, troubleshooting, and spare parts. Includes safety warnings and technical specifications.
	Lincat SmartVent Extraction Canopies: User and Installation Manual Comprehensive user and installation guide for Lincat SmartVent extraction canopies, covering models SV1212, SV1216, SV1220, and SV1224. Includes technical data, safety warnings, installation procedures, electrical connections, commissioning, cleaning, component replacement, and warranty information for commercial kitchen ventilation systems.
	Lincat CiBO+ Quick Start Guide A quick start guide for the Lincat CiBO+ accelerated cooking oven, covering its Tri-Heat technology, operation, recipe management, and cleaning.