

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Baldwin](#) /
- › [Baldwin 8285.AC1 Soho Keyless Entry Electronic Deadbolt User Manual](#)

Baldwin 8285260AC1

Baldwin 8285.AC1 Soho Keyless Entry Electronic Deadbolt User Manual

PRODUCT OVERVIEW

The Baldwin 8285.AC1 Soho Keyless Entry Single Cylinder Electronic Deadbolt provides enhanced security and convenient keyless access for residential and commercial doors. This electronic deadbolt features a motorized locking mechanism and a keypad for code entry, offering a modern security solution.

It is designed with a 1-inch (25mm) throw deadbolt, incorporating a saw-proof, hardened steel insert to resist tampering. The front is adjustable to accommodate beveled door conditions, and the backset is adjustable for both 2.375-inch and 2.75-inch backsets.

KEY FEATURES

- **One-Touch Locking:** Motorized deadbolt for quick and easy locking.
- **Keyless Entry:** Keypad access for convenient entry without a physical key.
- **Standard Door Prep:** Designed to fit standard tubular door preparations.
- **Adjustable Backset:** Accommodates 2.375-inch or 2.75-inch backsets.
- **Enhanced Security:** Features a 1-inch (25mm) throw with a saw-proof, hardened steel insert.
- **Durable Construction:** Made from Alloy Steel and Chrome for lasting performance.
- **LED Indicator:** Provides visual feedback for lock status.

INSTALLATION GUIDE

Installation of the Baldwin Soho Electronic Deadbolt is designed to be straightforward, typically requiring only a screwdriver. Ensure your door has a standard tubular door preparation before beginning.

Required Tools

- Phillips Head Screwdriver
- Measuring Tape

Pre-Installation Checks

- Verify door thickness and backset measurement (2.375" or 2.75").
- Ensure the door frame strike plate is properly aligned.

Step-by-Step Installation Overview

1. **Prepare the Door:** Ensure the door is prepped for a standard deadbolt. Adjust the backset on the deadbolt mechanism if necessary.
2. **Install Deadbolt Latch:** Insert the deadbolt latch into the door edge. Ensure the "UP" arrow is facing upwards.
3. **Install Exterior Keypad Assembly:** Route the cable from the exterior assembly through the door hole and align the posts with the deadbolt latch.
4. **Install Interior Assembly:** Connect the cable from the exterior assembly to the interior assembly. Secure the interior assembly to the door using the provided screws.
5. **Install Batteries:** The unit requires 4 AA batteries (not included). Insert them into the battery compartment of the interior assembly.
6. **Test Operation:** After installation, test the deadbolt's functionality using the keypad and the interior thumb turn.



Image: Exterior view of the Baldwin Soho Keyless Electronic Deadbolt installed on a door, showing the keypad and keyhole.

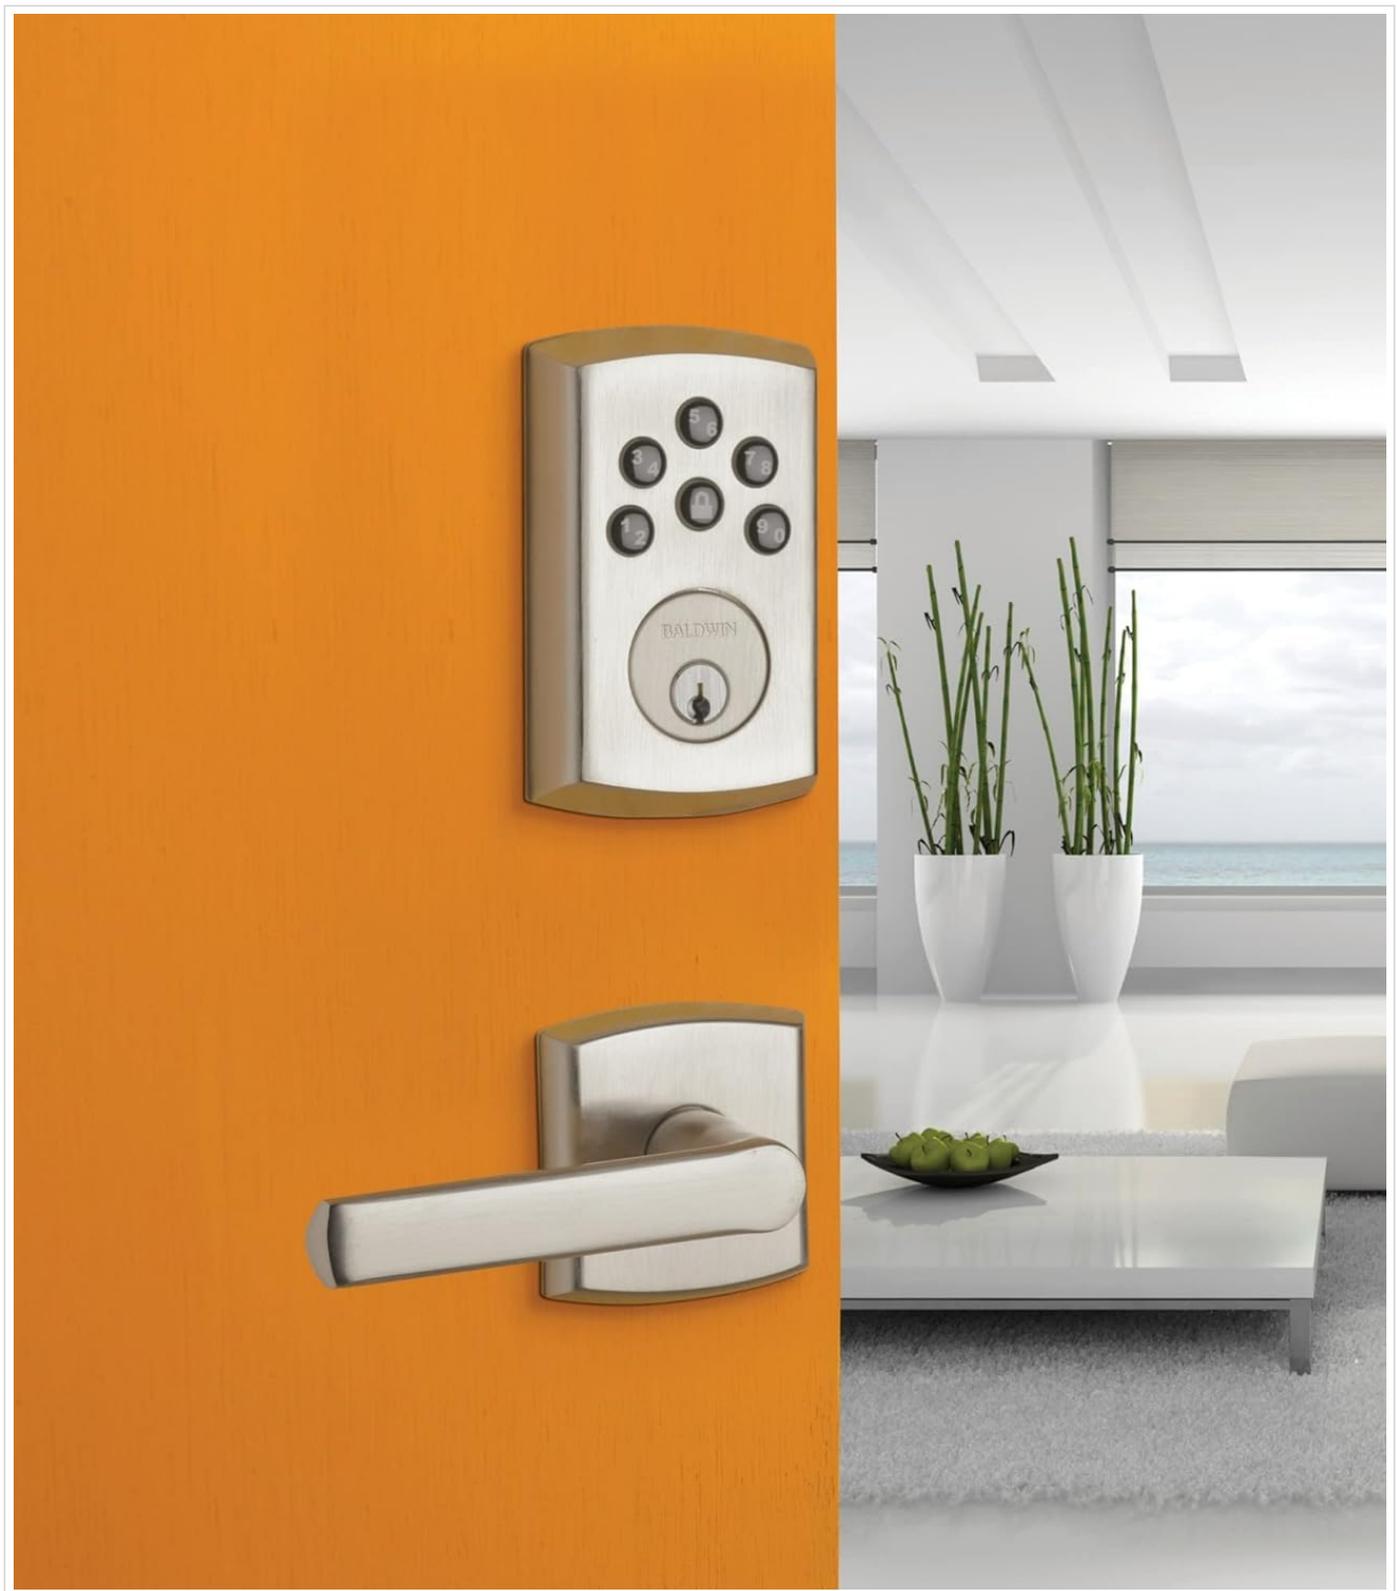


Image: Interior view of the Baldwin Soho Keyless Electronic Deadbolt installed on a door, showing the thumb turn and battery cover.

OPERATING INSTRUCTIONS

The Baldwin Soho Electronic Deadbolt offers convenient keyless operation. Familiarize yourself with the keypad and locking mechanisms for optimal use.

Locking the Door

- **One-Touch Locking:** Press the "Lock" button (often represented by a padlock icon) on the exterior keypad. The deadbolt will extend automatically.

- **Manual Locking:** From the interior, rotate the thumb turn to extend the deadbolt.

Unlocking the Door

- **Using a Code:** Enter your programmed user code on the exterior keypad, then press the "Lock" button. The deadbolt will retract.
- **Manual Unlocking:** From the interior, rotate the thumb turn to retract the deadbolt.
- **Key Override:** In case of battery failure or forgotten code, use the physical key provided to unlock the deadbolt.

Programming User Codes

Refer to the detailed programming instructions included with your product packaging for specific steps. Please note that this model typically supports a limited number of user codes, often two, which may be a consideration for multiple users.



	5 6	
3 4		7 8
1 2	Lock Icon	9 0

BALDWIN

Image: Close-up view of the exterior keypad, showing the numbered buttons and the Baldwin logo.

MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your electronic deadbolt.

Battery Replacement

- The deadbolt requires 4 AA batteries.
- Replace batteries promptly when a "battery low warning" is indicated by the LED or audible alerts.
- To replace, remove the interior cover, access the battery compartment, and insert new batteries, ensuring correct polarity.

Cleaning

- Clean the exterior and interior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners or solvents, as these can damage the finish.

TROUBLESHOOTING

If you encounter issues with your Baldwin Soho Electronic Deadbolt, refer to the following common troubleshooting steps.

Deadbolt Not Responding or Randomly Locking/Unlocking

- **Check Batteries:** Ensure batteries are fresh and correctly installed. Low batteries can cause erratic behavior.
- **Re-calibrate:** Some electronic deadbolts require a re-calibration process after battery replacement or if the door alignment changes. Consult the full manual for specific steps.
- **Door Alignment:** Verify that the door and frame are properly aligned and that the deadbolt can extend and retract freely without obstruction.

Keypad Not Accepting Codes

- **Verify Code:** Double-check that the correct user code is being entered.
- **Battery Level:** Insufficient battery power can affect keypad responsiveness.
- **Reset:** A factory reset may resolve programming issues. This will erase all user codes, requiring them to be reprogrammed. Refer to the complete manual for reset procedures.

LED Indicator Not Functioning

- **Battery Check:** Ensure batteries are not depleted.
- **Wiring:** If recently installed, check internal wiring connections for proper seating.

SPECIFICATIONS

Brand	Baldwin
Model Number	8285260AC1
Lock Type	Electronic Deadbolt
Material	Alloy Steel, Chrome

Color	Polished Chrome
Dimensions (L x W x H)	6 x 10 x 4 inches
Item Weight	1.5 pounds
Backset	Adjustable 2.375 inches or 2.75 inches
Deadbolt Throw	1 inch (25mm)
Power Source	4 AA Batteries (not included)
Special Features	LED Indicator, Hardened Steel Insert
Control Method	Touch (Keypad), Hand Control (Thumb Turn)
UPC	884011289568

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your product or visit the official Baldwin website. Baldwin products are known for their quality, and their technical support team is available to assist with any product-related inquiries or issues.

If you require assistance with installation, programming, or troubleshooting beyond the scope of this manual, it is recommended to contact Baldwin customer support directly or consult a qualified locksmith.

Baldwin Customer Support: [Visit Baldwin Hardware Support Page](#)