

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [celexon](#) /

> [celexon 50 inch Tabletop Mobile Projector Screen User Manual](#)

celexon 1090377

celexon 50" Tabletop Mobile Professional Portable Projector Screen User Manual

Model: 1090377

[Contents](#) [Setup](#) [Operating](#) [Safety Instructions](#) [Package](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the projector screen. Retain this manual for future reference.

- Do not expose the screen to direct sunlight for extended periods, as this may cause damage to the screen material.
- Keep the screen away from heat sources, open flames, and excessive moisture.
- Avoid contact with sharp objects to prevent punctures or tears in the screen surface.
- Handle the screen with care during setup and transport to prevent accidental damage.
- Ensure the screen is placed on a stable, flat surface to prevent tipping.
- Do not attempt to disassemble or modify the screen mechanism. Refer to qualified personnel for repairs.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking.

- celexon 50" Tabletop Projector Screen Unit
- User Manual

3. SETUP INSTRUCTIONS

Follow these steps to set up your celexon tabletop projector screen:

1. **Place the Unit:** Position the compact screen casing on a stable, flat surface such as a table or desk. Ensure there is enough clear space for the screen to extend.
2. **Extend the Feet:** Locate the retractable feet at the bottom of the screen casing. Gently pull them out to provide a stable base for the screen.
3. **Open the Latch:** Find the latch mechanism on the top of the casing. Release it to allow the screen to be pulled upwards.
4. **Raise the Screen:** Carefully pull the screen upwards from the casing. The screen will automatically lock into position at the desired height. The internal scissor mechanism (visible from the back) provides support.
5. **Adjust Viewing Angle (Optional):** Ensure the screen is perpendicular to the projector for optimal image quality.

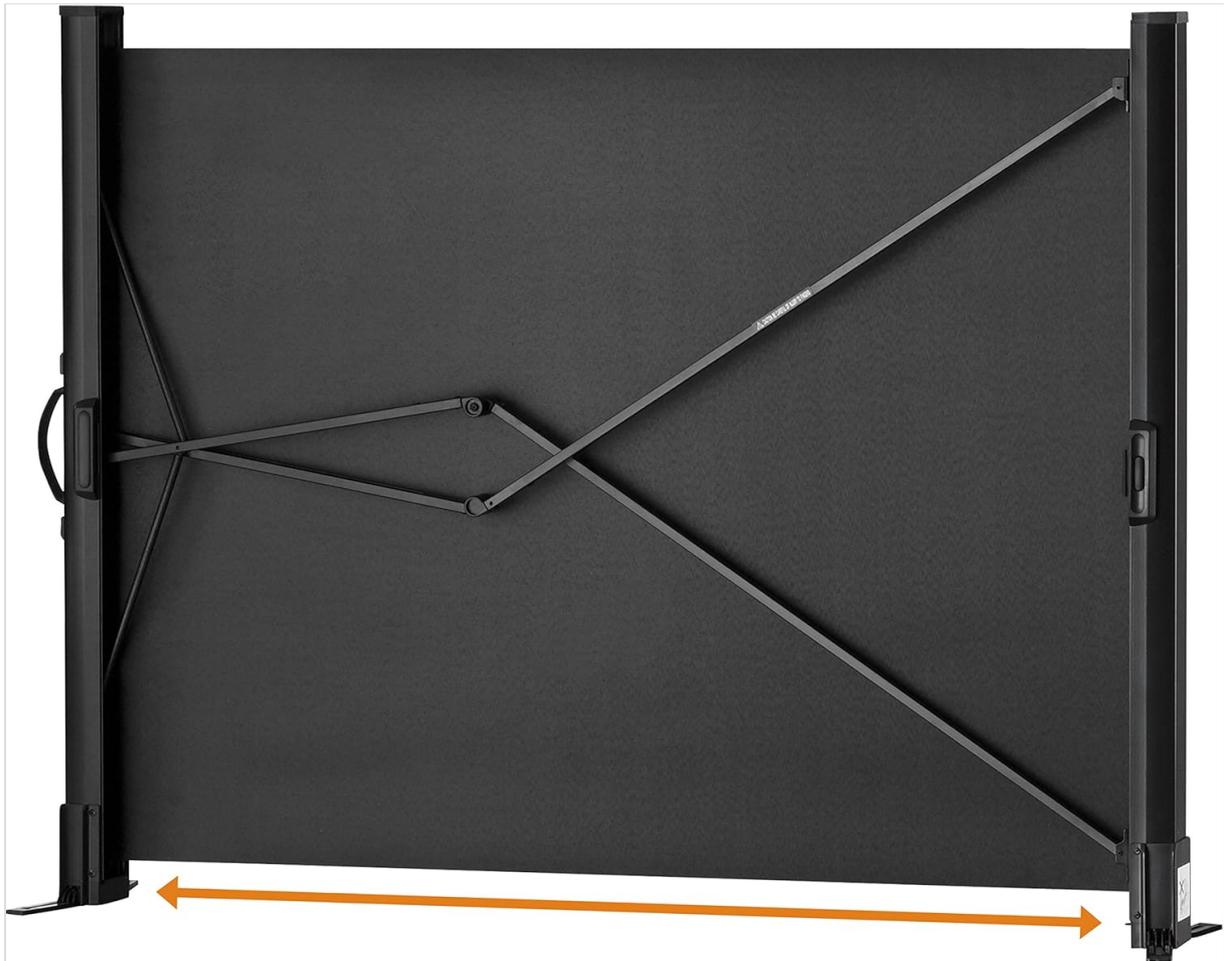


Image: Rear view of the screen showing the extended support mechanism. This mechanism ensures stability when the screen is fully deployed.

4:3

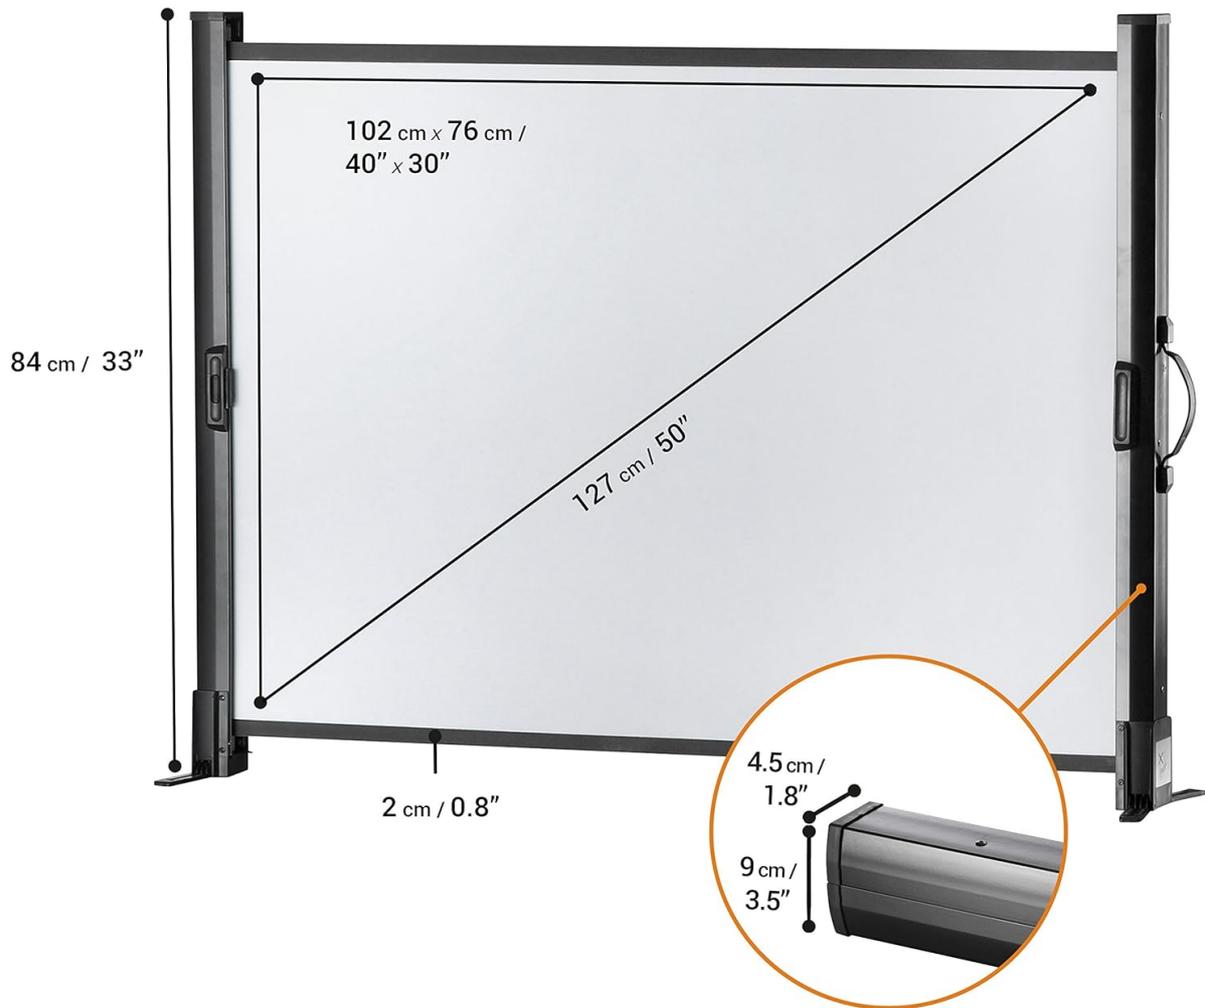


Image: Dimensional diagram of the screen, indicating a 40x30 inch viewing area and a 50-inch diagonal. The overall height is 33 inches.

4. OPERATING THE PROJECTOR SCREEN

Once set up, the screen is ready for use with your projector.

- **Projection:** Position your projector to cast the image onto the screen. Adjust the projector's focus and keystone correction for a clear, rectangular image.
- **Viewing Angle:** The screen is designed for front projection. Optimal viewing is achieved when seated directly in front of the screen.
- **Retracting the Screen:** To retract, gently press the release button (if present) or slightly pull the screen further up to disengage the locking mechanism, then slowly guide it back into the casing. Ensure it retracts smoothly to prevent damage.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your projector screen.

- **Cleaning the Screen Surface:** Use a soft, damp cloth with mild soap and water to gently wipe the screen surface. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the screen material. Allow the screen to air dry completely before retracting.

- **Cleaning the Casing:** Wipe the aluminum casing with a dry or slightly damp cloth.
- **Storage:** When not in use, retract the screen fully into its casing. Store the screen in a dry, cool place, away from direct sunlight and extreme temperatures.
- **Transport:** Utilize the integrated handle for easy and secure transport.



Image: Icons illustrating key features of the screen material, including easy cleaning, mold resistance, water resistance, light resistance, and fire resistance.

3,5 kg /
7.7 lbs



Image: The compact casing of the projector screen, highlighting the integrated carrying handle and the secure latch mechanism for transport.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Screen does not extend or retract smoothly.	Mechanism obstruction or improper handling.	Ensure no objects are blocking the mechanism. Gently pull or push the screen. Do not force it. If the issue persists, contact support.
Image appears distorted or blurry.	Projector settings or screen positioning.	Adjust your projector's focus, keystone correction, and zoom settings. Ensure the projector is aligned squarely with the screen.
Screen surface has minor wrinkles or creases.	Improper storage or manufacturing variation.	Minor creases often smooth out with use. Ensure proper storage. Avoid folding or creasing the screen material.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	1090377
Screen Diagonal	50 inches (127 cm)
Viewing Area (W x H)	40 x 30 inches (102 x 76 cm)
Aspect Ratio	4:3
Screen Material	Matte white with black border and black back
Casing Material	Aluminum
Item Weight	6.61 pounds (3.5 kg)
Product Dimensions (folded)	33.07 x 1.77 x 3.54 inches (84 x 4.5 x 9 cm)
Mounting Type	Table Mount

8. WARRANTY AND SUPPORT

This celexon projector screen is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact celexon customer support.

For technical assistance, troubleshooting, or warranty claims, please visit the official celexon website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.